


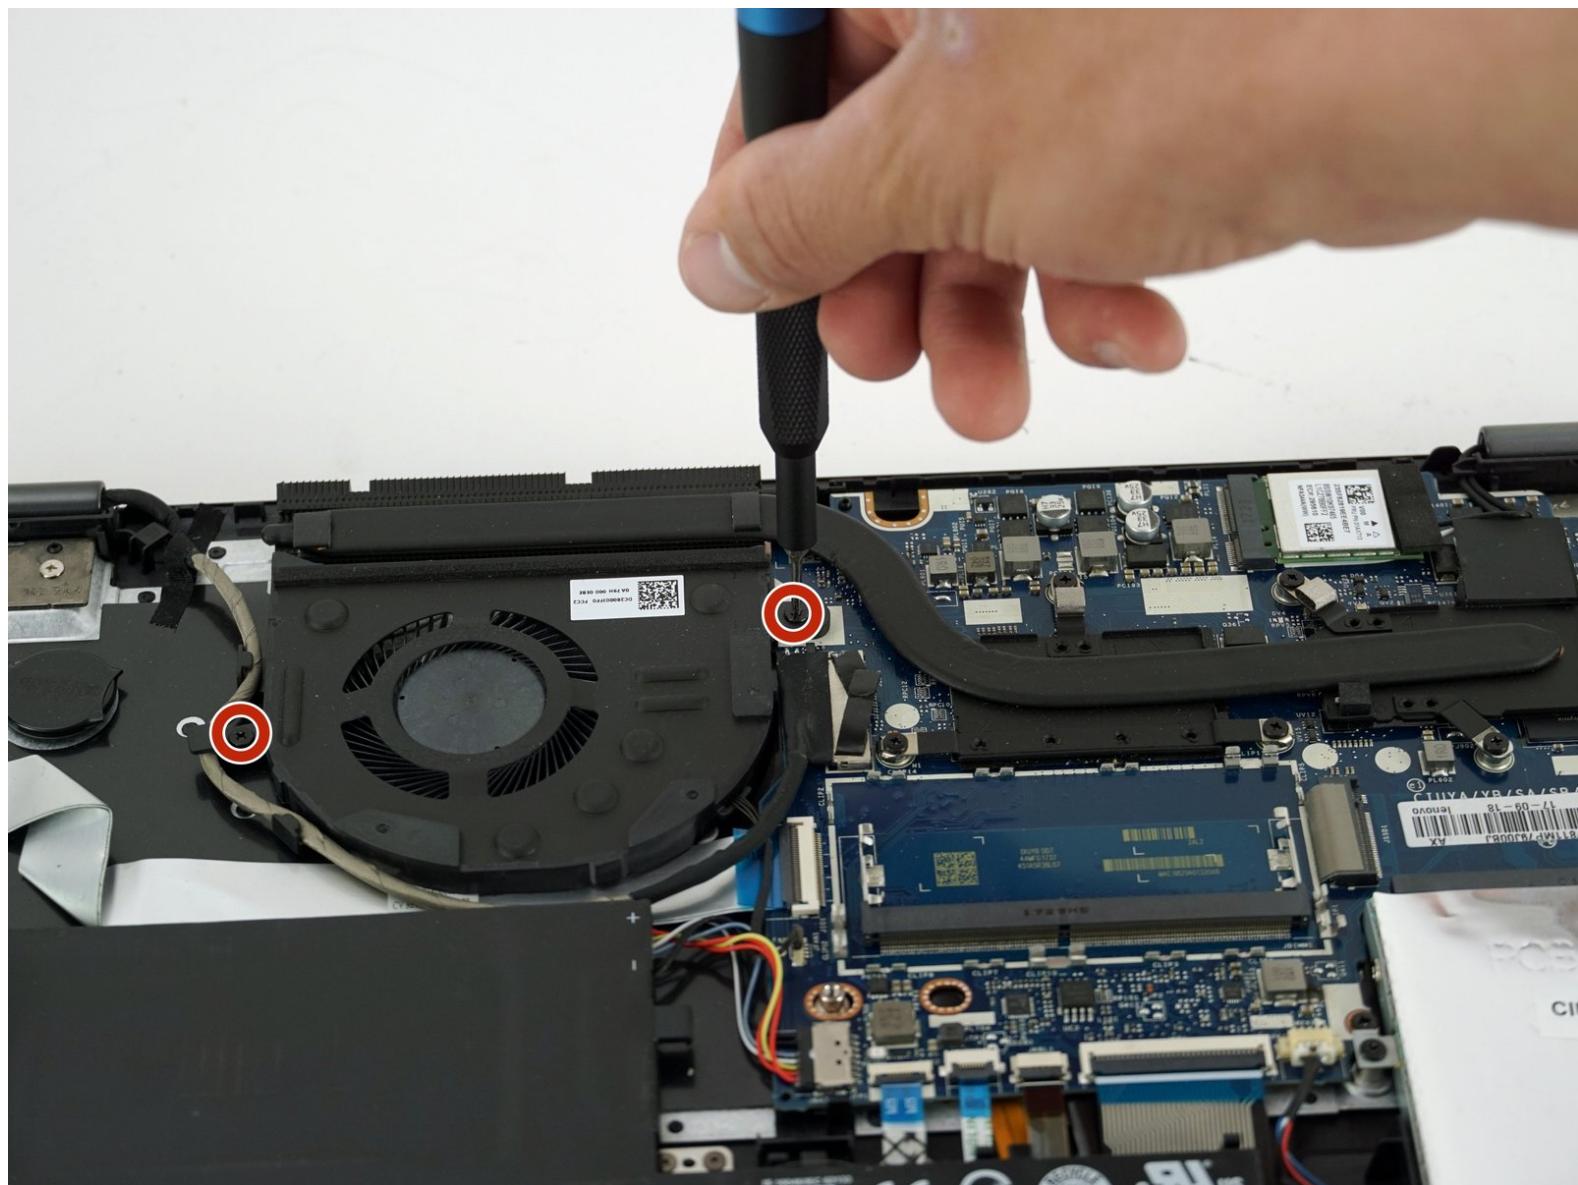

Lenovo IdeaPad Flex 5-1570 Fan Replacement

This guide will show you how to remove and replace the fan in a Lenovo IdeaPad Flex 5-1570.

Written By: Will Schafer



INTRODUCTION

A faulty fan in the Lenovo IdeaPad Flex 5-1570 is a problem on its own but can also cause more serious problems for the device. Whether your fan is making noise, permanently damaged, or just simply won't work, this guide will show you how to easily remove and replace it.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Lenovo Flex 5-1570 Fan](#) (1)

Step 1 — Back Panel




- Remove the ten 5 mm Phillips #00 screws that are holding the back panel on.

Step 2




- Gently use the plastic opening tool around the edges of the laptop to pry up the back panel.

Step 3 — Fan

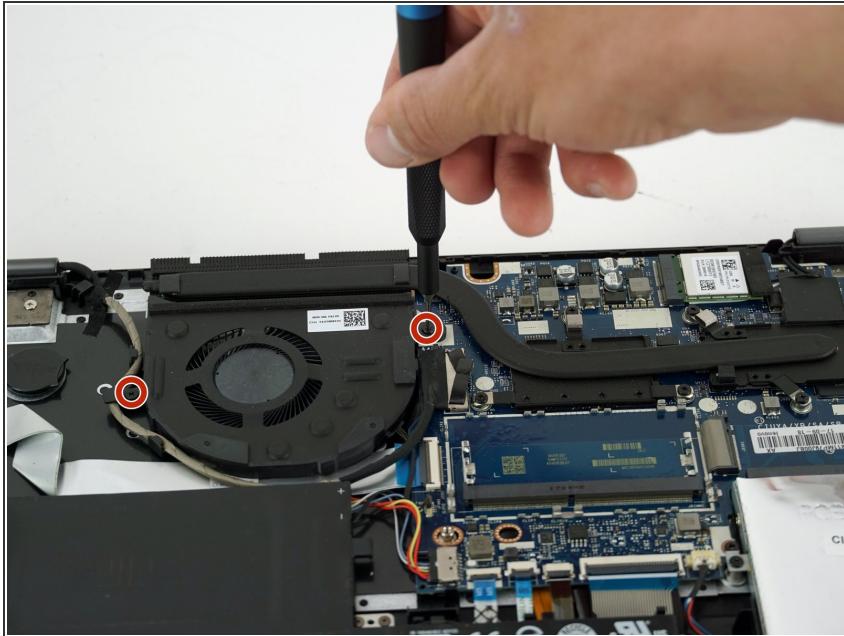



- Remove the two 5 mm Phillips #00 screws that secure the fan in place.

Step 4

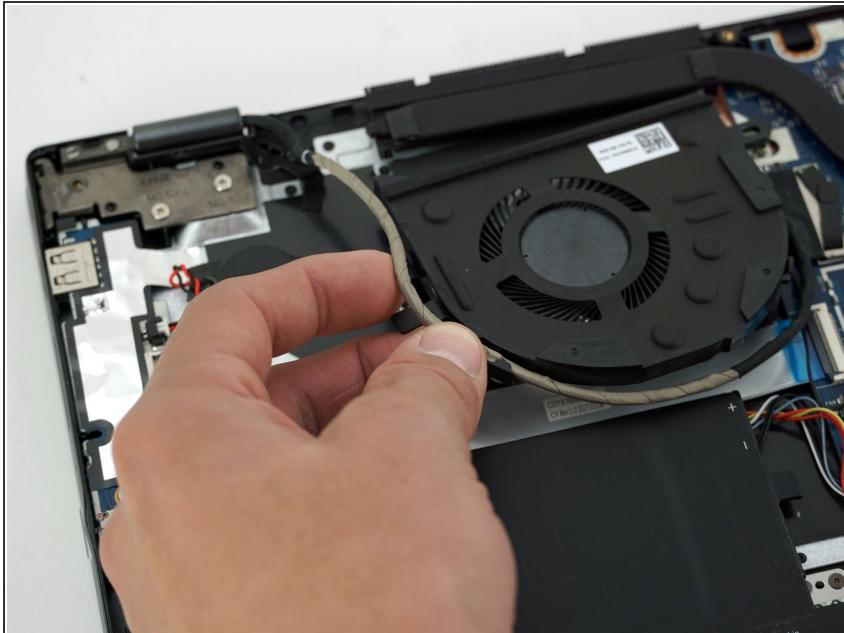

- Using your hands, remove the wire that is wrapped around the base of the fan.

Step 5

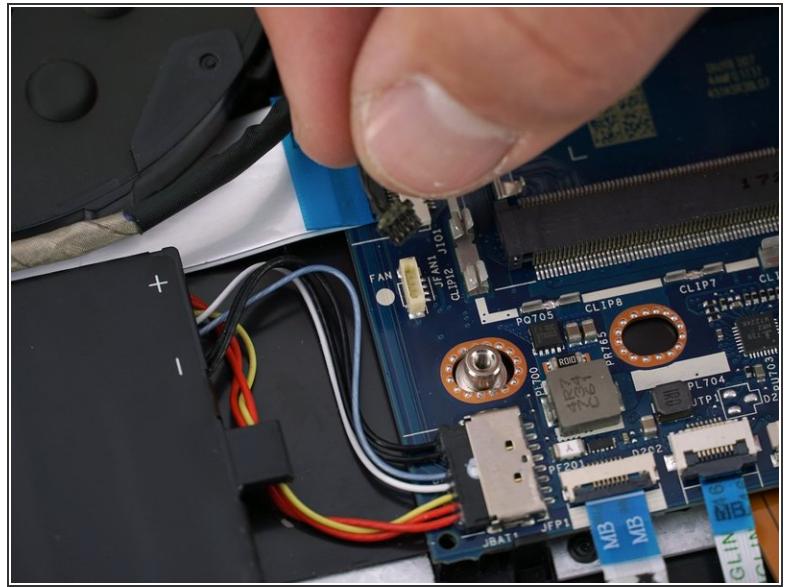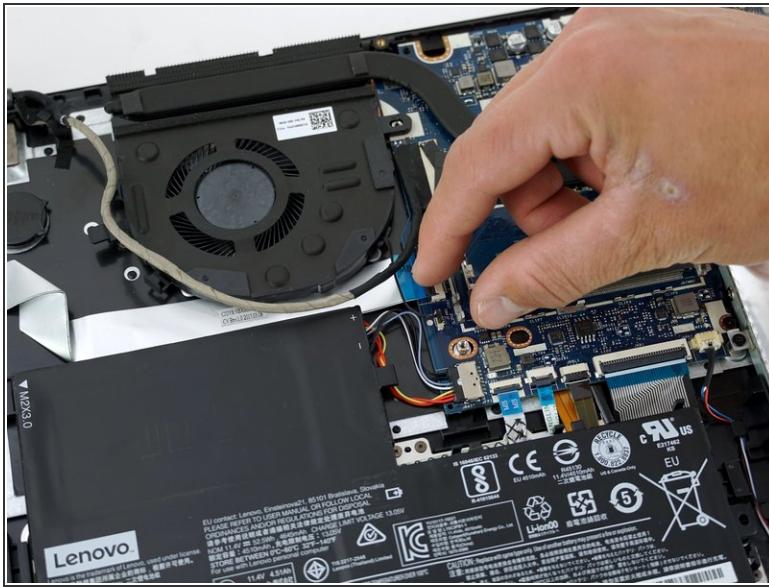

- Disconnect the wire holding the fan and the motherboard together.

To reassemble your device, follow these instructions in reverse order.