



Lenovo IdeaPad G50-45 Battery Replacement

Replace the battery in a Lenovo IdeaPad G50

Written By: Robert Muir



INTRODUCTION

After reading this guide you should be able to replace the battery in a Lenovo IdeaPad G50-45. Make sure to read the troubleshooting page for this device before hand so you know that this is the correct repair guide for your problem.



PARTS:

- [Lenovo G50-45 Battery](#) (1)

Step 1 — Battery



- Safely place the Device upside down and have the battery component facing yourself.

Step 2



- Locate the two switches above the battery.

Step 3



- If it is not already, push the right switch to the right so that it shows a red strip. Then hold the left clip to the left and pull out the battery.

To reassemble your device, follow these instructions in reverse order, and make sure to hold the left switch to the left when inserting the new battery.