



Lenovo IdeaPad N586 Battery Replacement

Lenovo IdeaPad N586 battery replacement,

Written By: Christopher



INTRODUCTION


Changing the battery can be as easy as sliding to the right.

Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

Step 2

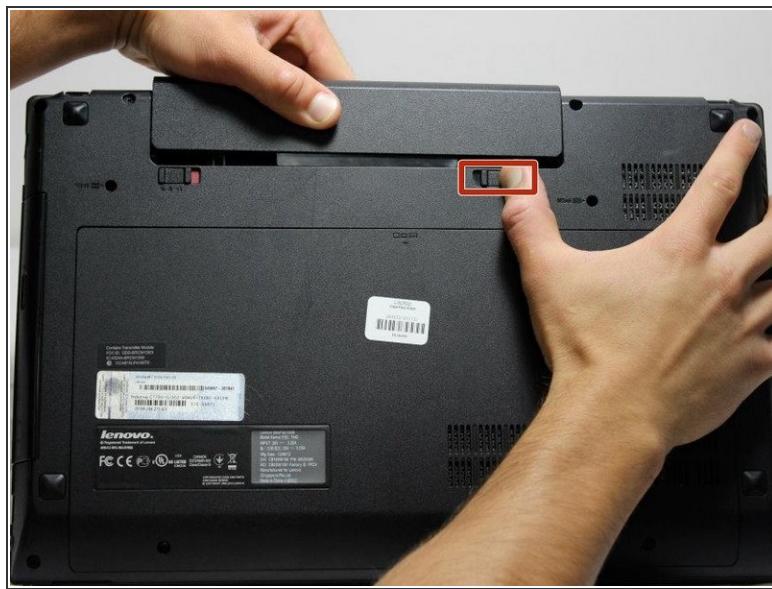

- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

To reassemble your device, follow these instructions in reverse order.