


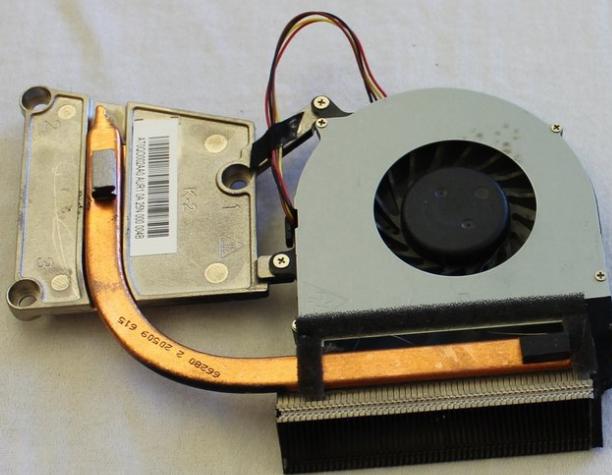

# Lenovo IdeaPad N586 Fan Replacement

Here we show to access the laptop's fan.

Written By: Patrick



 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery




- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

## Step 2

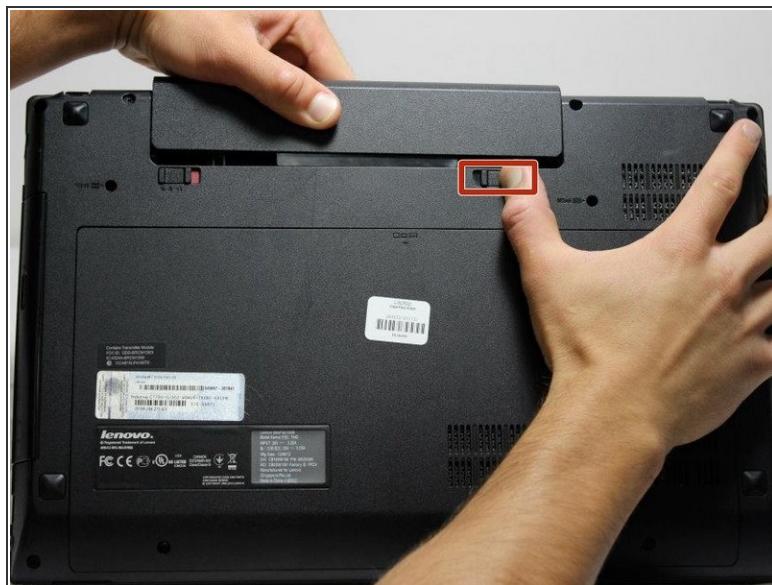



- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

## Step 3 — Hard Drive

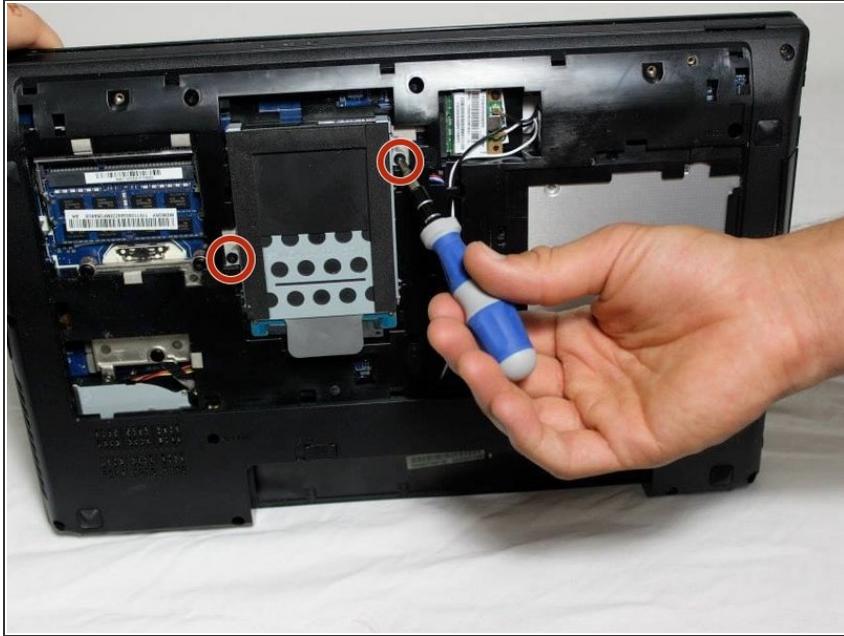



- Now remove the last two screws highlighted

## Step 4

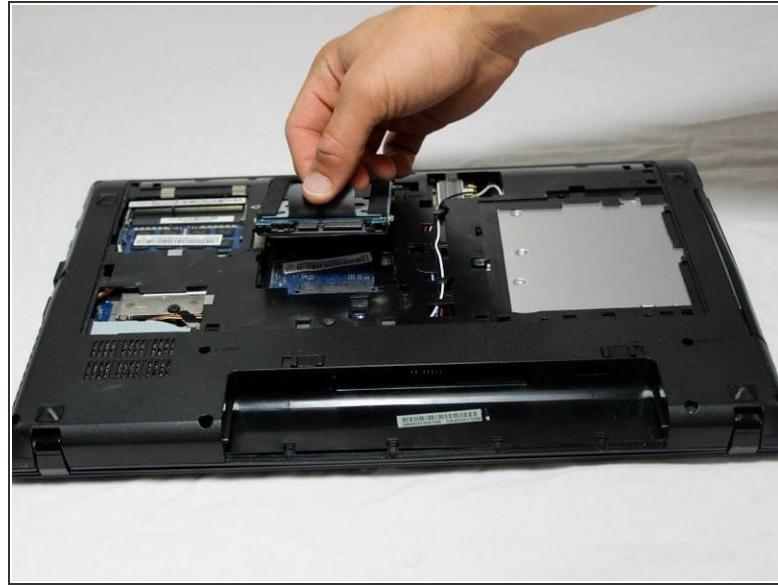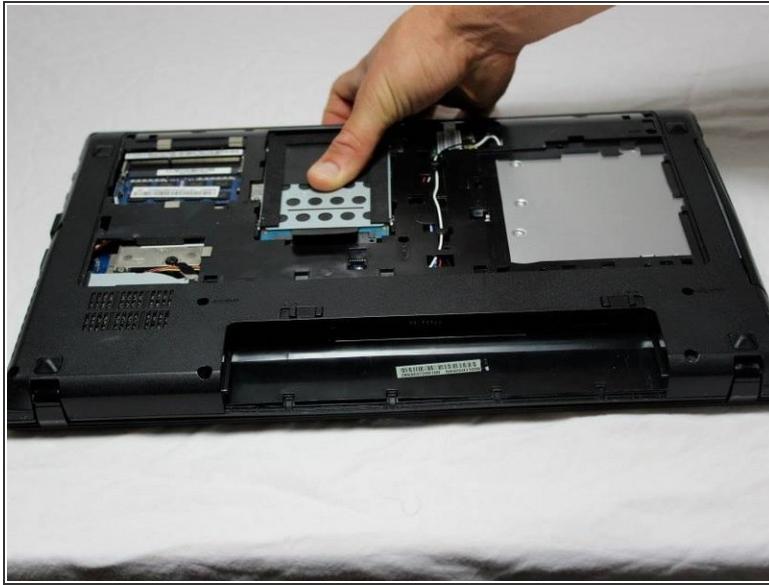


- Push hard drive away from the center of the chassis.
- Lift the hard drive out of the chassis using the tab located on the drive.

## Step 5 — Memory

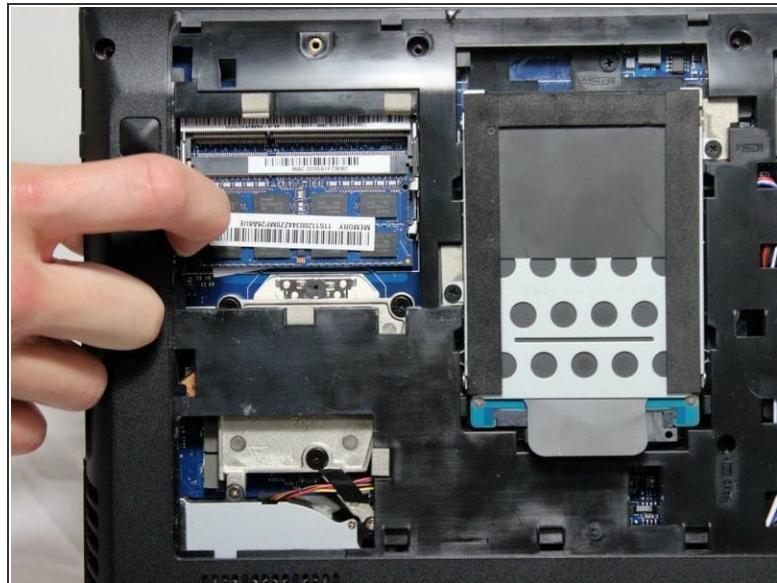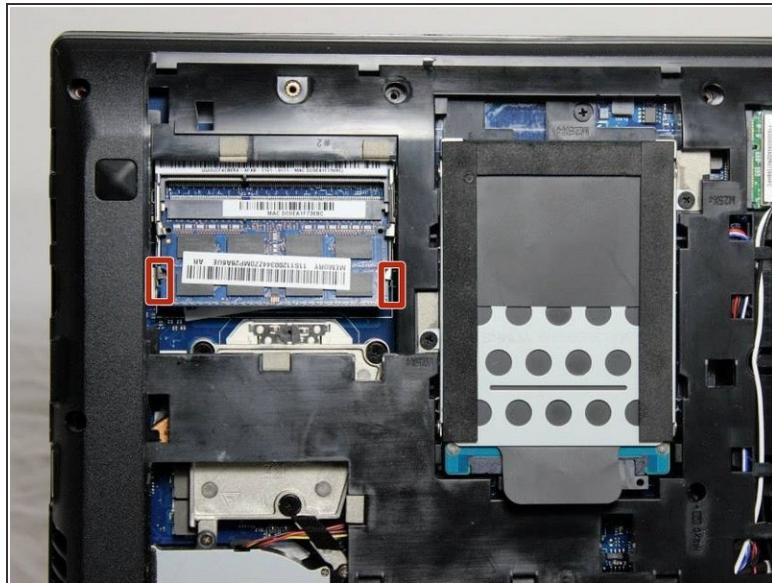

- Now push the little clips out away from the memory to unlock the memory.

## Step 6

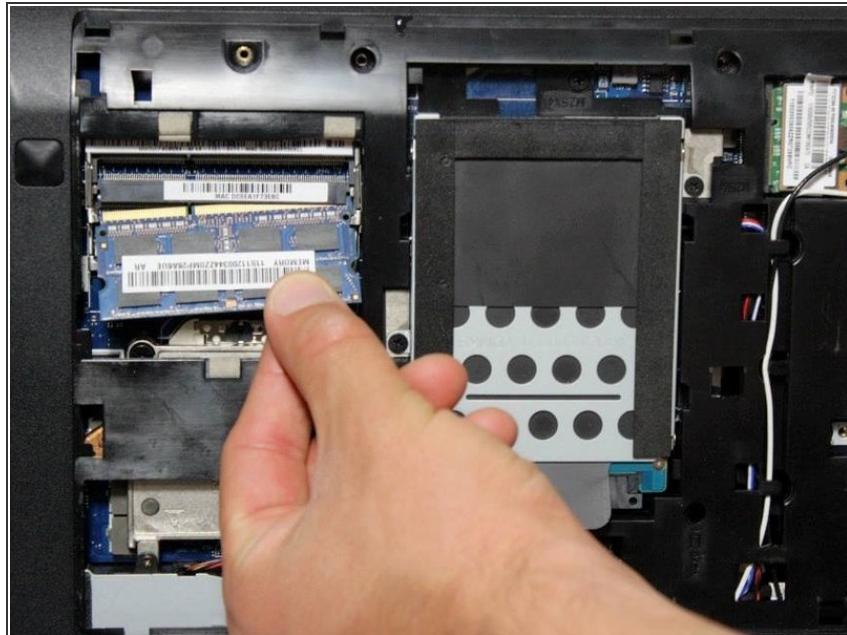

- After unlocking the memory from its position, pull the memory out.

## Step 7 — Keyboard




- Remove three screws on bottom of case. They have a little keyboard image next to them. If you don't do this first, the keyboard will not come off. Place the plastic spudger right under the edge of the keyboard and lift up the keyboard.

## Step 8



- Slowly and gently lift the keyboard up to separate from the chassis.

## Step 9

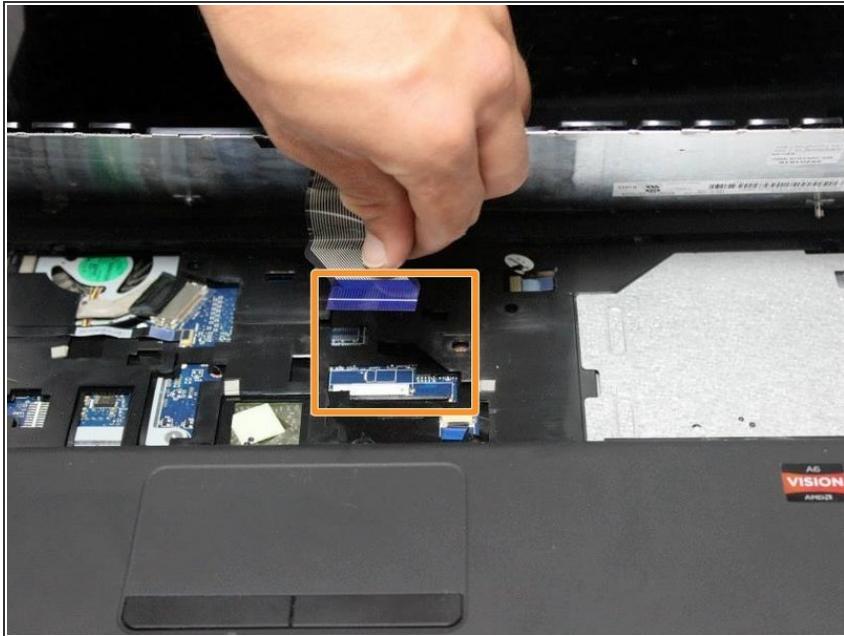



- Gently lift the keyboard off the chassis.
- Carefully disconnect the keyboard from the laptop by unhooking the keyboard ribbon.

## Step 10




- Now remove the keyboard from the computer.

## Step 11 — Fan

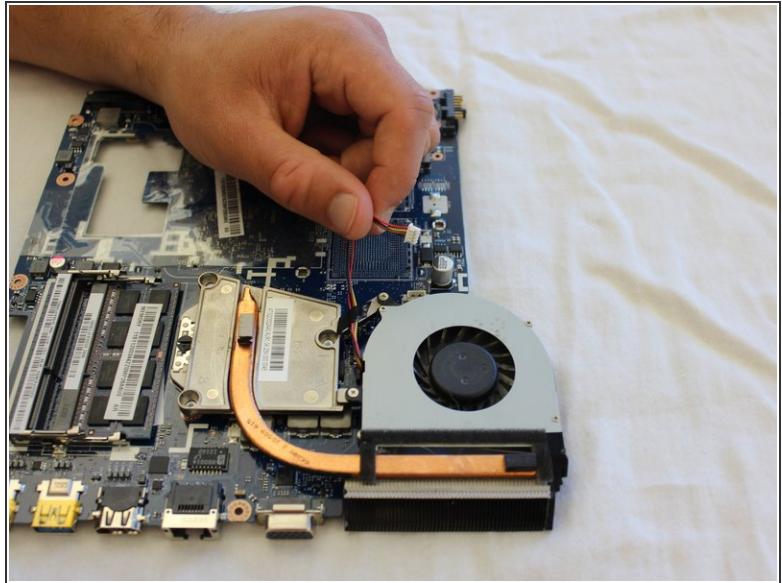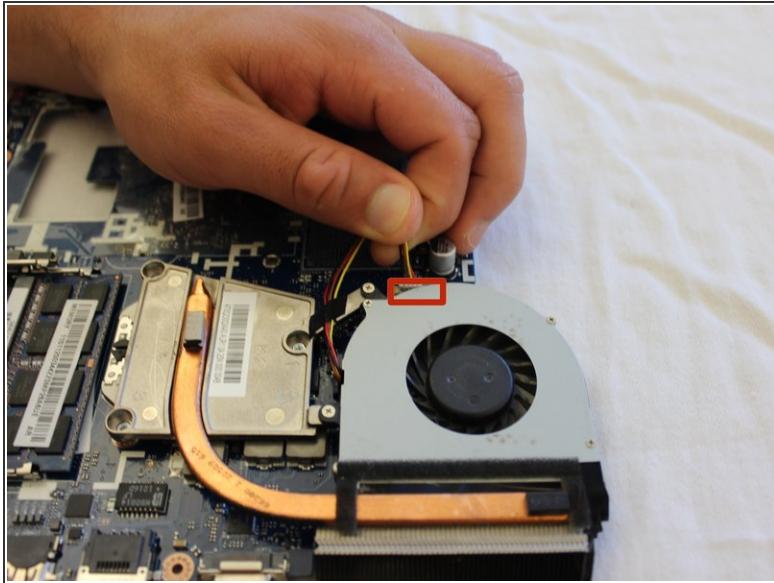

- Pull the plug shown.

## Step 12

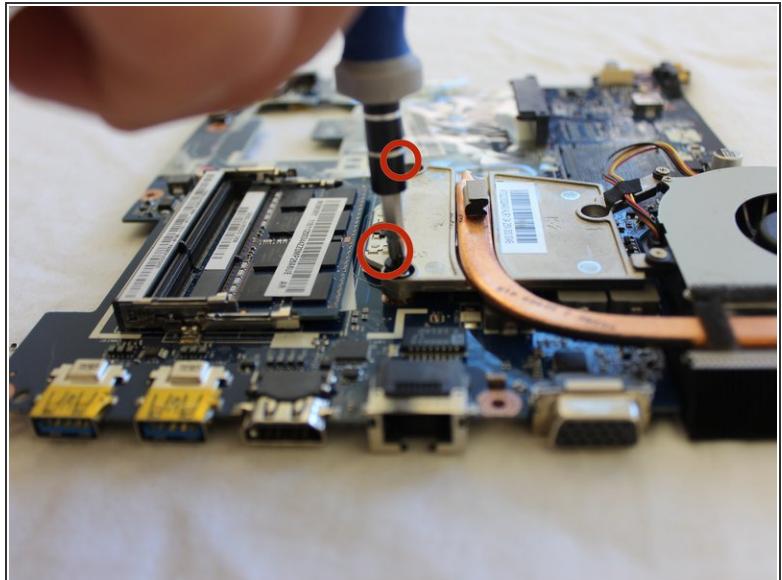

- Lift up fan.
- Remove two highlighted screws.

## Step 13



- This is the fan separated from the motherboard.

To reassemble your device, follow these instructions in reverse order.