




Lenovo IdeaPad N586 Hard Drive Replacement

Lenovo IdeaPad N586 hard drive replacement

Written By: Christopher

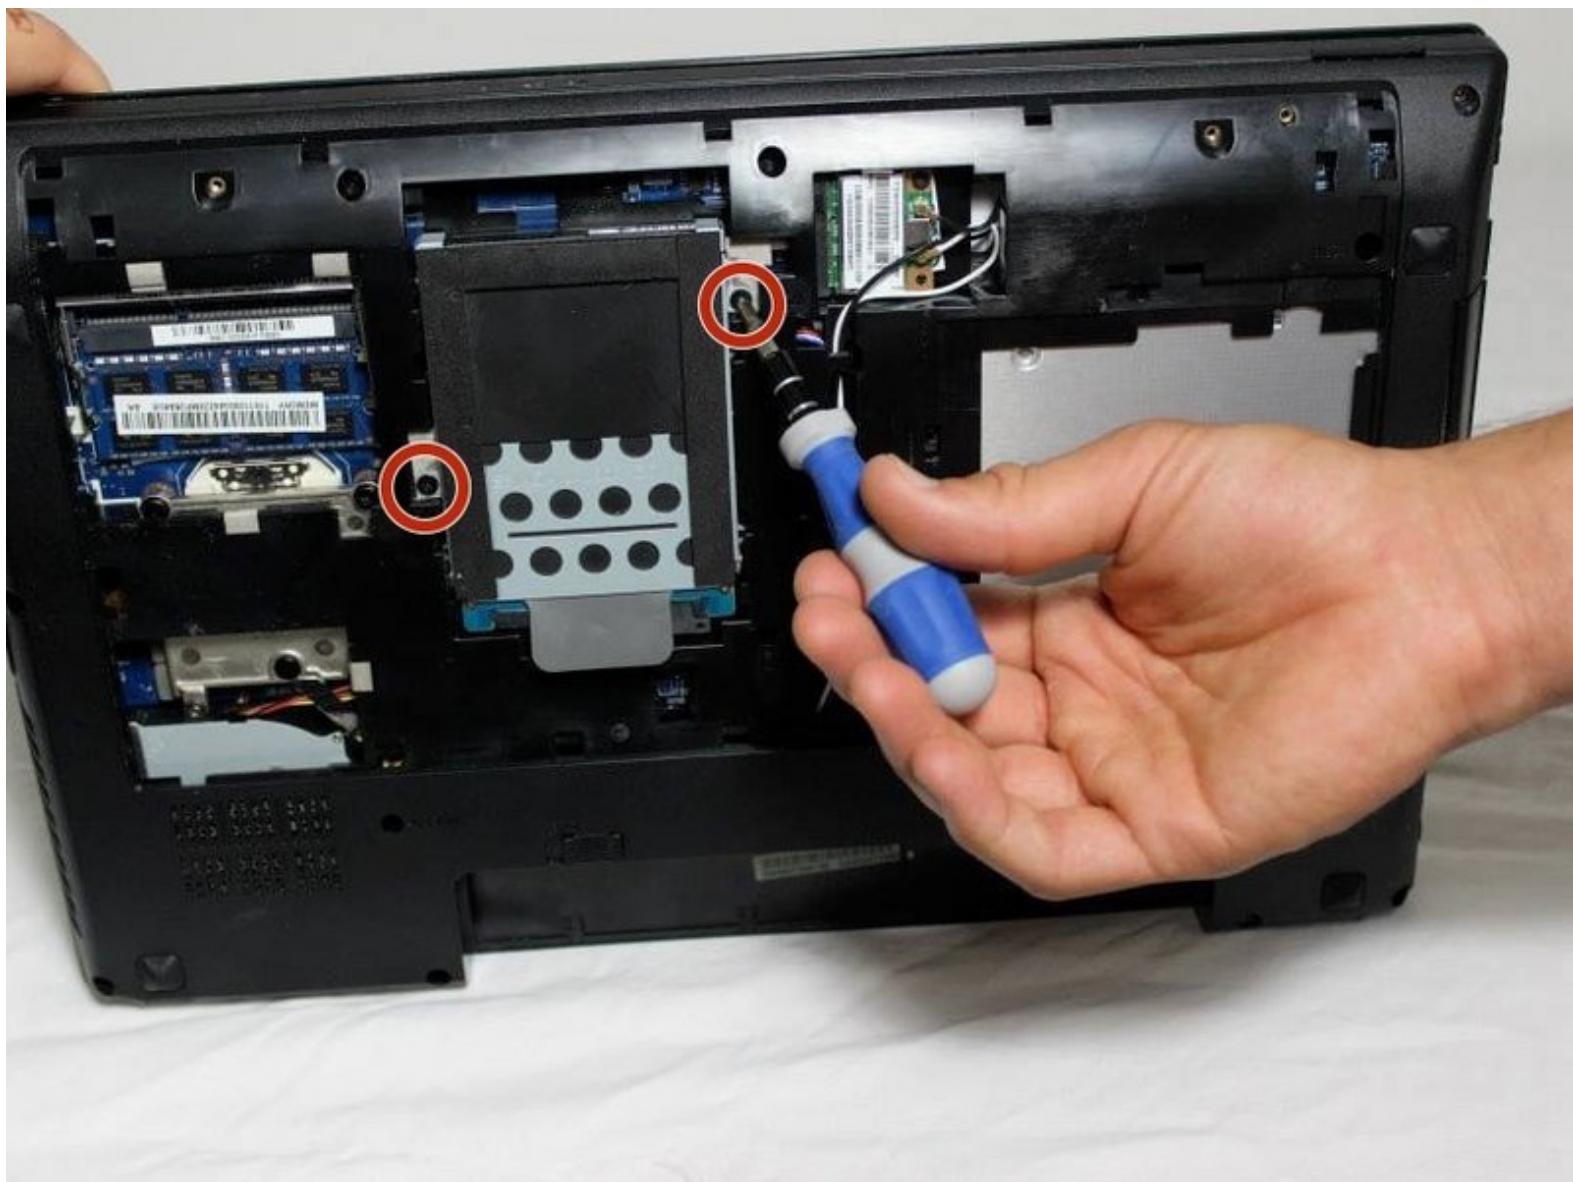

INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

Step 2




- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

Step 3 — Back Panel




- Remove the two screws highlighted.

Step 4

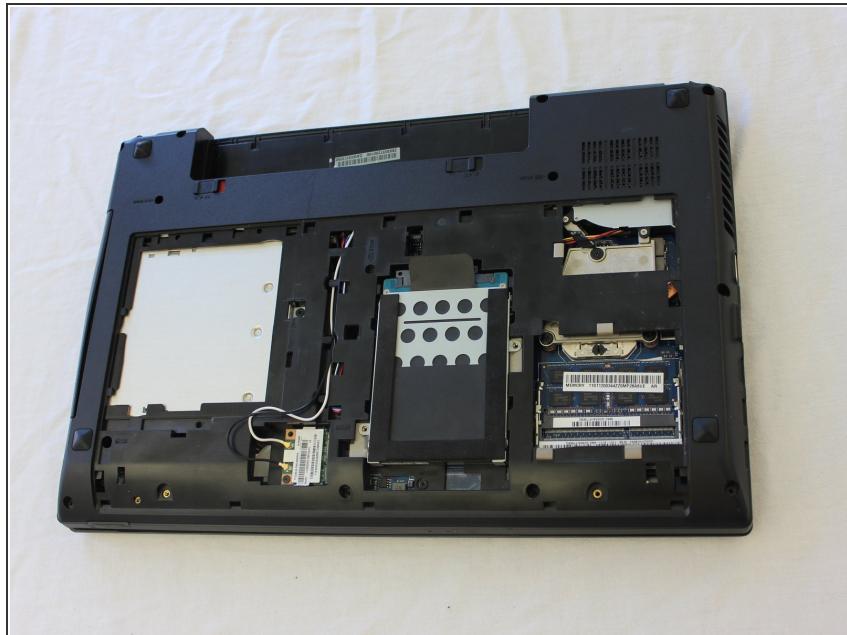



- This is the back of the laptop with the cover removed.

Step 5 — Hard Drive

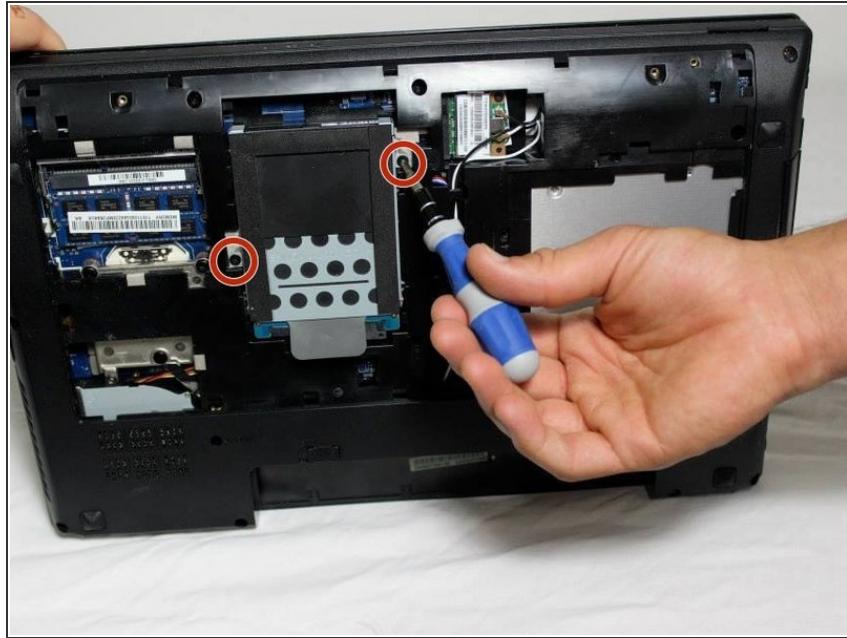

- Now remove the last two screws highlighted

Step 6

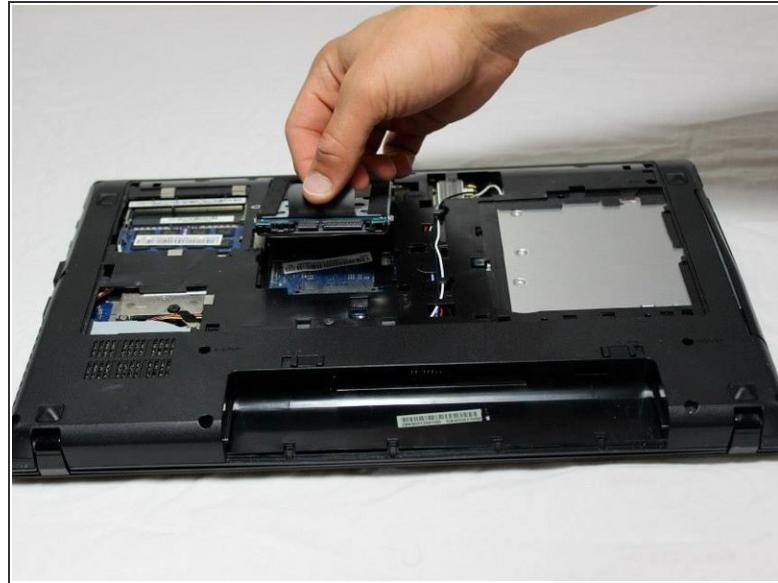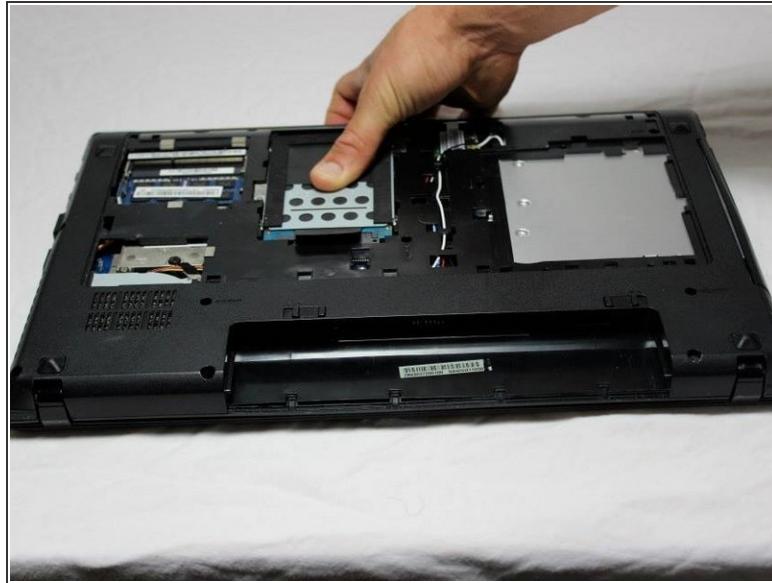

- Push hard drive away from the center of the chassis.
- Lift the hard drive out of the chassis using the tab located on the drive.

To reassemble your device, follow these instructions in reverse order.