




Lenovo IdeaPad N586 Memory Replacement

Lenovo IdeaPad N586 memory replacement

Written By: Christopher

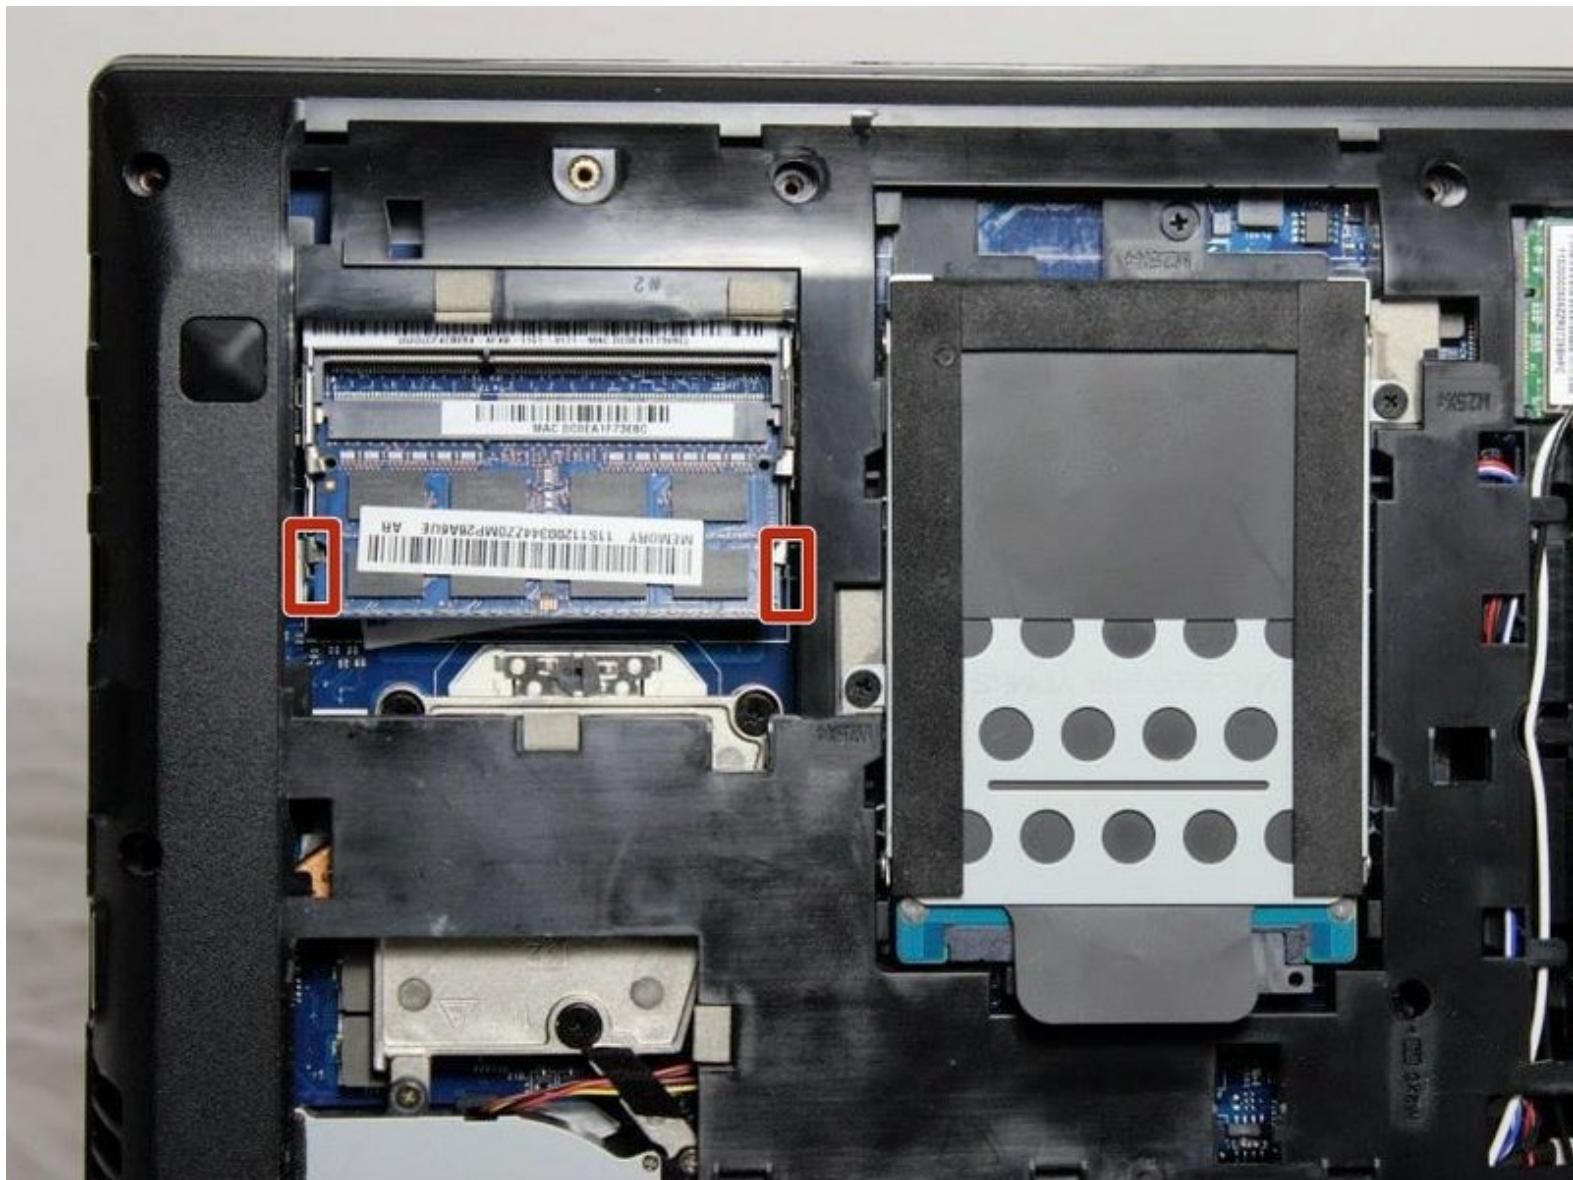

 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

Step 2




- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

Step 3 — Back Panel





- Remove the two screws highlighted.

Step 4

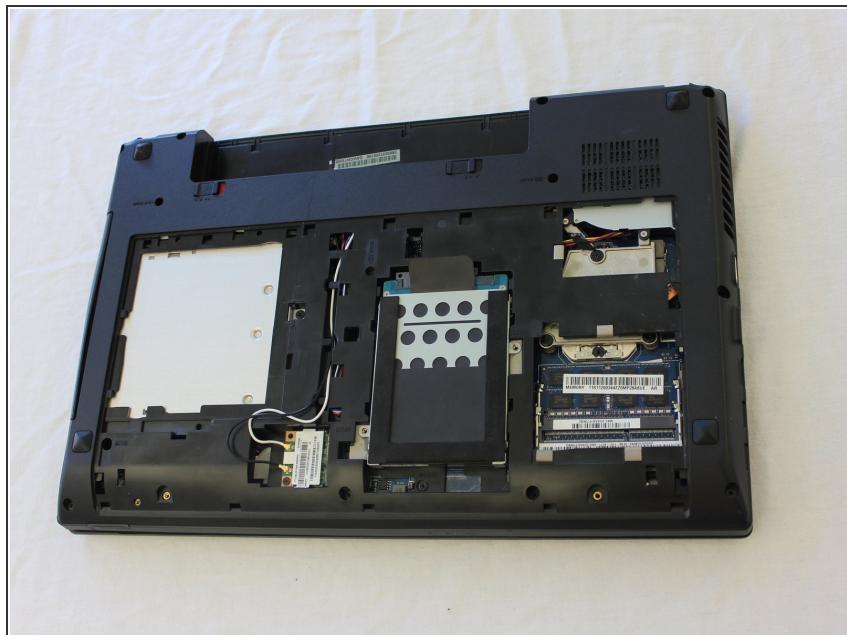


- This is the back of the laptop with the cover removed.

Step 5 — Memory

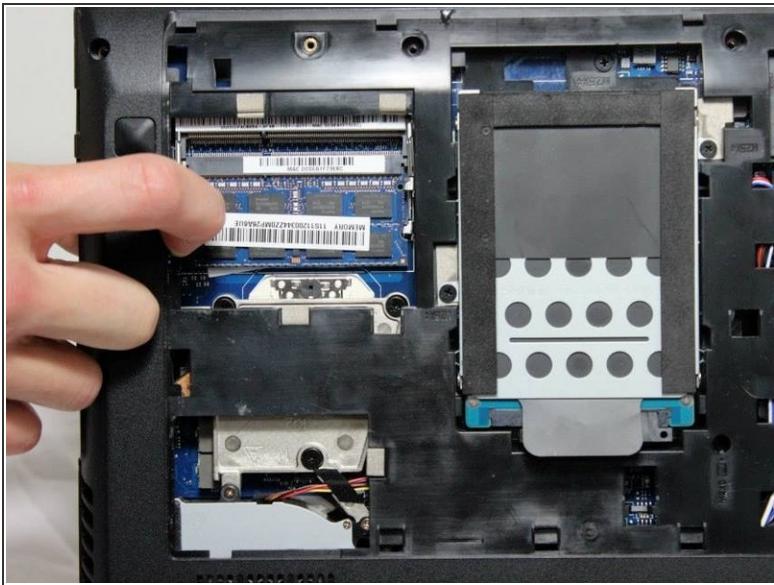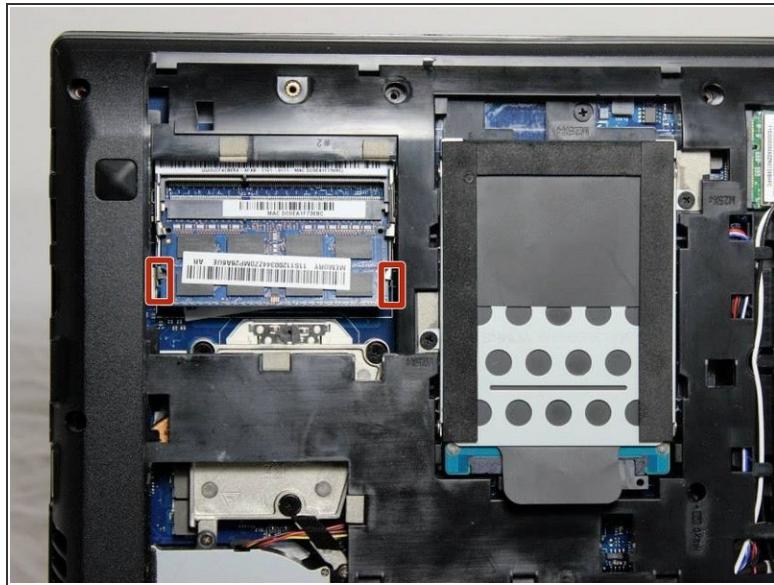

- Now push the little clips out away from the memory to unlock the memory.

Step 6

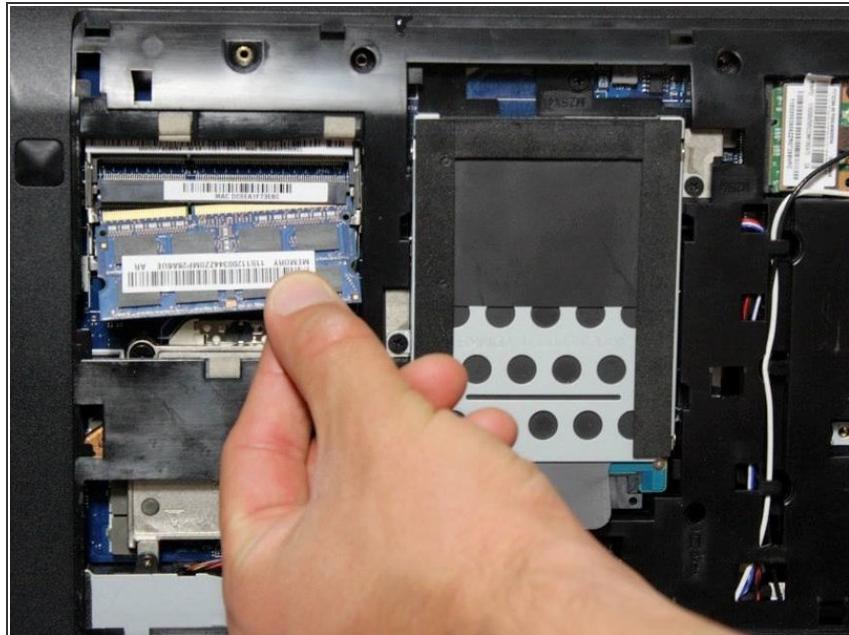

- After unlocking the memory from its position, pull the memory out.

To reassemble your device, follow these instructions in reverse order.