



Lenovo IdeaPad S10-2 Keyboard Replacement

This guide will inform you with steps on how to replace a broken keyboard.

Written By: Mary



INTRODUCTION

Replacing the keyboard on your laptop can be necessary if your keyboard is no longer responding. You will need a nylon or metal spudger. Make sure that the power is off before continuing.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Keyboard



- Rotate the laptop so the back side is facing you.
- From this side, you should be able to see both of the gaps where the two plastic materials meet.

Step 2



- Wedge the nylon or metal spudger inside the gap and pry open the two plastic parts.

Step 3




- Open the laptop.
- Place the nylon or metal spudger under the top half that is loose and pull up to pry it open.

Step 4



- Pull up on the loose component to remove.
- As you lift the keyboard, you should be able to see a strip connected to the laptop.

Step 5

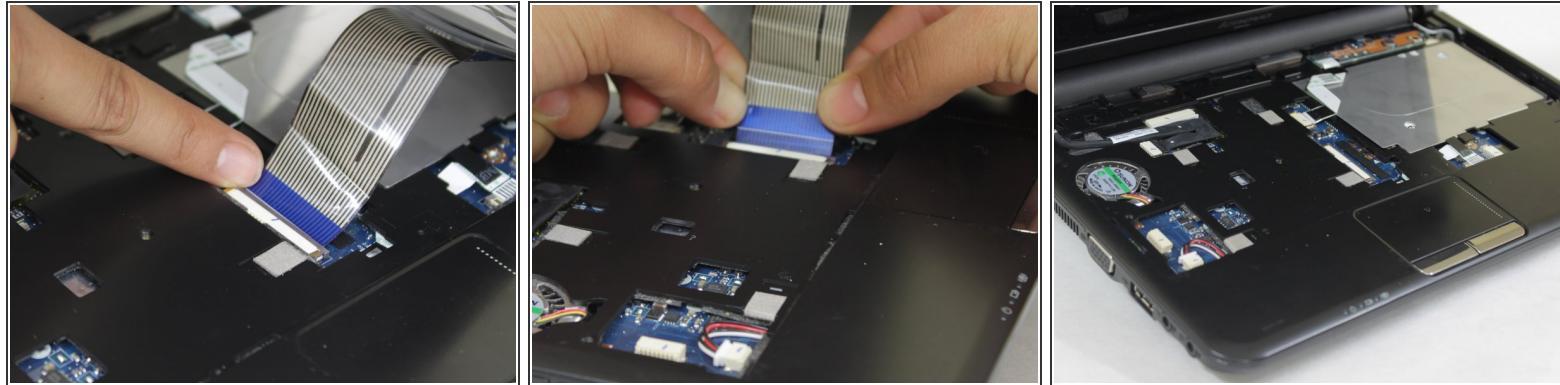

- Remove the strip by pulling both sides of the blue strip out.
- Lift and remove the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.