




# Lenovo IdeaPad U410 RAM Replacement

This guide will help you remove and replace Lenovo IdeaPad U410 RAM.

Written By: Destiny

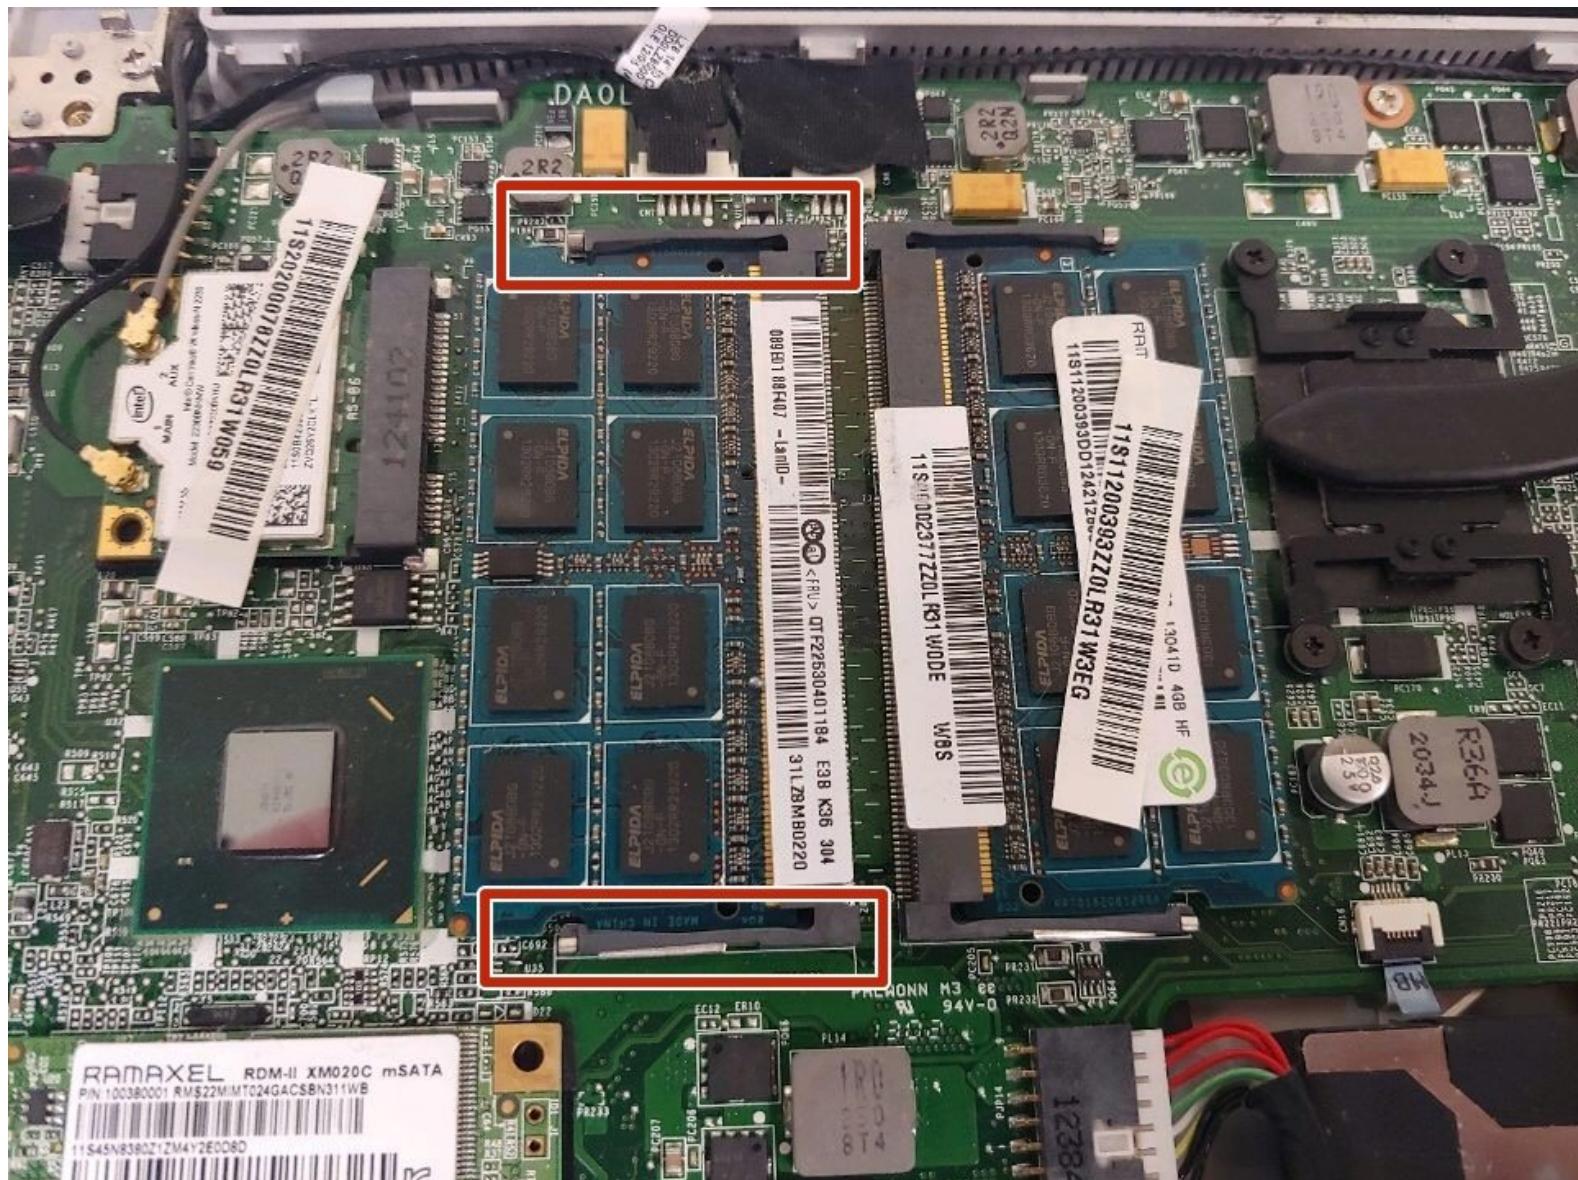

 **TOOLS:**


- [Phillips #1 Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

## Step 1 — Bottom Cover



- Using the metal spudger, remove all the rubber squares on the bottom of the laptop.

## Step 2

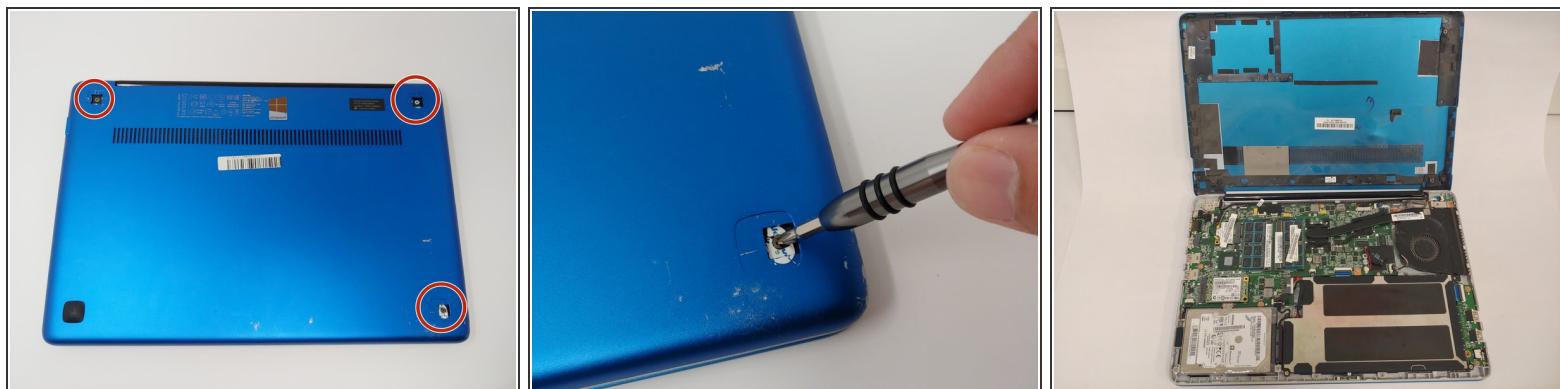

- Remove the three 6 mm Phillips #1 screws holding the panel on the laptop.
- Pry the panel from the laptop using your hands or the metal spudger if necessary.

## Step 3 — RAM



- Using your hands, gently press on the two clips parallel to the sides of the RAM.
- Remove RAM from the laptop.

To reassemble your device, follow these instructions in reverse order.