



# Lenovo IdeaPad U410 Screen Replacement

Guide on how to replace a broken LCD screen on your Lenovo IdeaPad U410 laptop.

Written By: Edric An



## INTRODUCTION

This screen replacement guide will show you how to replace your defective LCD screen on your Lenovo U410. You will need a Phillips #1 screwdriver and a metal spudger. Be careful when removing the plastic trim and connectors because you can easily break them.


### TOOLS:

- Phillips #1 Screwdriver (1)
- Metal Spudger (1)

### PARTS:

- [Lenovo IdeaPad U410 Screen](#) (1)


## Step 1 — Screen

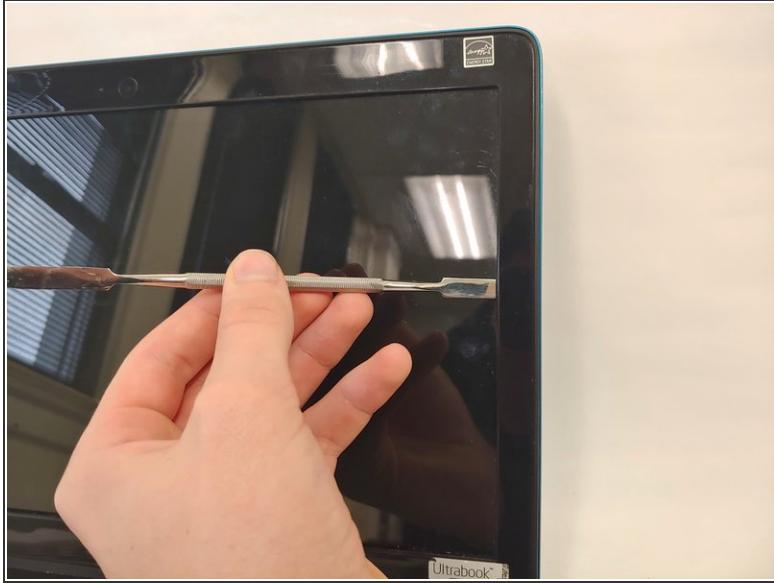

⚠ Make sure your laptop is turned off before disassembling.


- Power off the laptop.
  - Using the metal spudger, gently pry off the black trim around the screen.
- i Metal spudger can be used, but using your hand will prevent the screen and the plastic border from any damage.

## Step 2

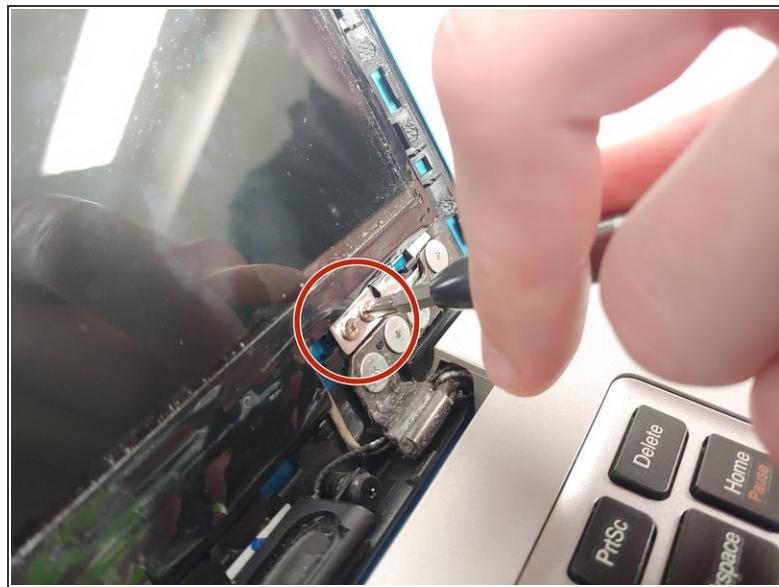

- Remove the six 3 mm Phillips #1 screws holding the screen to the laptop.
- *(i)* Ignore the "Do not touch" label on the bottom portion of the screen. It will not damage the laptop.

## Step 3

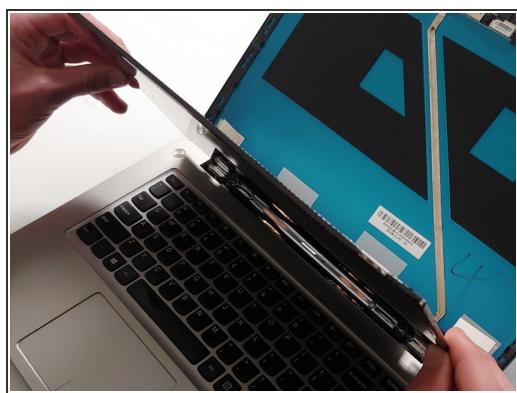

- Lower LCD screen onto the keyboard.
  - *(i)* Find the gold connector on the bottom of the LCD panel.
  - Gently grab the connector on both sides and pull the connector straight out.
- ⚠** Connector cable is very fragile. Use the least amount of force possible.

To reassemble your device, follow these instructions in reverse order.