


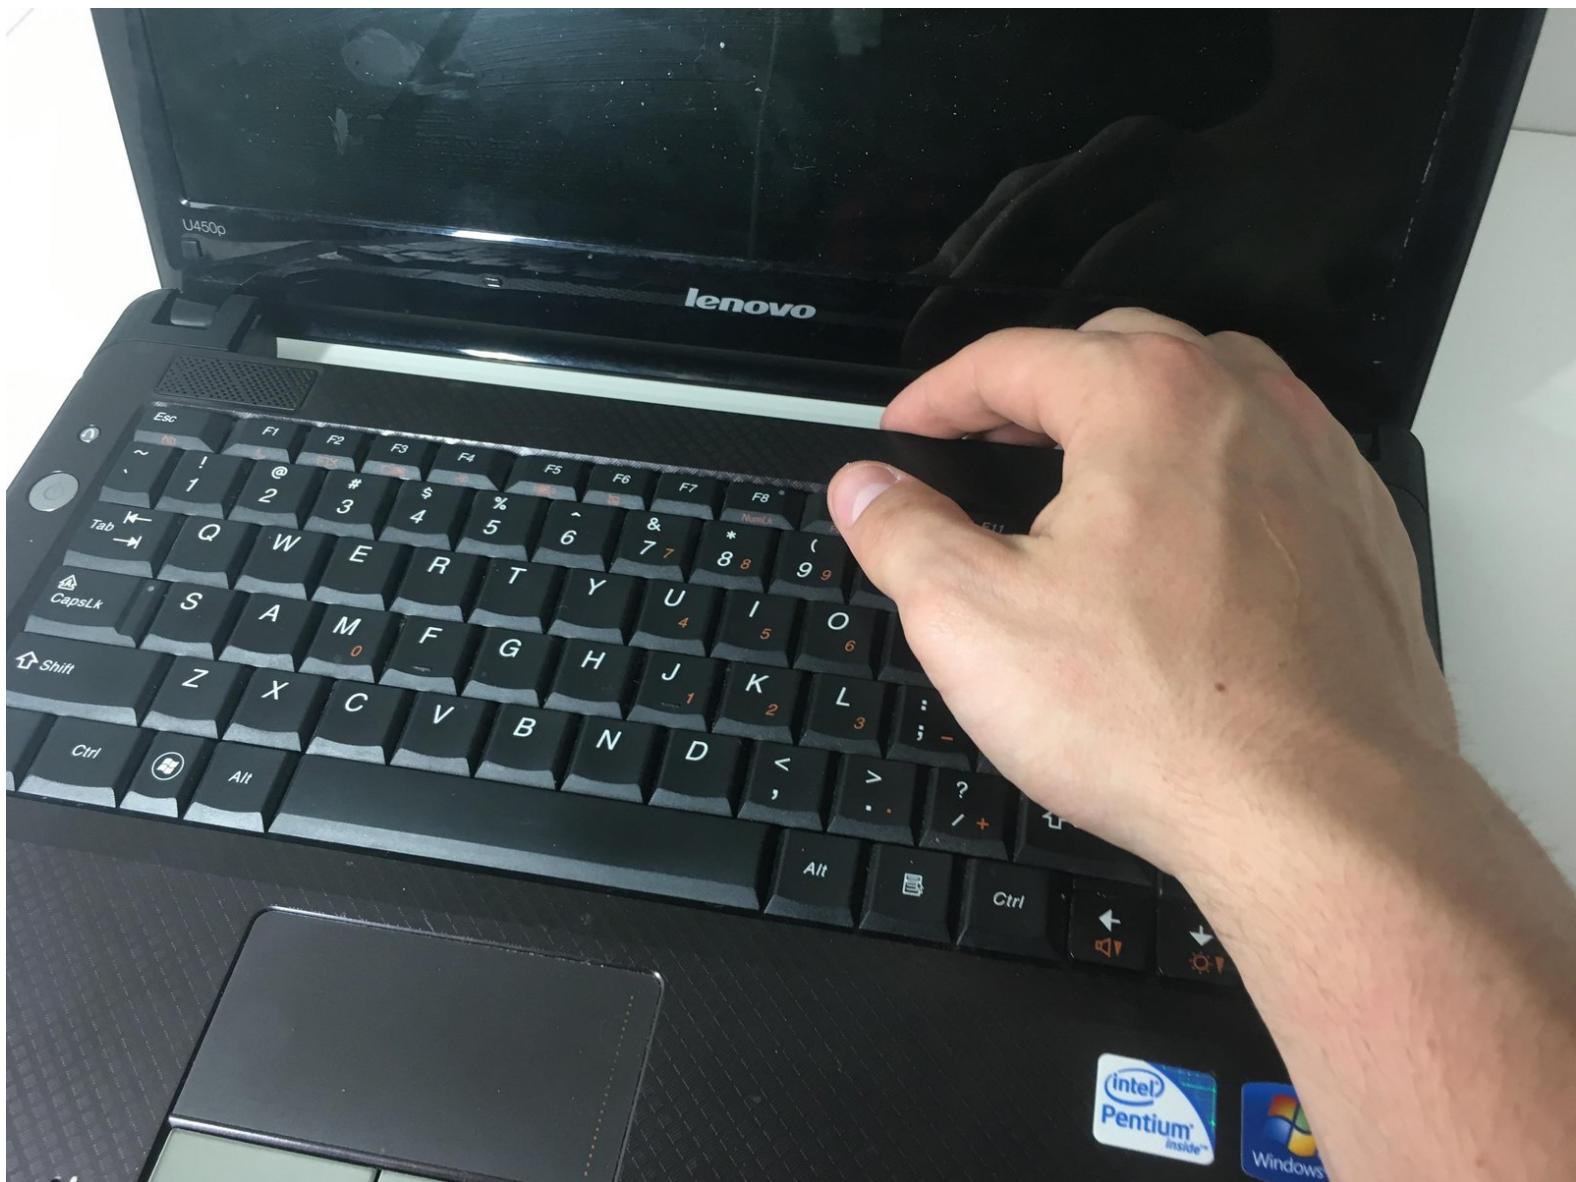

Lenovo IdeaPad U450 Keyboard Replacement

Lenovo IdeaPad U450 keyboard replacement.

Written By: Rachel L Rodrigues



INTRODUCTION

The keyboard is an essential part of your computer and this guide will take you through the steps to replace your damaged one.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



 Turn off and unplug your laptop to prevent the risk of electrocution.

- Turn your laptop over so that the bottom is face up.

Step 2



 On the top left of the laptop there is a switch. Make sure it's pushed in the unlocked position.

Step 3



- Locate the switch collinear with the last one and move the switch to an unlocked position.

Step 4




- Remove the unlocked battery.

Step 5 — Keyboard




- Flip the laptop so it's facing upwards.

Step 6

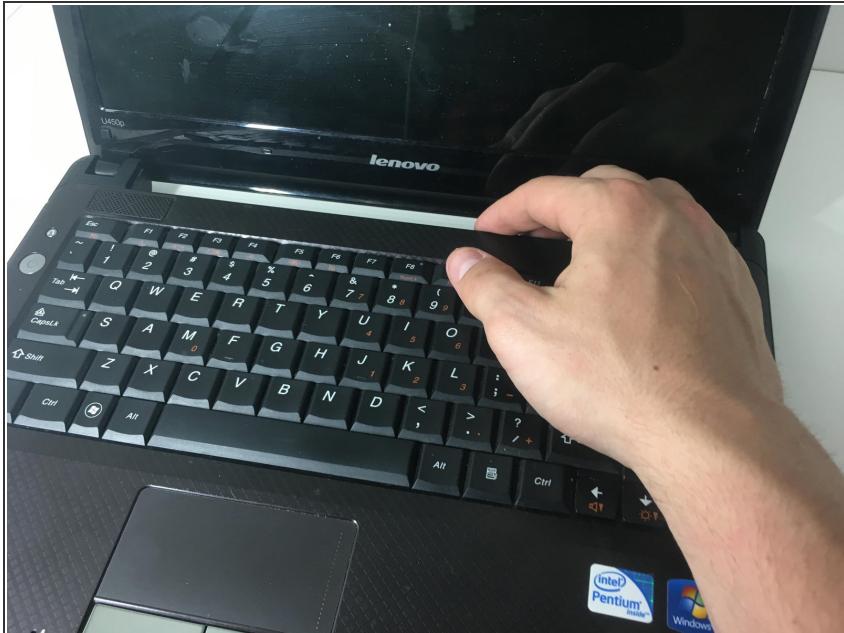


- Open the laptop.

Step 7

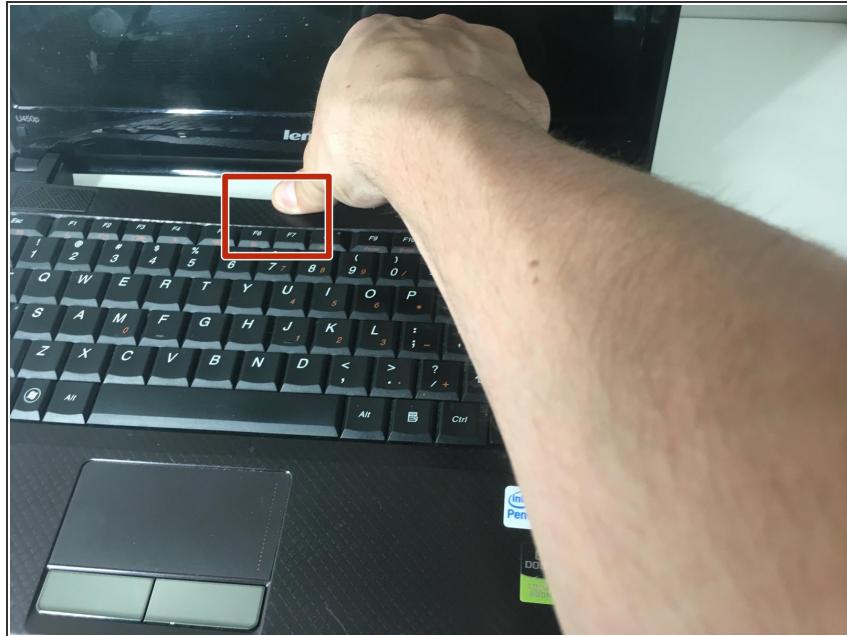

- Press the most northern region above F6 and F7 until a bit of your keyboard pops out.

Step 8

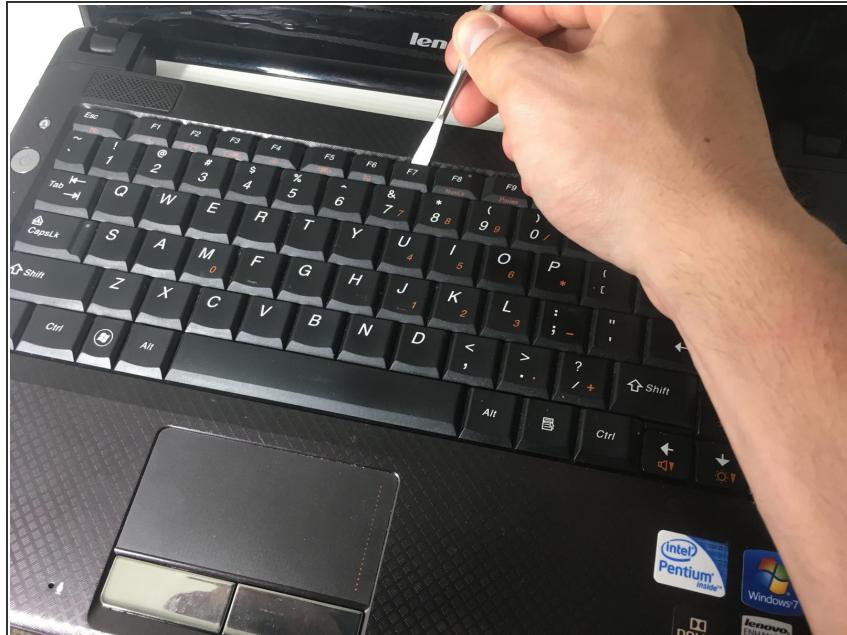

- Use the spudger to pry the top of the keyboard out.

Step 9



- Disconnect the wire connecting to keyboard to the laptop.

Step 10



- Remove the keyboard

To reassemble your device, follow these instructions in reverse order.