



Lenovo IdeaPad Y410p Ram Replacement

This guide easily explains how to replace the ram in a Lenovo IdeaPad Y410p.

Written By: Nick Torres



INTRODUCTION

This guide will help you replace the RAM and fix issues like, your laptop running slowly or commonly used apps and functions showing error messages.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Battery



⚠ Turn off your laptop before starting.

- Flip the laptop over so the model stickers are facing up.

Step 2



- Slide the left battery lock to the unlock position and release.
- Slide the right battery lock to the unlock position and hold it in place.

Step 3





- While holding the right battery lock in the unlock position, slide the battery carefully out of the laptop and set it aside.

Step 4 — Ram




- Using the Phillips #0 screwdriver remove the eight 8mm screws that fasten the bottom cover.
- Lift the bottom cover off using a metal spudger and set it aside.

Step 5

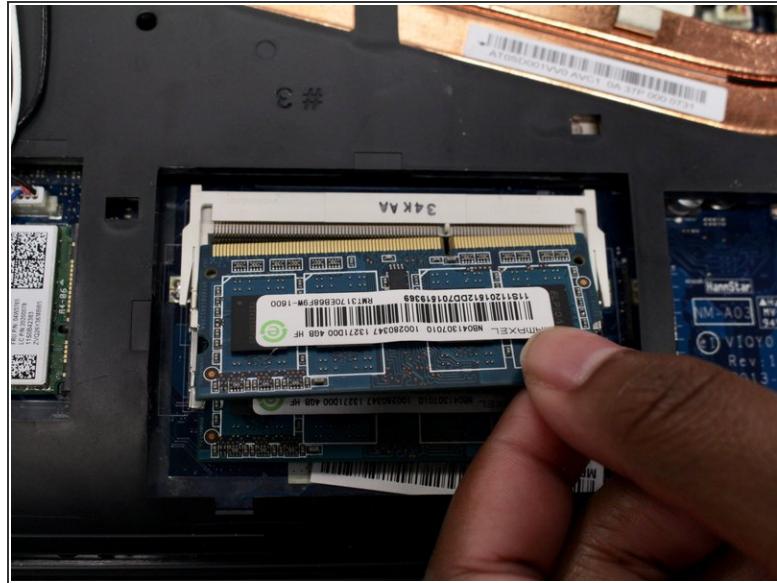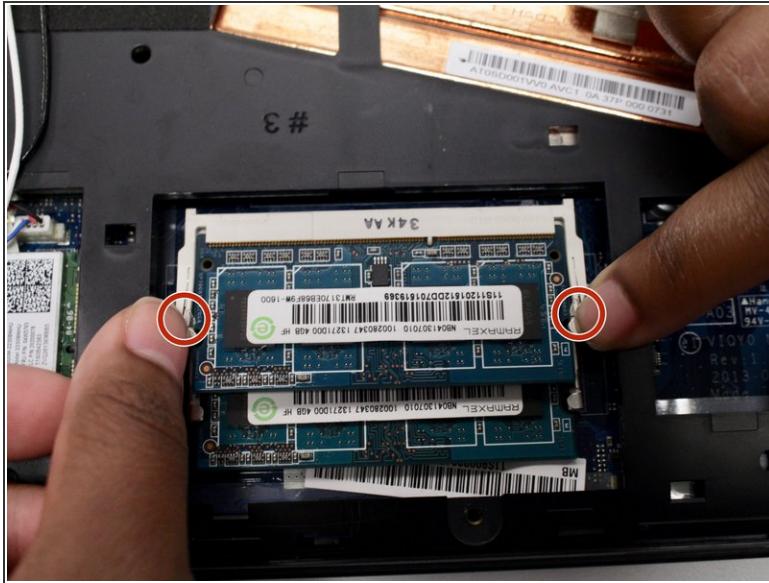

- Simultaneously pull apart both clips that are holding the RAM module down.
- When the RAM module is released carefully pull it out.

Step 6

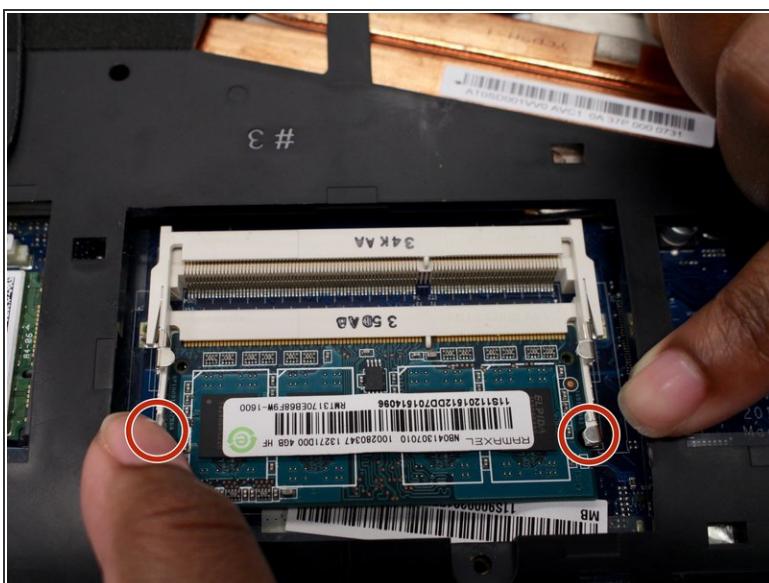

- There is a second ram module under the first one.
- Repeat Step 5 with lower Ram module.

To reassemble your device, follow these instructions in reverse order.