



# Lenovo IdeaPad Y500 Battery Replacement

Use this guide to replace the battery in your Lenovo IdeaPad Y500.

Written By: Tatum Hennige



## INTRODUCTION

Use this guide to replace the battery in your device. Removing the battery will help you replace other parts of your device.

## Step 1 — Battery



- Slide the lock on the right side until you hear a click. Once you hear a click, you should see the color red.

## Step 2



- Unlike the first lock, this lock is spring loaded and must be held in place when used.
- Slide the lock to the left (in the direction of the arrow below the lock) and hold in place.

## Step 3



- Gently pull battery away from the computer while holding open the lock.

To reassemble your device, follow these instructions in reverse order.