


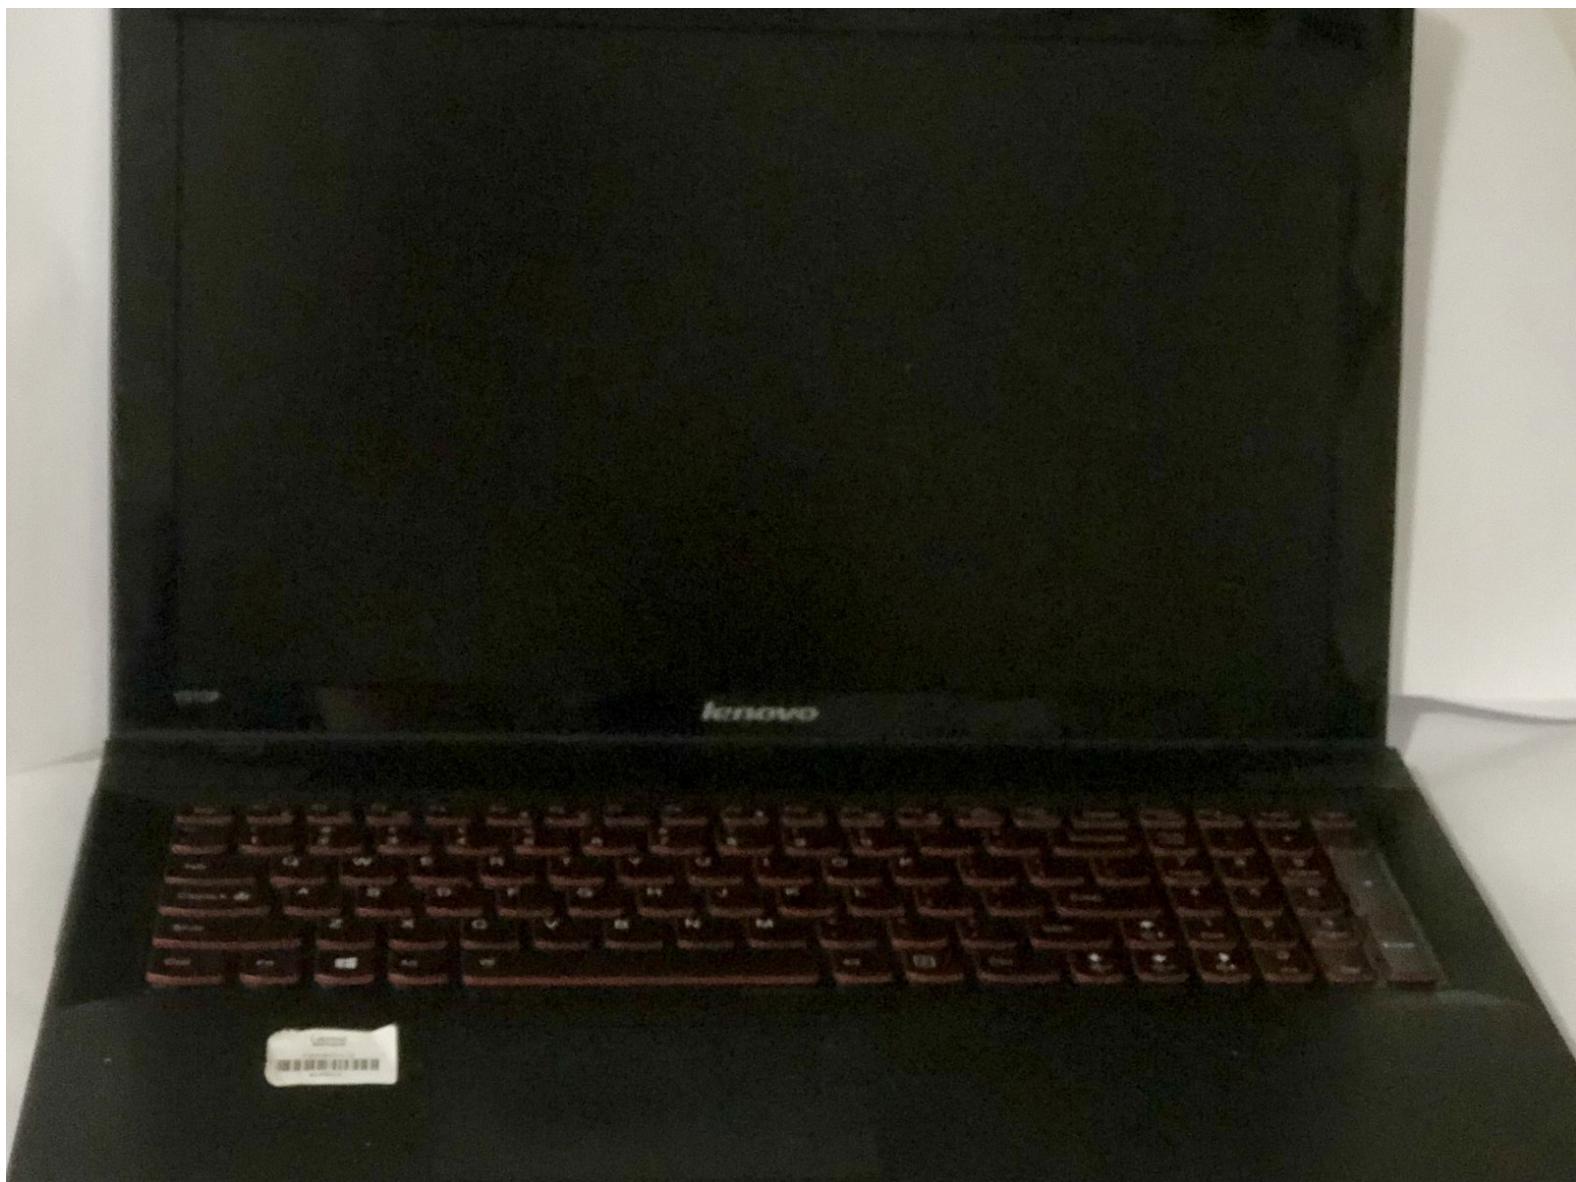

Lenovo IdeaPad Y510P Battery Replacement

How to replace a dead battery on a Lenovo IdeaPad Y510P.

Written By: Alyssa Wheeler



 **TOOLS:**

- **Fingers (1)**

Step 1 — Battery

- Flip laptop over to expose battery.



Step 2

- Move latches to the unlocked position.



Step 3



- Slide the battery out.

To reassemble your device, follow these instructions in reverse order.