


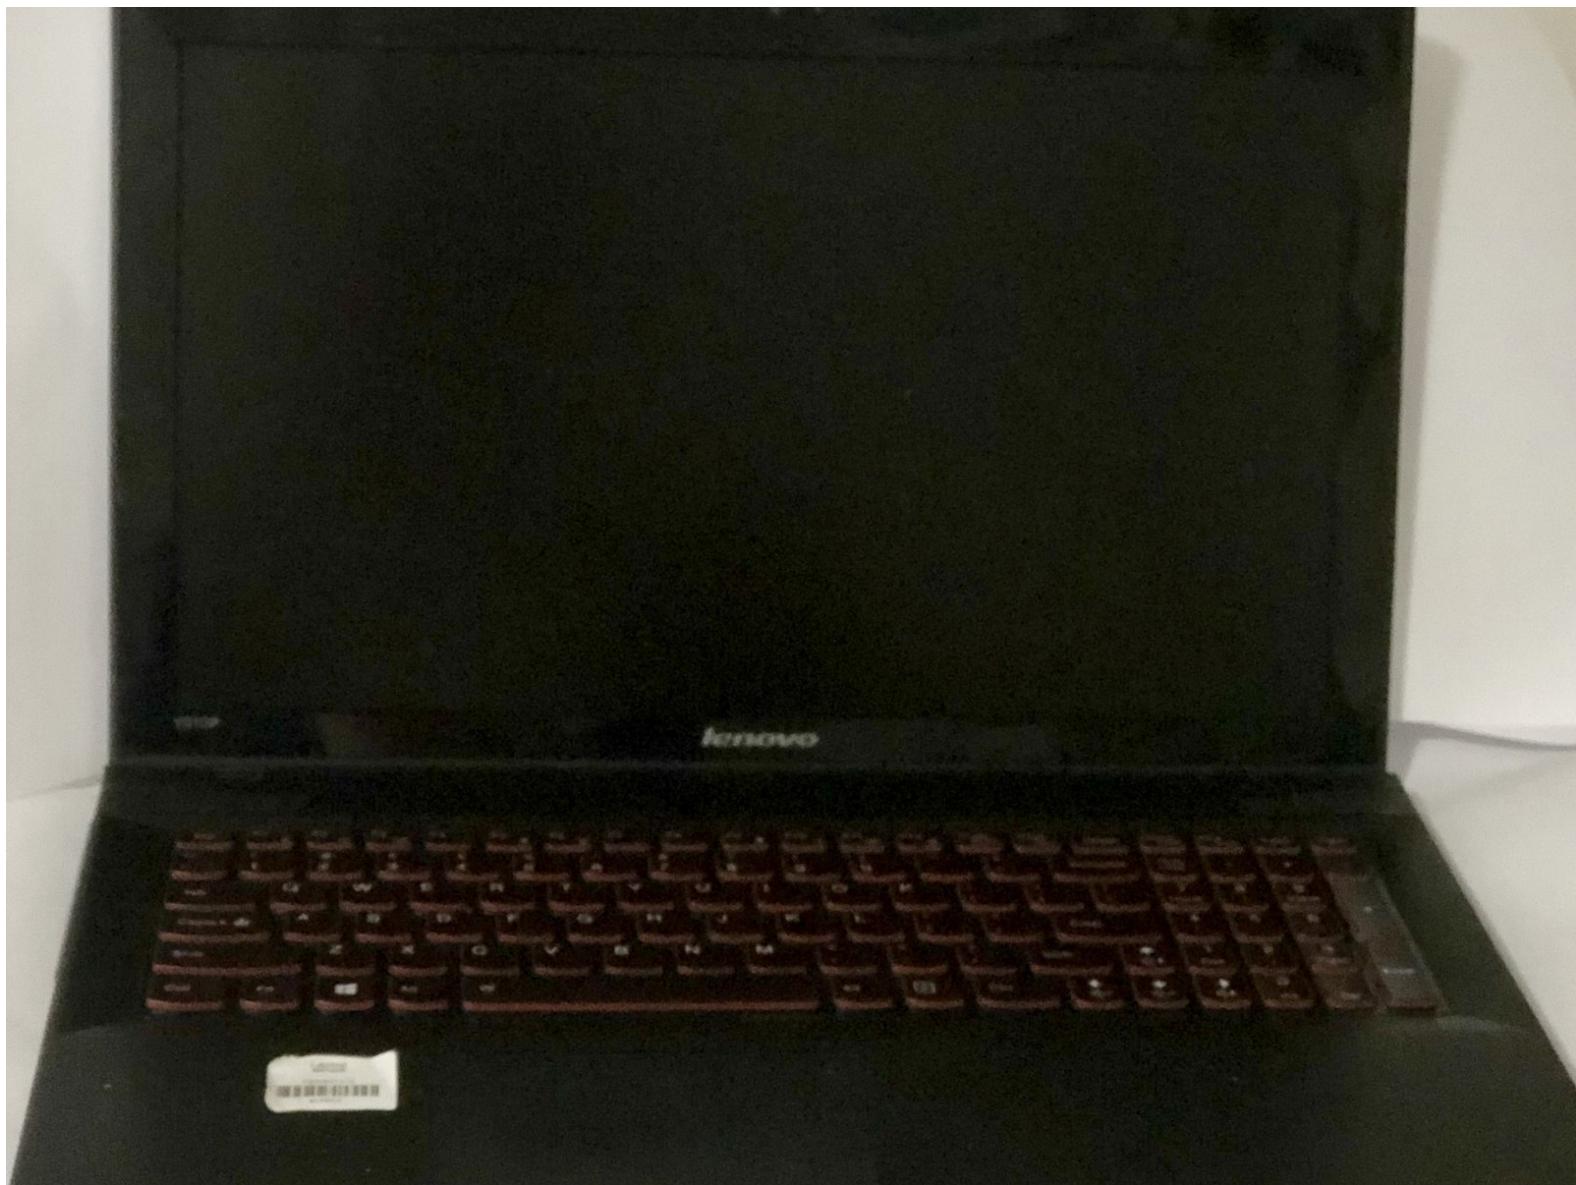

Lenovo IdeaPad Y510P Hard Drive Replacement

How to remove and replace a hard drive.

Written By: Joelyn Hanson



 **TOOLS:**


- [JIS Driver Set \(1\)](#)

Step 1 — Hard Drive



- Remove the battery.

Step 2

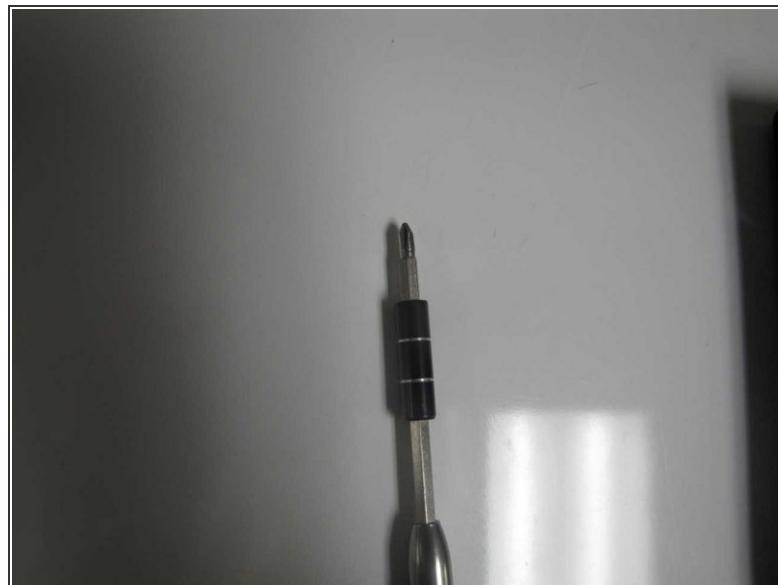

- Take a J1 head screw driver and remove the nine screws holding the back panel down.

Step 3



- It should be easy to lift the panel up and off.
- If it is difficult then there is most likely a screw still in.

Step 4



- When the panel comes off the back will look like this.
- Outlined in red is where the hard drive will be.
- Gently lift and remove the hard drive.

To reassemble your device, follow these instructions in reverse order.