




Lenovo IdeaPad Y580-2099 Disk Drive Replacement

This guide will show you how to remove the device screen.

Written By: Mark Liu

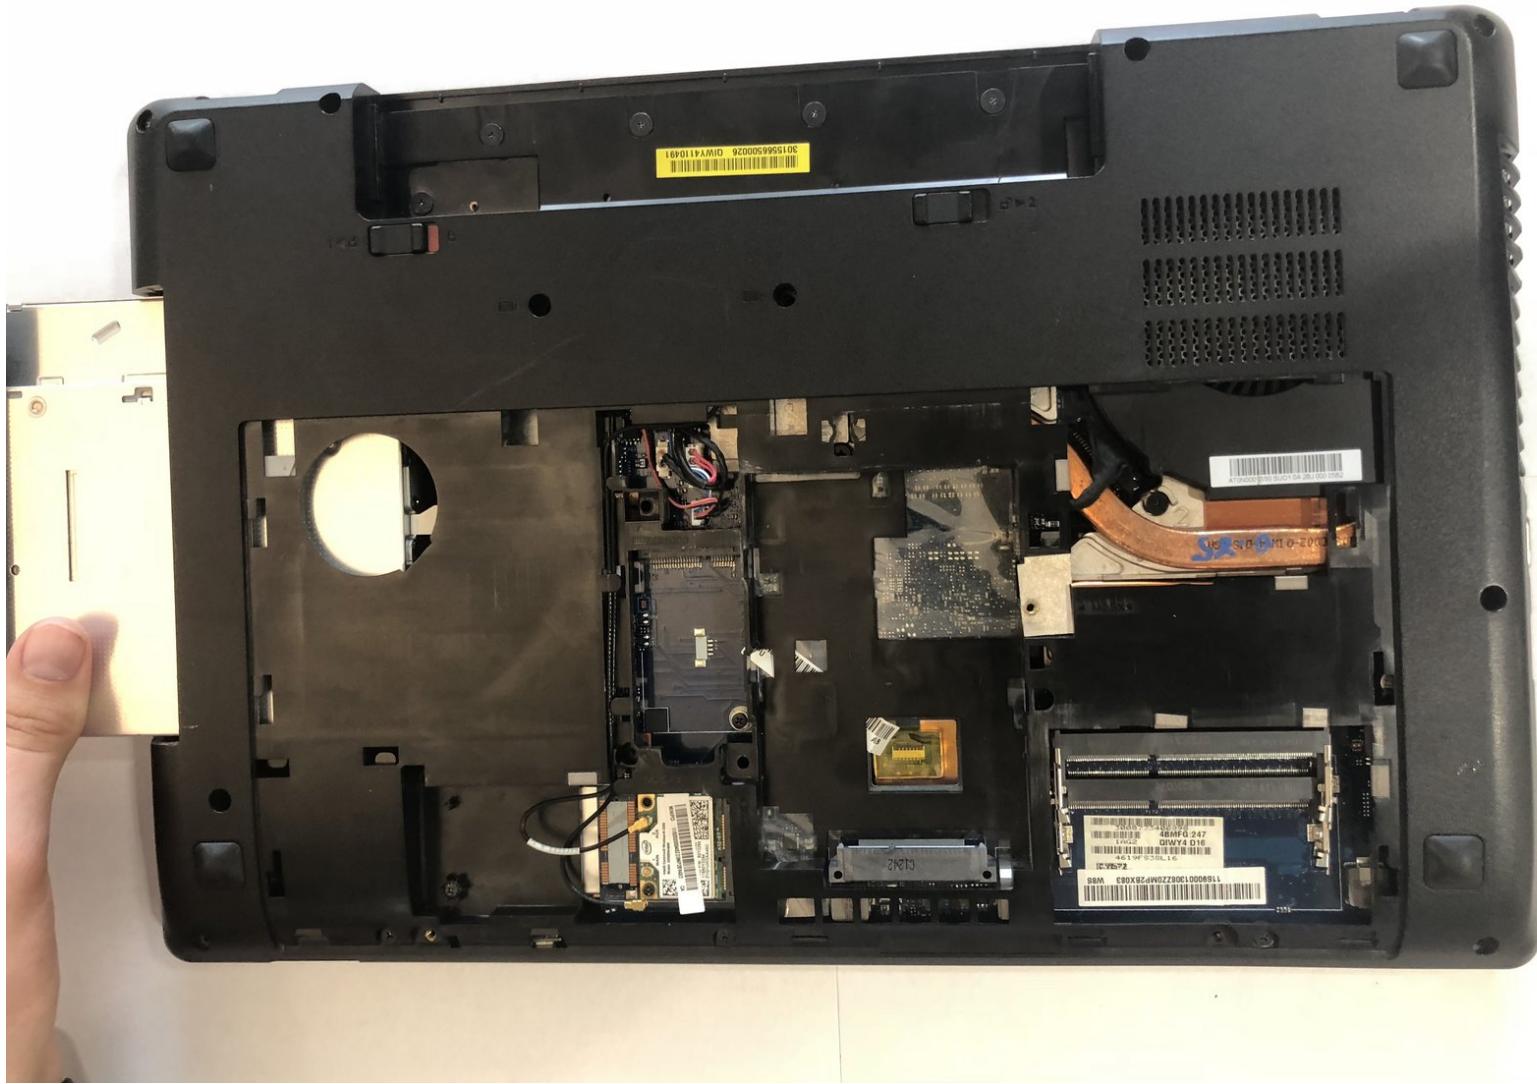

 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — Battery



- Slide out both locks for the battery, located on the back of the device.

Step 2




- Remove the battery.

Step 3 — Disk Drive



- Unscrew the 2 screws from the back panel.
- Slide back panel out.

Step 4

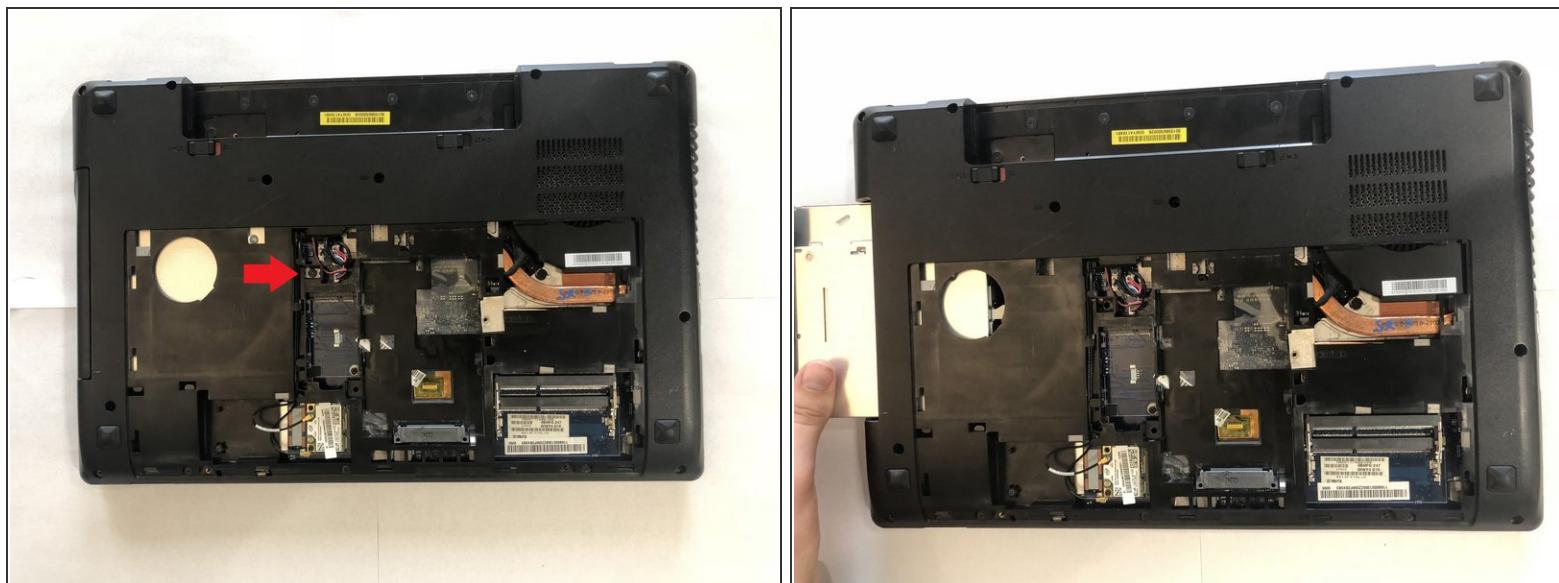

- Unscrew the disc drive screw.
- Slide disc drive out.

To reassemble your device, follow these instructions in reverse order.