




Lenovo IdeaPad Y580-2099 Keyboard Replacement

This guide will show you how to replace your keyboard.

Written By: Lauren

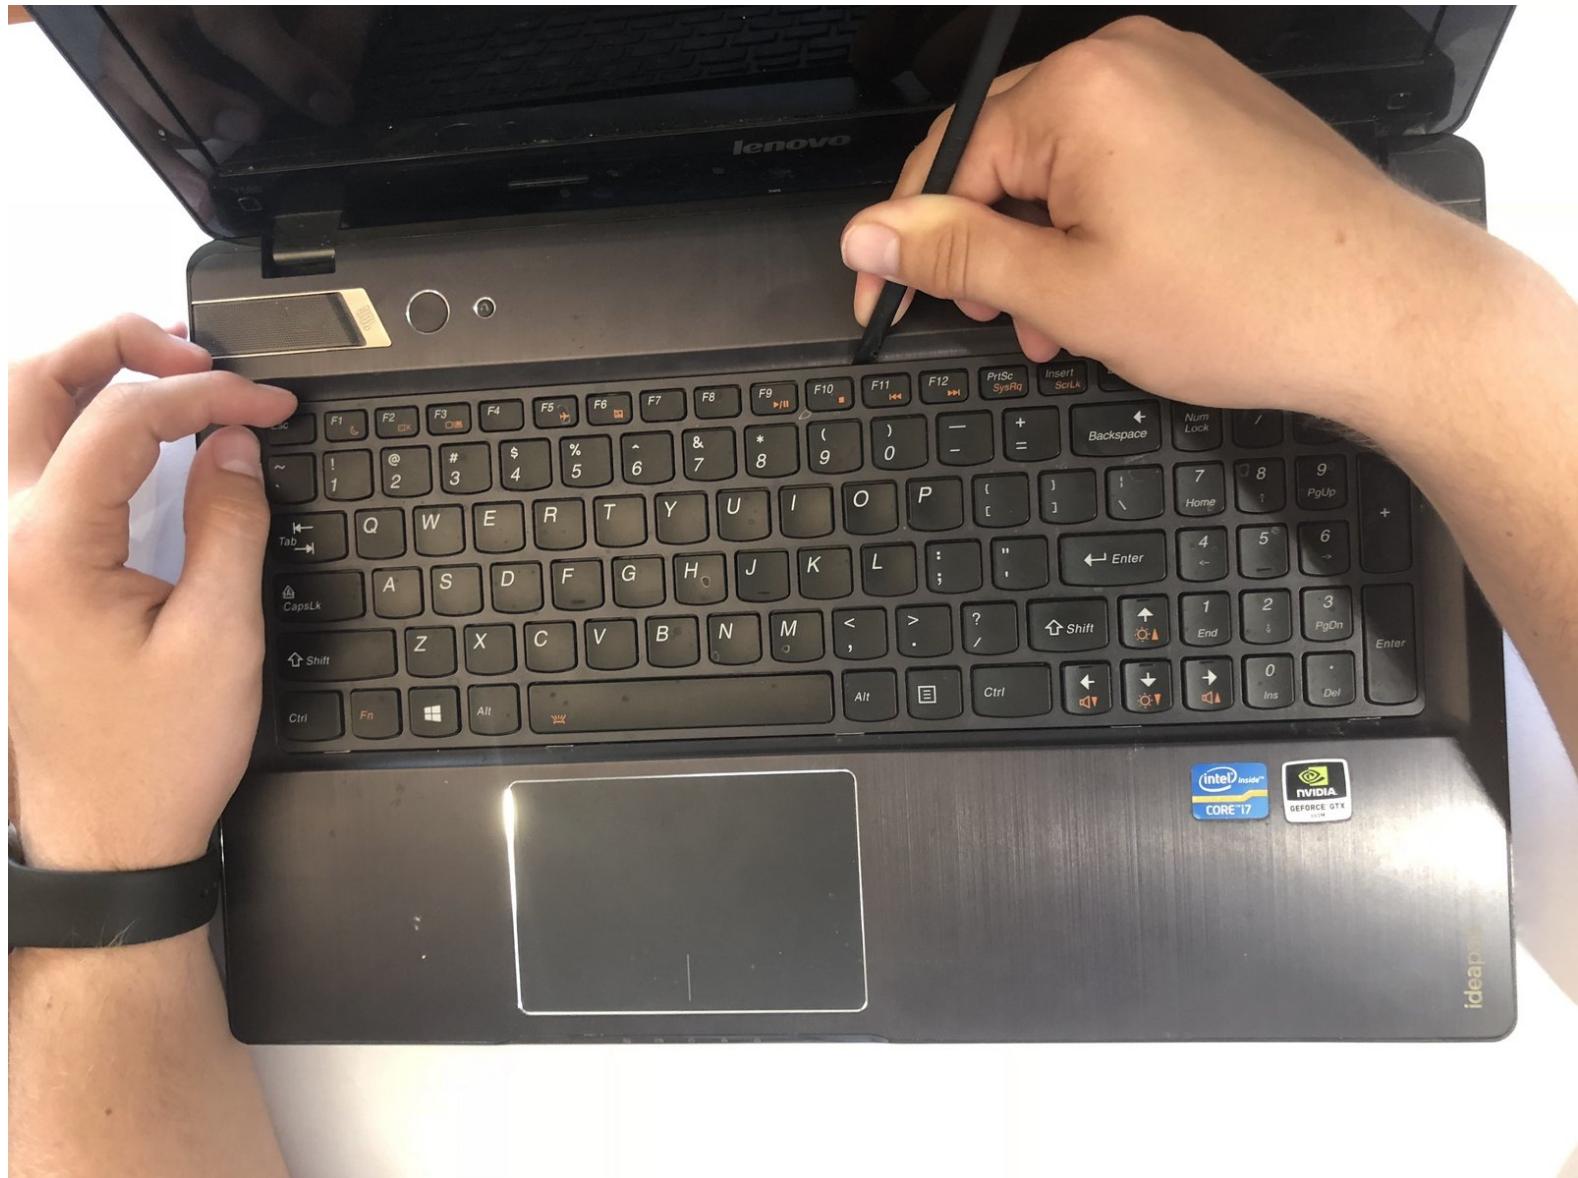

 **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Battery



- Slide out both locks for the battery, located on the back of the device.

Step 2




- Remove the battery.

Step 3 — Keyboard




- Unscrew the 2 screws on the bottom of the device.
- Slide the back panel out.

Step 4

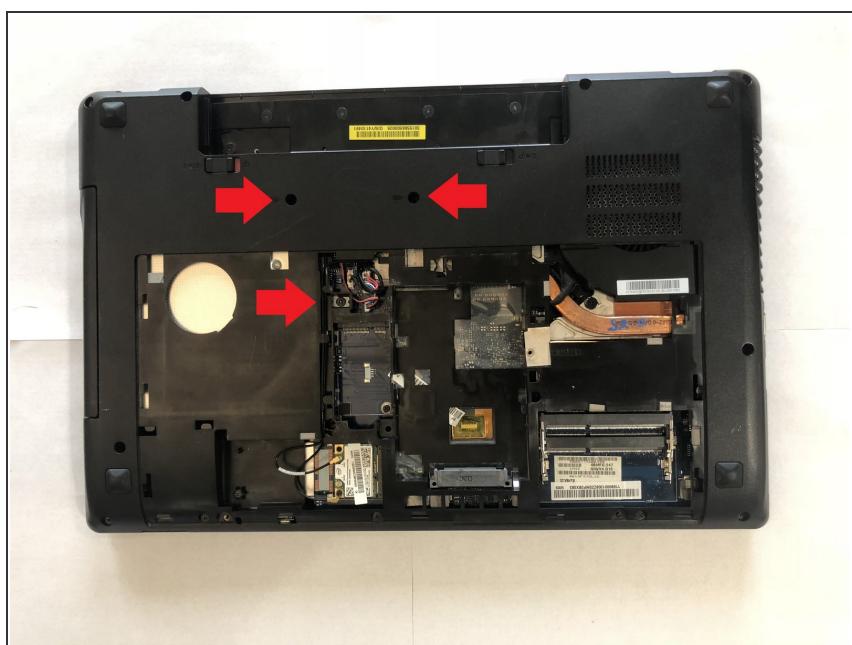

- Unscrew the 3 "keyboard" detected screws.

Step 5

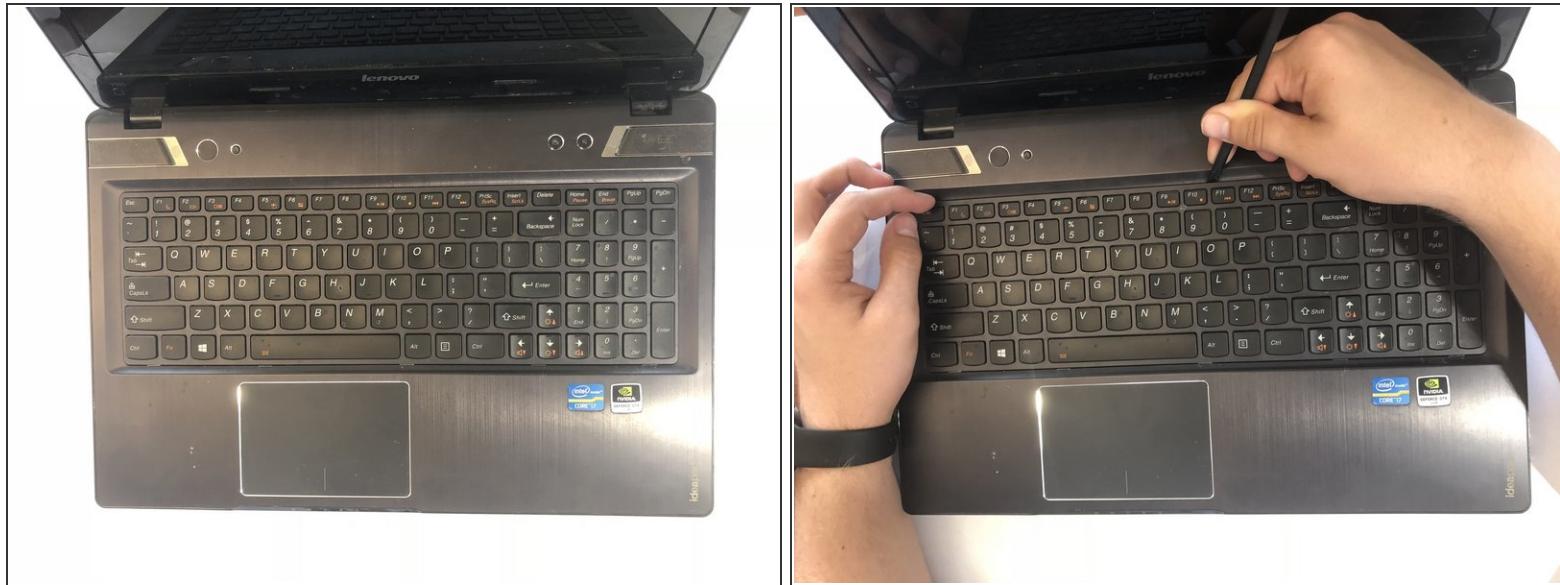

- Flip the laptop over and open up.
- Then pry up the whole keyboard using the spudger.

⚠ Make sure to use a plastic spudger. You could damage the device using anything else.

⚠ Make sure not to take the frame that goes around the keys off. This part is not removable.

To reassemble your device, follow these instructions in reverse order.