



# Lenovo IdeaPad Z570 Battery Replacement

Battery replacement for the Lenovo IdeaPad Z570.

Written By: Daniel Lopes



## INTRODUCTION

In order to proceed with this guide, you should know that the laptop must not be plugged in for safety reasons. The laptop should also be powered off and the battery drained. Once completed, safely dispose of the old battery.

## Step 1 — Battery



- Place the laptop face down with the battery facing away from you

## Step 2



- Flip the right switch right-bound

### Step 3



- Hold the left switch.

### Step 4



- Push the battery forward lightly to remove it while holding the left switch.

To reassemble your device, follow these instructions in reverse order.