




Lenovo IdeaPad Z570 Keyboard Replacement

In this guide we will be showing how to replace the keyboard in your Lenovo IdeaPad Z570.

Written By: Mya DeSantos

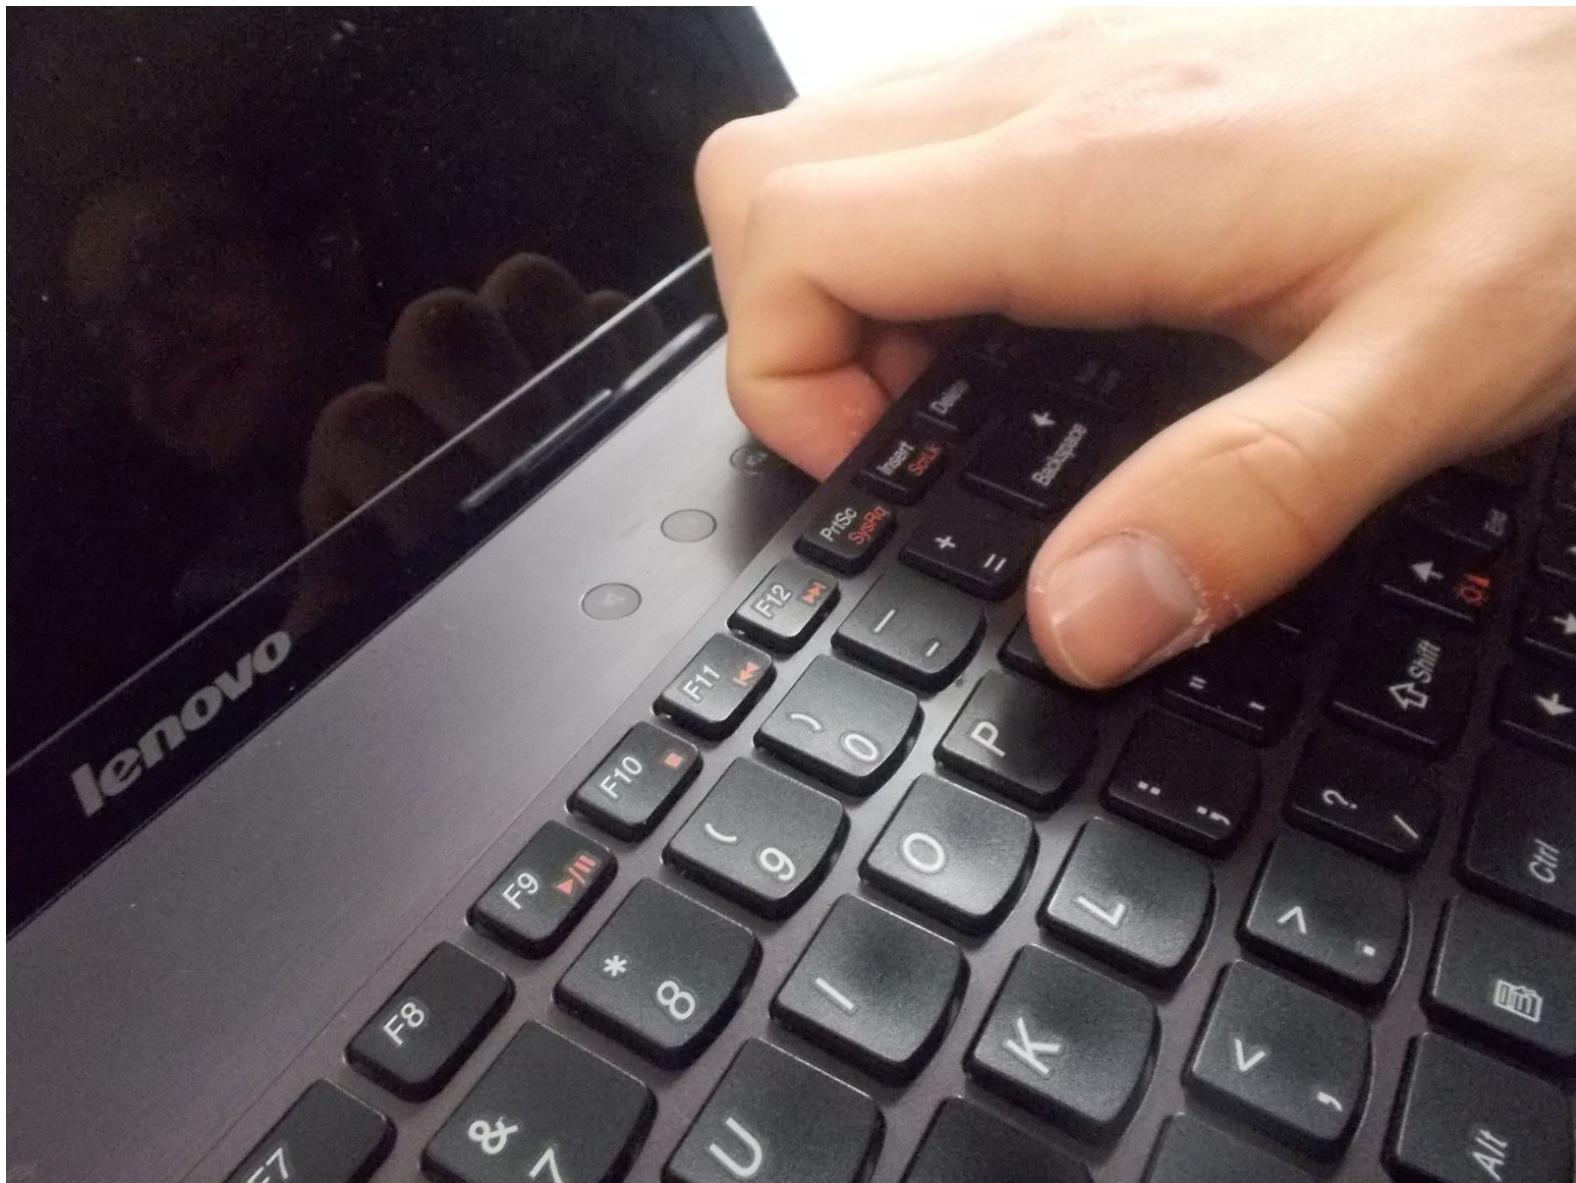

INTRODUCTION

In order to proceed with this guide, you should know that the laptop must not be plugged in for safety reasons. The laptop should also be powered off and the battery drained. Once completed, safely dispose of the old keyboard.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Place the laptop face down with the battery facing away from you

Step 2



- Flip the right switch right-bound

Step 3



- Hold the left switch.

Step 4



- Push the battery forward lightly to remove it while holding the left switch.

Step 5 — Disc Drive




- Place the laptop face down with the battery slot facing away from you.

Step 6



- Loosen all seven 3mm screws from the back panel using a Phillips #0 screwdriver.
- *(i)* These screws cannot be removed from the device.
- Remove the back panel from the device.

Step 7

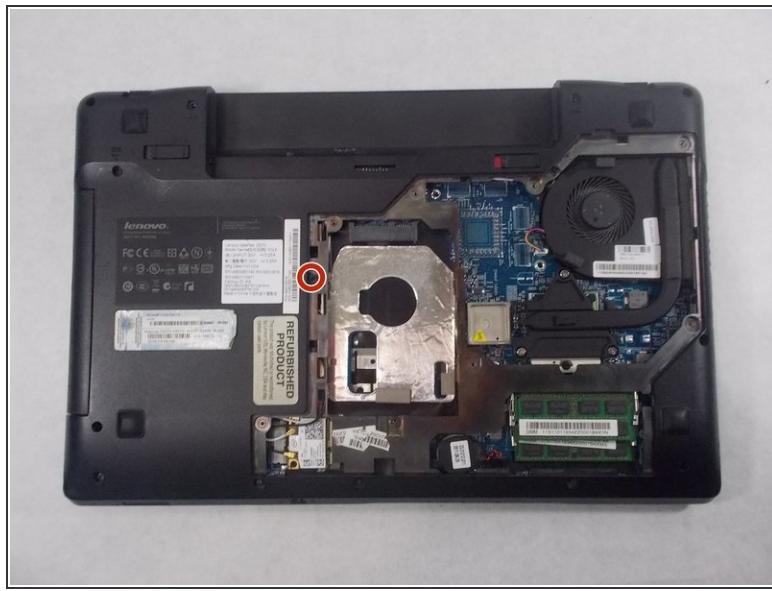

- Remove the 3 mm Phillips #0 screw located on the left hand side that holds the disc drive in place.

Step 8



- Gently remove the disc drive from the left hand side of the laptop.

Step 9 — Keyboard




- Remove the three 12mm screws found near these symbols with a Phillips #0 screwdriver.

Step 10



- Orient the laptop at a 90 degree angle with the keyboard being vertical and the screen horizontal to the surface you are working on.

Step 11

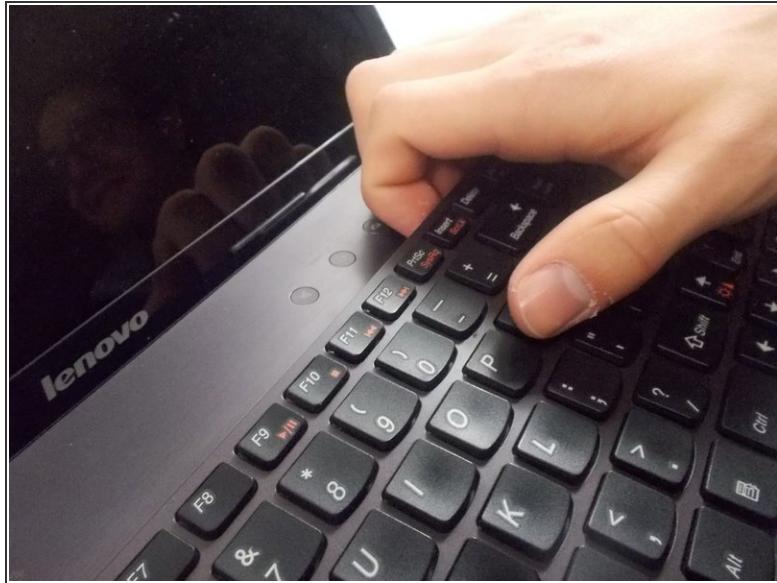


- Pry the keyboard off starting from the corner where the “esc” key is located using an opening tool.
- Now orient the laptop in the standard position and take off the keyboard.

Step 12



- At the terminal block, flip the black switch on the terminal up.

Step 13

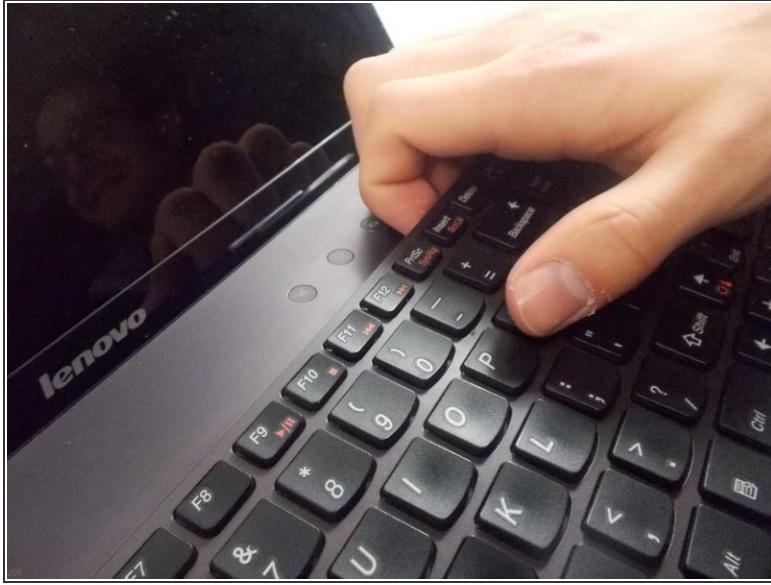

- Pull the keyboard out from the terminal block.

To reassemble your device, follow these instructions in reverse order.