



Lenovo IdeaTab A1000L Battery Replacement

In this guide you will learn how to remove the battery in your Lenovo IdeaTab A1000L.

Written By: Peter Newell



INTRODUCTION


Battery removal is easy. All you have to do is remove the back cover, system board cover and a disconnect a wire! Let's get started!

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Battery



 Be sure to power off your device before taking it apart.

- Locate the small tab, marked with the lock symbol on the upper right hand of your IdeaTab above the volume control buttons. Use your fingernail to gently loosen this tab.
- Use your Phillips #000 screwdriver and remove the 3.5mm screw and put it aside.
- Using your blue, plastic opening tool, begin to gently pry the back panel away from the front panel starting by where the screw was.

Step 2

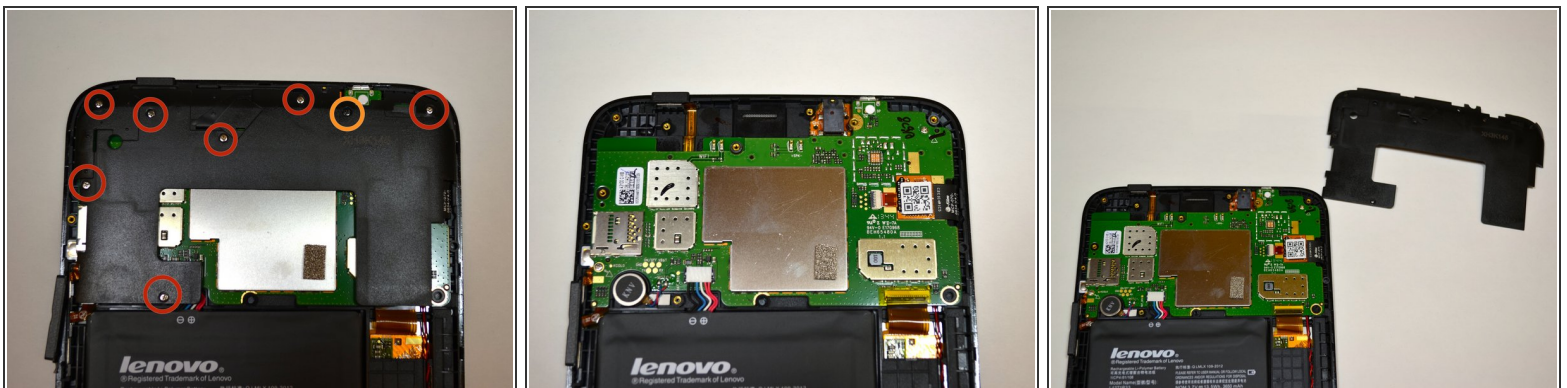

- Locate the black back plate, above the battery.
- Using a Phillips #000 screwdriver remove the 7 silver 3.5mm screws from the back plate.
- Next, with the same screwdriver, remove the black 4.1mm screw.
- Gently remove the back plate from the device.

Step 3



- Use the plastic opening tool to disconnect the battery wires from the system board. Slide your opening tool under the white plastic piece and pry it up.
- Again, use the plastic opening tool to loosen the battery from the device by lifting up on the battery on all sides. This will detach the battery from the adhesive.
- Gently place the battery aside.

To reassemble your device, follow these instructions in reverse order.