



Lenovo Ideapad 100S-11IBY 11.6" Battery Replacement

This is a quick guide on how to remove and replace the battery for the Lenovo Ideapad.

Written By: Nick Myers



INTRODUCTION

This is a quick guide on how to remove and replace the battery.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery





- Remove all 11 screws from the base of the laptop.

Step 2

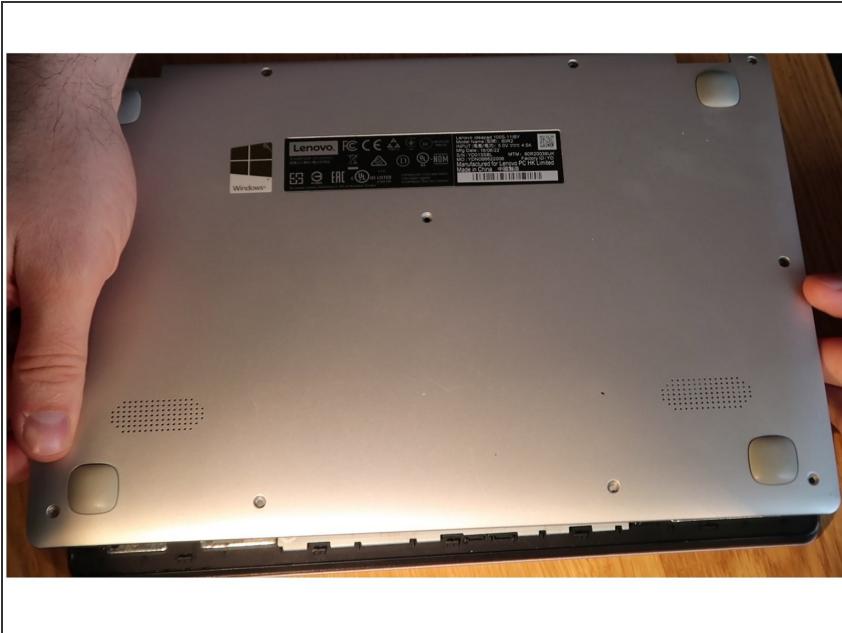


- Once the screws have been removed, lift the base out of the laptop. You may need something pointy to pry it up.

Step 3

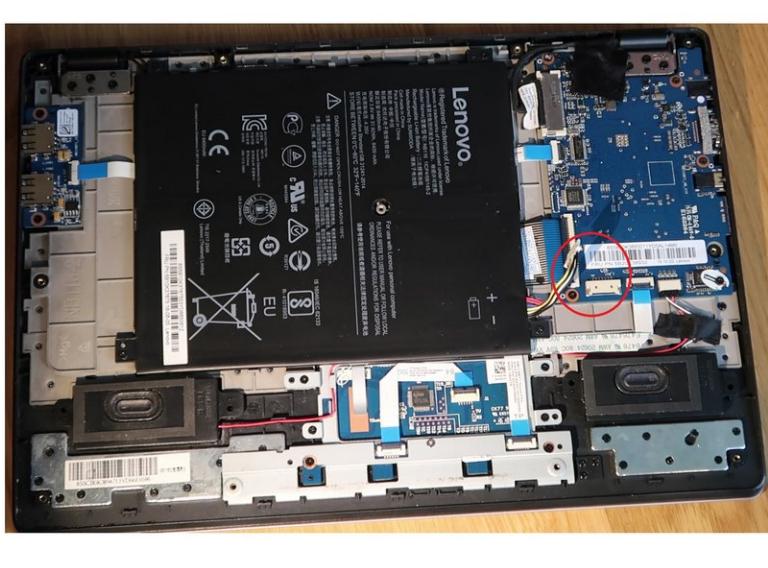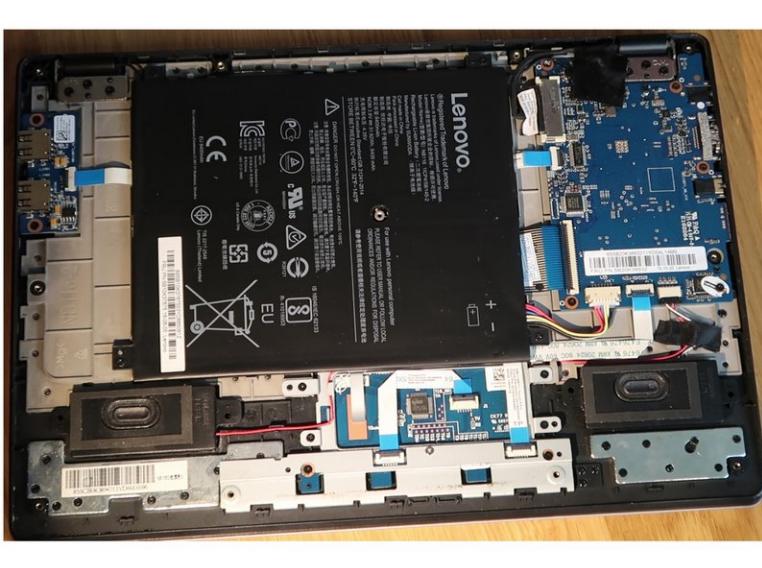

- Next disconnect the battery

Step 4

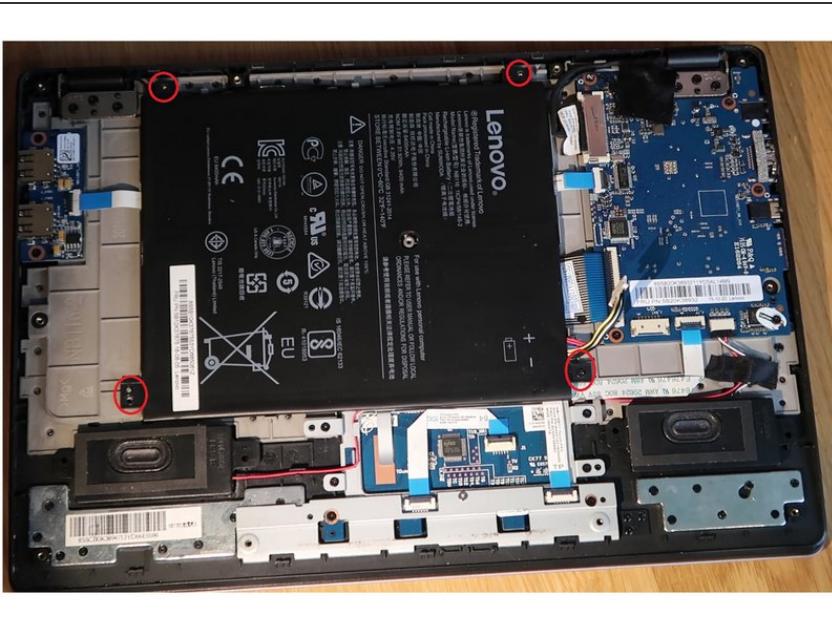

- Next remove the four screws holding the battery in place.

Step 5



- And your all done.

To reassemble your device, follow these instructions in reverse order.