


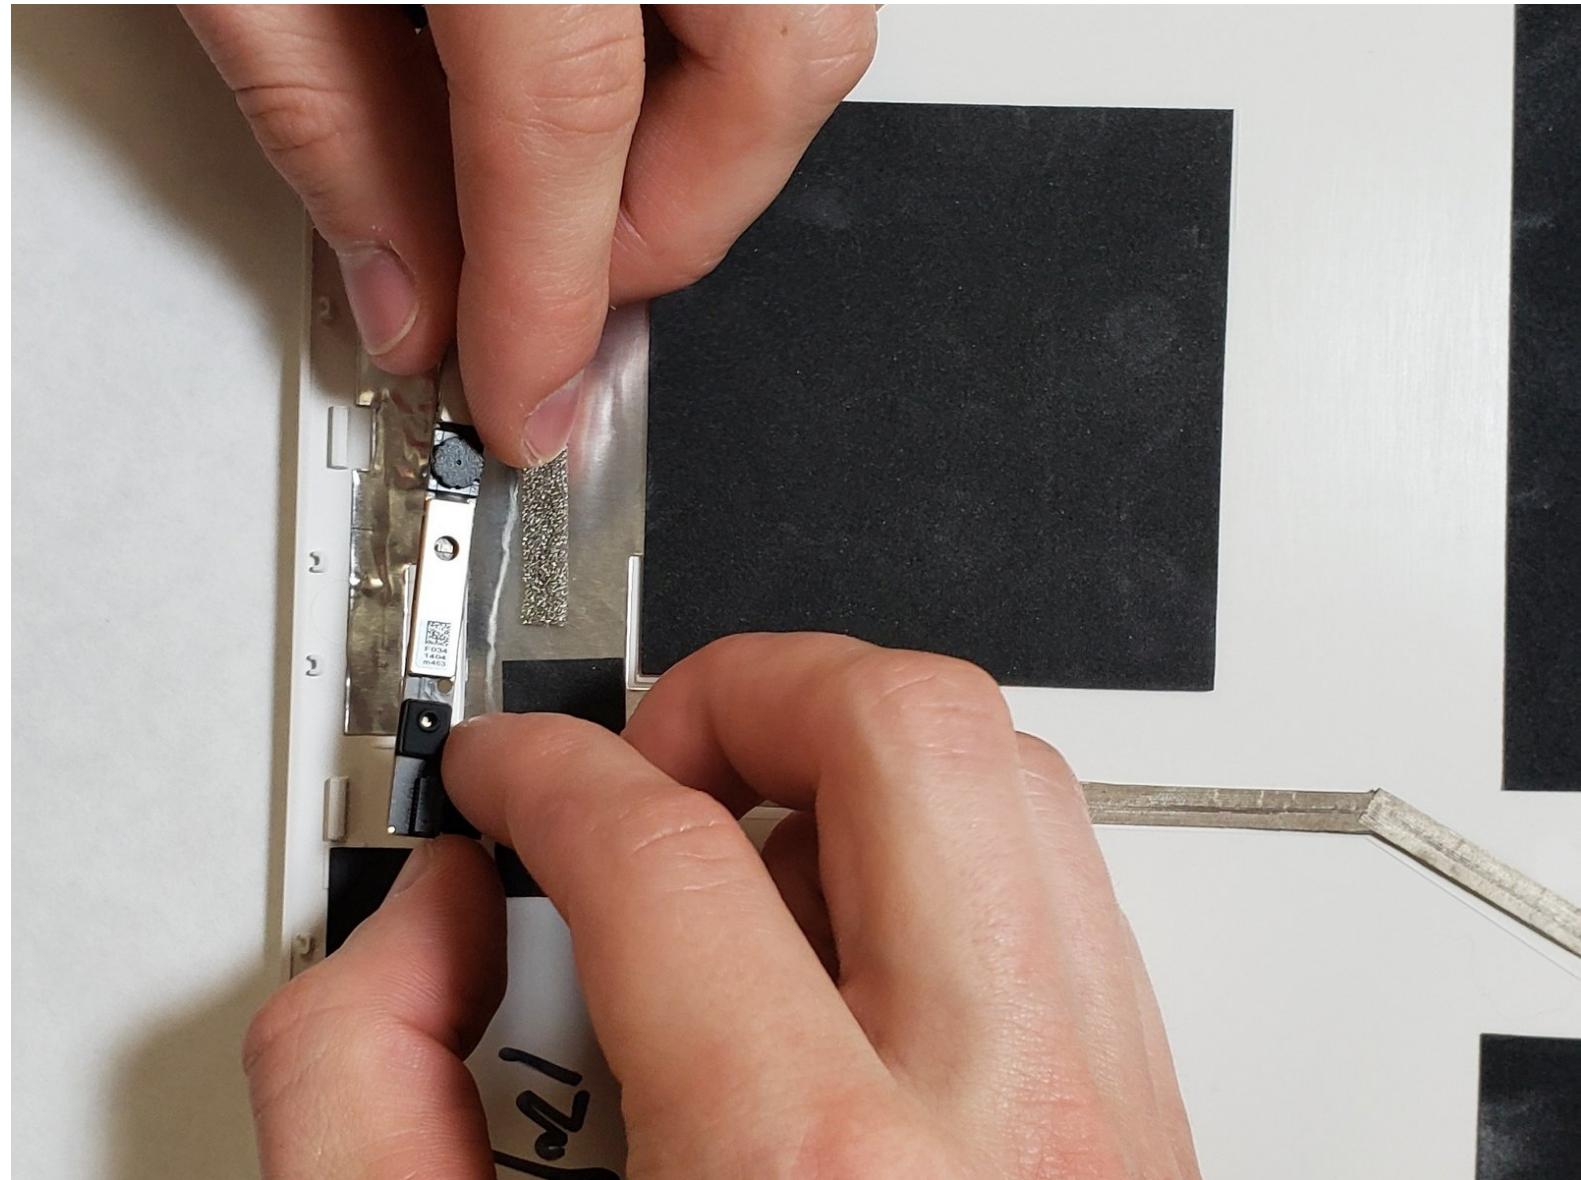

Lenovo Ideapad 110S-11IBR Webcam Replacement

This guide will allow an owner to successfully remove the webcam from the Lenovo Ideapad 110S-11IBR.

Written By: Samaa Aldar



This document was generated on 2020-04-04 11:32:09 PM (MST).

INTRODUCTION

This guide will allow any owner of a Lenovo Ideapad 110S-11IBR to undergo the process necessary to remove and replace the webcam of the device. To do so, simply follow the given steps, starting with the removal of the back panel, loosening of the screen hinges, and eventually removal of the screen, followed by the webcam. Although the webcam can be removed without removing the screen, it is tricky to do so, and is not recommended. To reassemble, follow the steps in reverse order.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)

Step 1 — LCD




- Use a Phillips #0 screwdriver to remove the eleven 3.7 mm screws from the bottom of the Chromebook.

Step 2

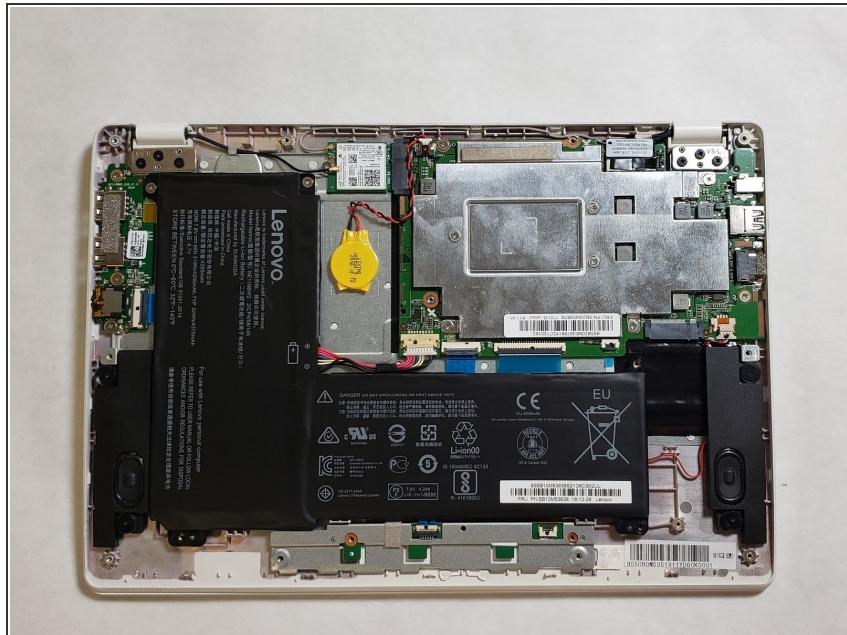


- Remove the back cover, showing the internal components.

Step 3

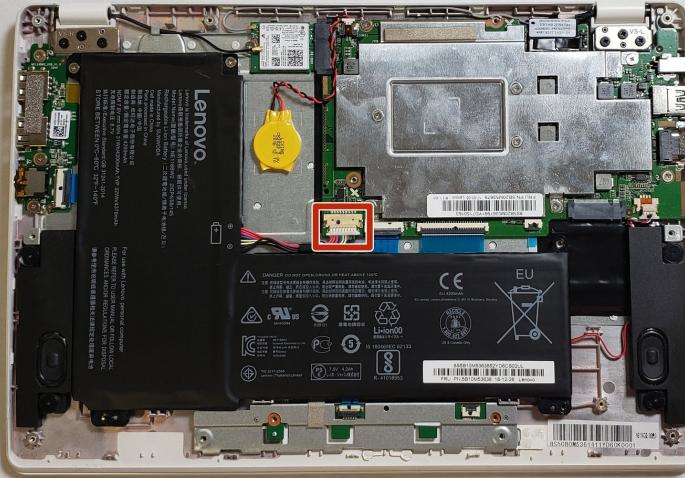

- Use a plastic opening tool or spudger to push the battery's bundled connector out of its socket.

Step 4

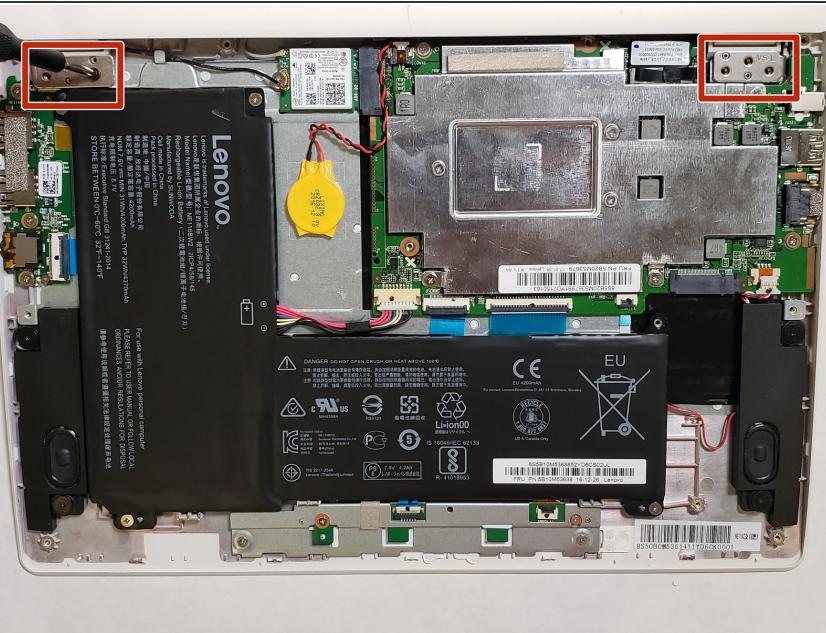


- Use a Phillips #0 screwdriver to remove six 4.6 mm screws that connect the screen hinge assembly.

Step 5




- Remove the frame from the screen utilizing the iFixit opening tool.

Step 6

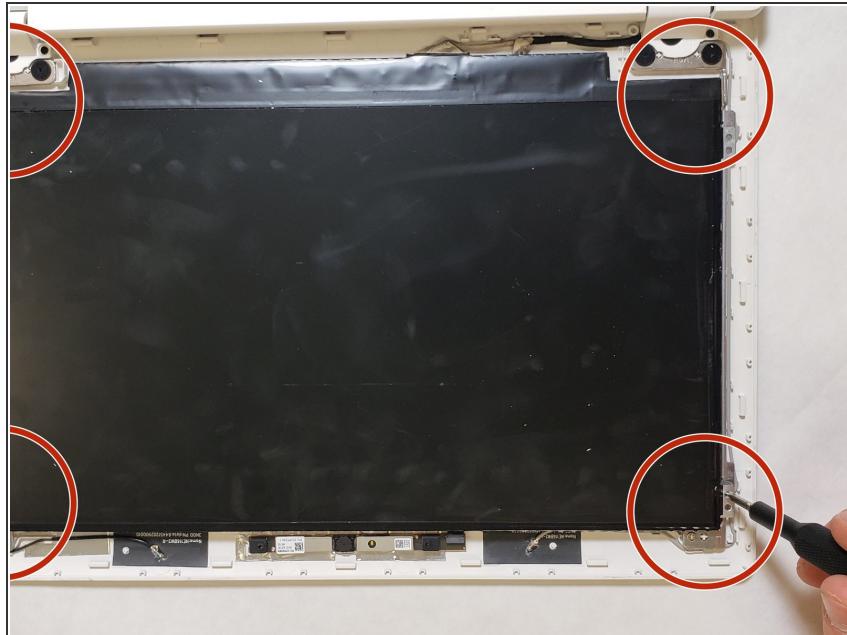


- Remove 4-2.7mm Philips size 0 screws from the screen utilizing the iFixit screwdriver.

Step 7

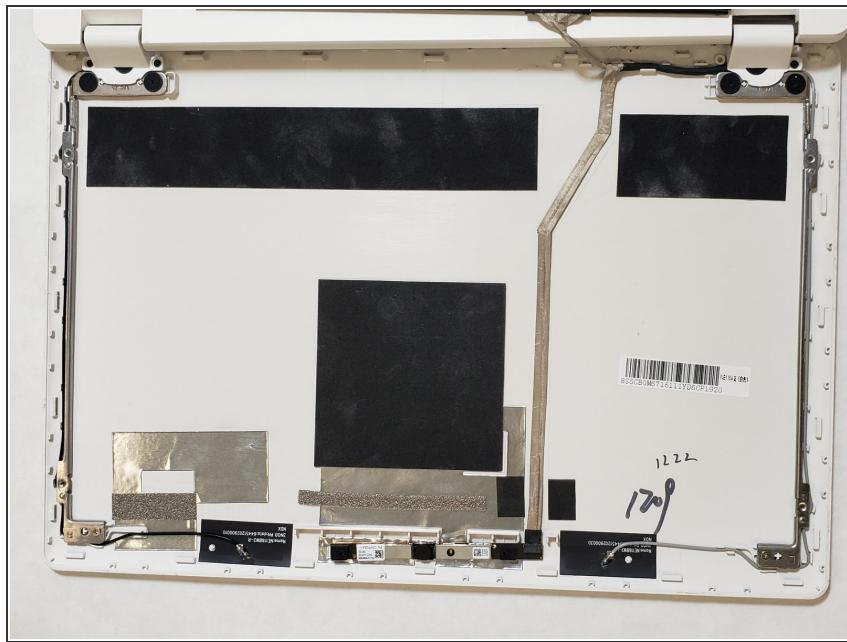


- Remove the screen.

Step 8 — Webcam

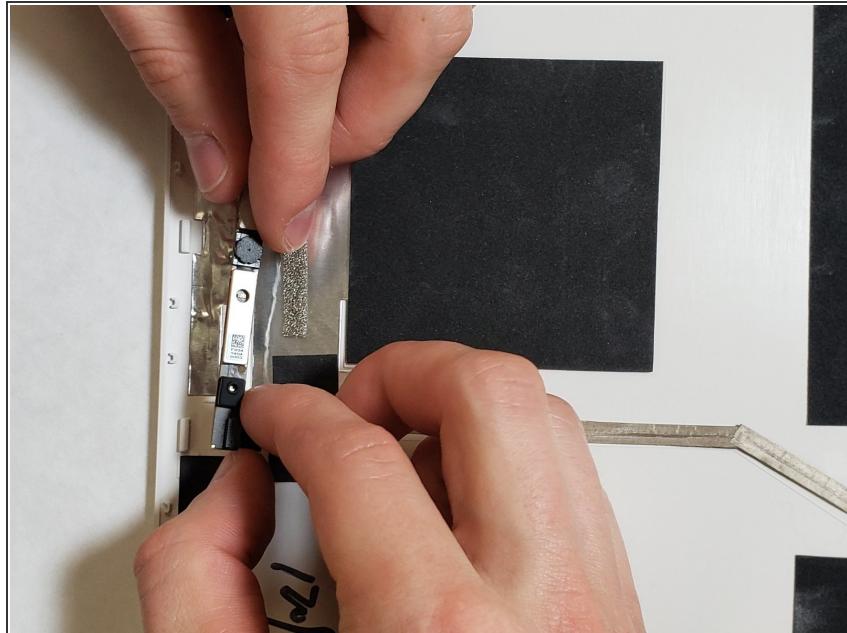

- Remove the connector from the webcam.

Step 9

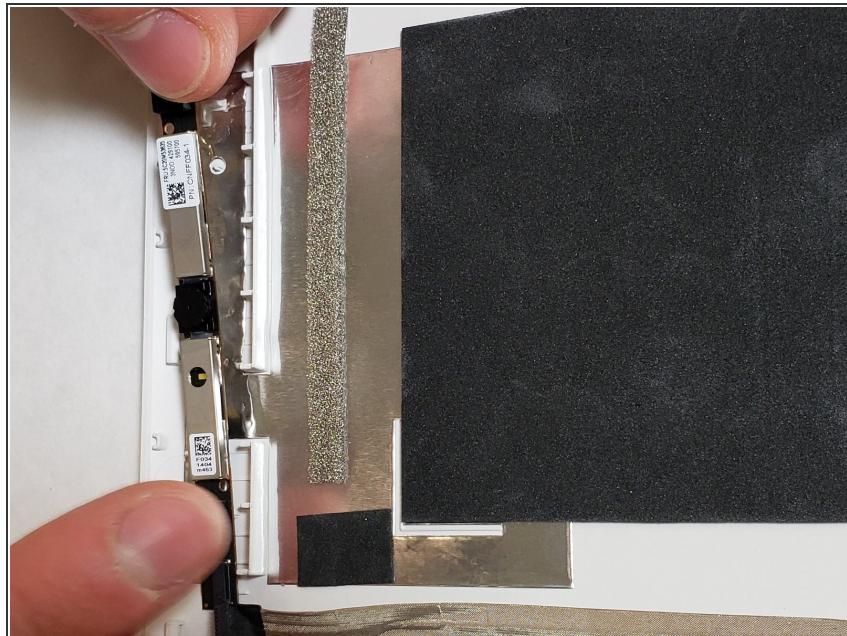

- Use a plastic opening tool to free the camera assembly from the adhesive.

To reassemble your device, follow these instructions in reverse order.