



# Lenovo Ideapad 120s-14IAP LCD Screen Replacement

This guide will assist you in removing and replacing the LCD screen for the Lenovo Ideapad 120s-14IAP.

Written By: Kyle P Sumpter



This document was generated on 2020-04-05 03:33:29 PM (MST).

## INTRODUCTION

If you need to replace a faulty LCD screen in a Lenovo 120s-14IAP, this guide will help you step by step. But be sure to be gentle with the LCD's electrical connector on the last step.

### TOOLS:

- **Jimmy** (1)
- **Phillips #0 Screwdriver** (1)

### PARTS:

- **Ideapad 120S-14IAP Type 81A5 LCD LED Replacement Screen** (1)

## Step 1 — LCD Screen



- Open your laptop and insert the Jimmy into the space between the plastic screen cover and the laptop back.
- Run the Jimmy along the edge and carefully pull the cover outward as you go.
- Once you have completely detached the screen cover from around the edges, gently pull and remove the cover.

## Step 2



- Remove four Phillips #0 screws from the corners of the LCD screen to detach the screen from the mounts.

**⚠** The screen is still attached by an electrical connector at the bottom, so don't completely remove the screen quite yet. Be ready to catch the top, as it will want to fall forward.

## Step 3



- Lean the LCD screen forward to expose the display connection near the base.
- Remove the display connector by placing your thumbnail under the connector latch, and gently pull the LCD screen.
- The LCD screen can now be removed.

To reassemble your device, follow these instructions in reverse order.