




Lenovo Ideapad 320-17IKB Battery Replacement

This guide will help the user remove their Lenovo IdeaPad 320-17IKB battery.

Written By: a1235

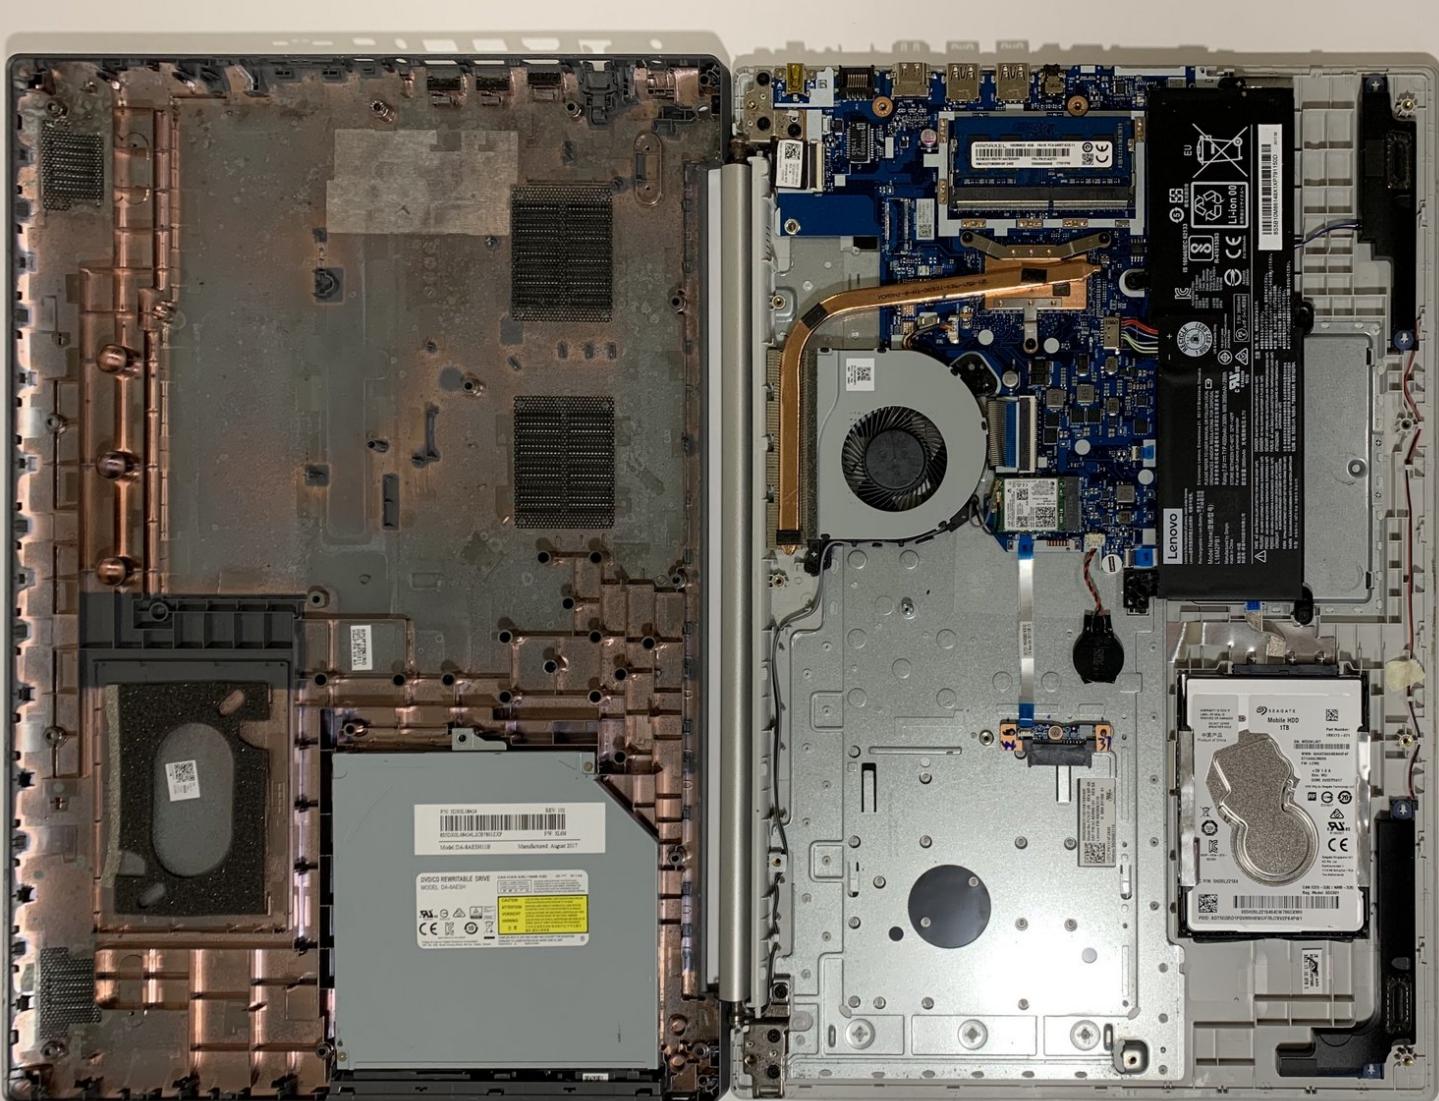

INTRODUCTION

Use this guide to replace the battery within the Lenovo IdeaPad 320 17-IKB.

The battery is a component within the laptop that powers up the device. Over time, the device can lose its ability to hold a charge by up to 20% after 1,000 charges.

Before using this guide check out the [Lenovo IdeaPad 320-17IKB Troubleshooting](#) page for helpful diagnostic information. Often times the battery can be fixed without replacing it.

Use caution when removing the lithium ion battery as it can create a small explosion or fire if opened or bent.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel





- Turn off and unplug the computer.
- Flip the laptop over so that the back panel is facing upwards.

Step 2

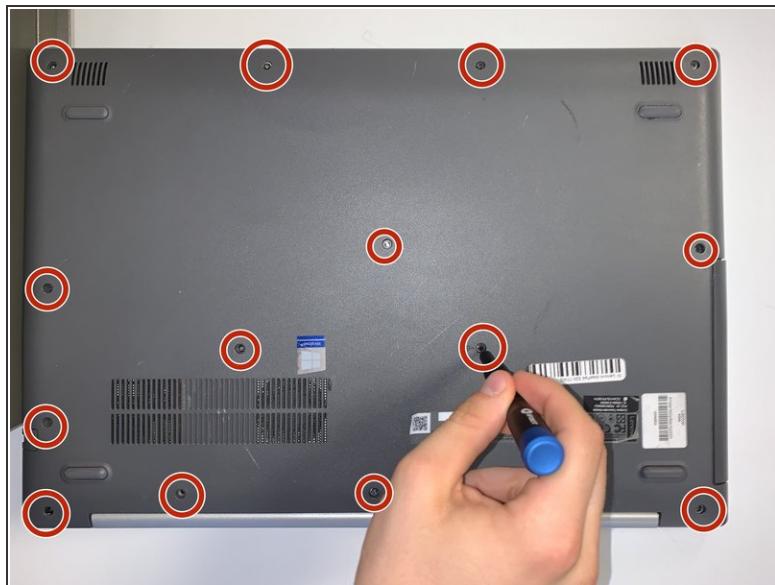


- Remove fourteen 7mm Phillips #00 screws from the back panel.

Step 3

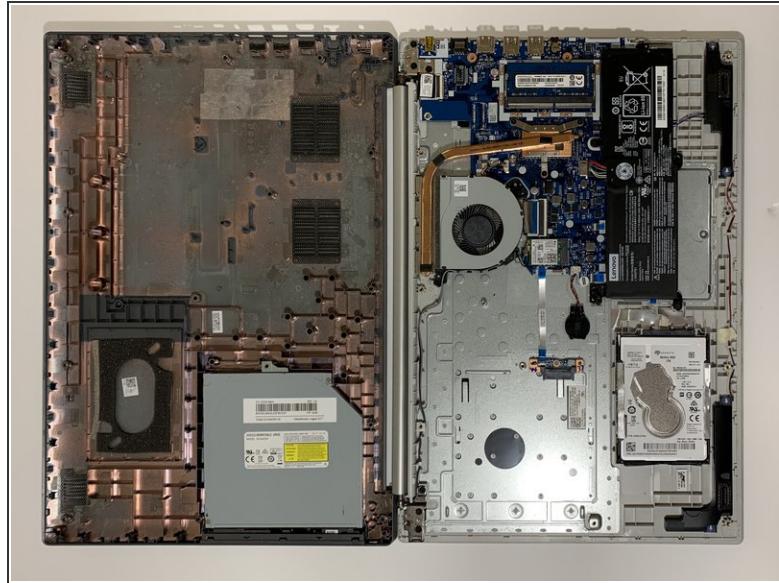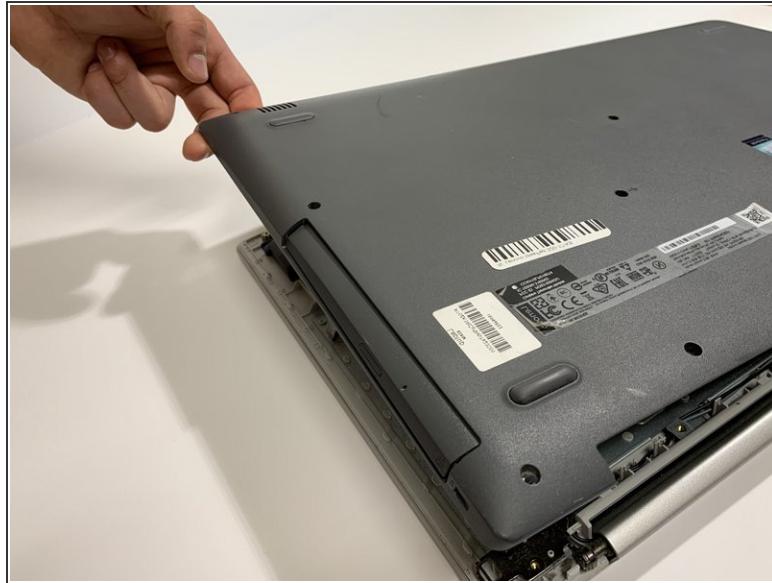



- Use your fingers or an opening tool to gently remove the back panel from the bottom of the laptop.
- Lay both sides of the laptop next to each other.

Step 4 — Battery

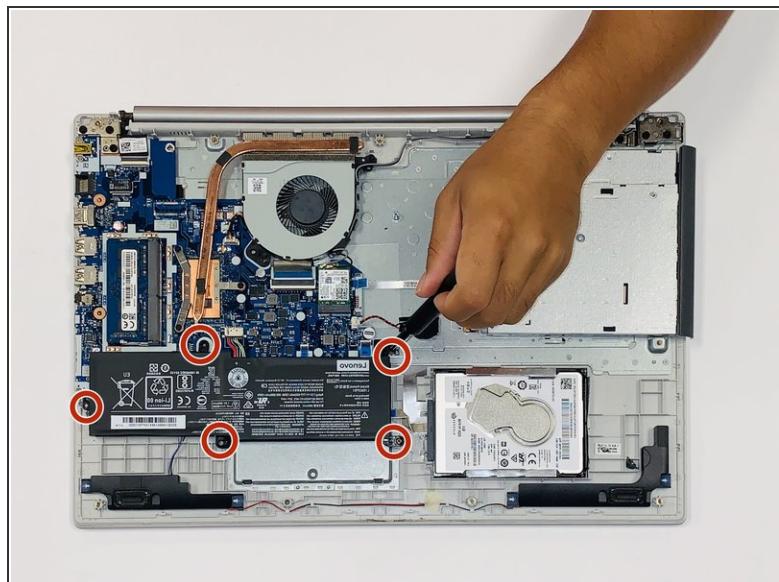

- Remove five 7mm Phillips #0 screws from the battery holder.

Step 5

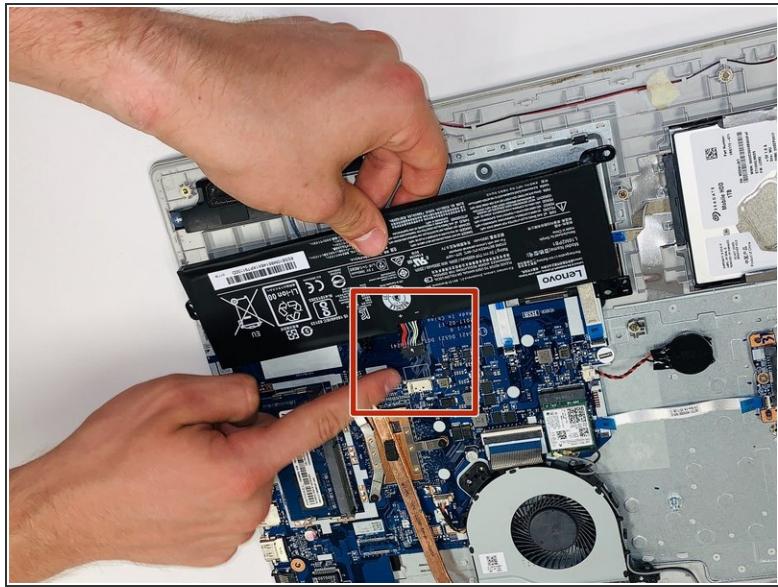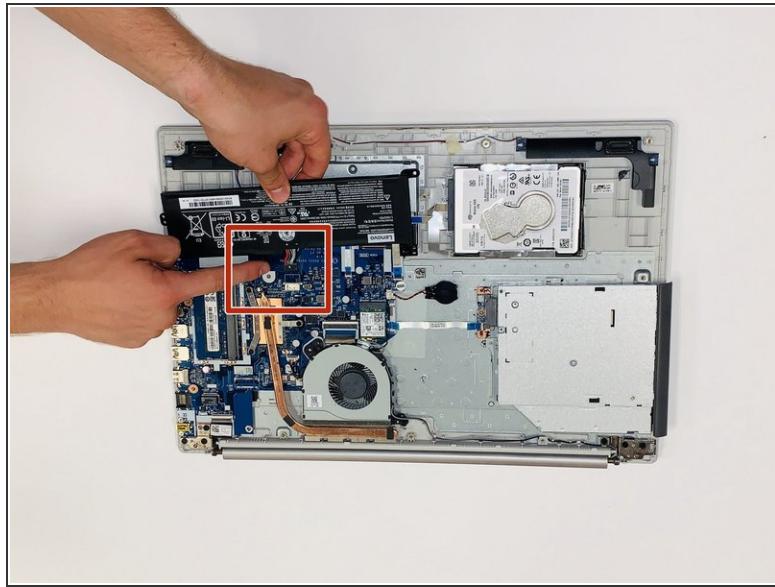

- Pinch the connecting cord with one hand and pry the battery connector with the other hand, while gently pulling the connector straight out and towards the bottom edge of the base.

⚠ When removing the battery, use care to keep it flat and do not open the battery because it can result in fire or explosion.

To reassemble your device, follow these instructions in reverse order.