



Lenovo Ideapad Flex 4-1570 Hard Drive Replacement

Replacing your battery to increase the amount of memory on your laptop.

Written By: Isaiah Vang



INTRODUCTION

If the laptop is lagging, and the mouse is slow to react, use this guide to replace your hard drive.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Panel



 Turn off your laptop before you begin.

Step 2

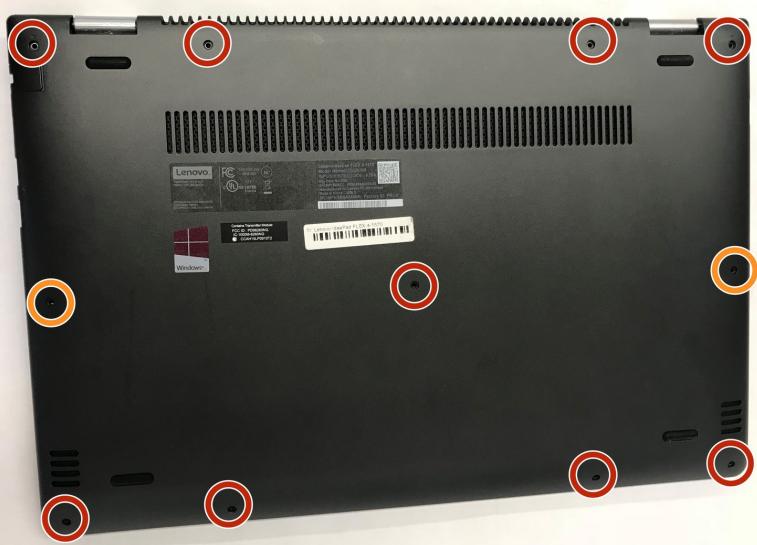



- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.

Step 3



- After all of the screws are removed, use a plastic opening tool to carefully pry the black cover off.
- Remove the back cover.

Step 4 — Hard Drive

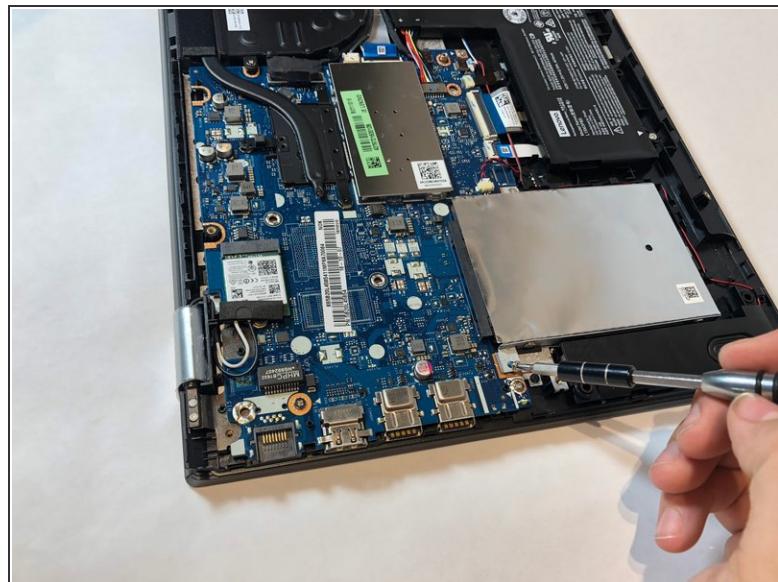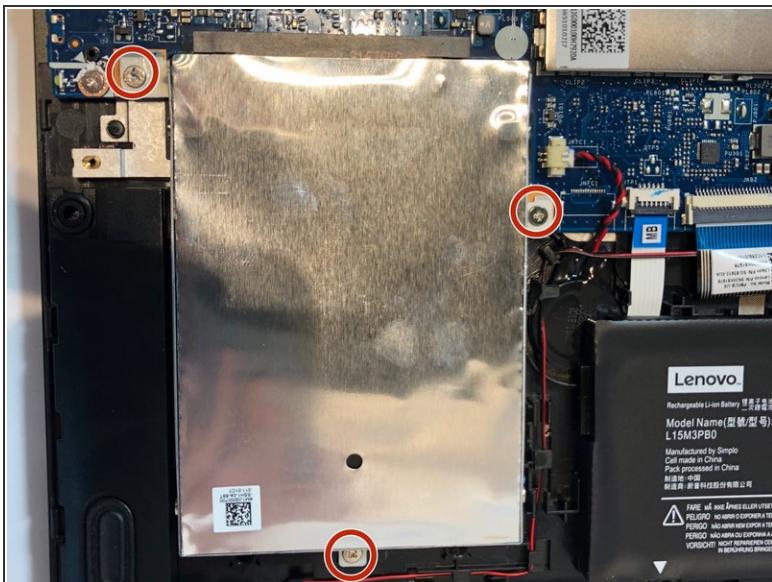

- Remove the three 4 mm Philips screws circled in the picture using a T5 Torx Screwdriver.

Step 5



- Lift it upwards and pull out the hard drive.

To reassemble your device, follow these instructions in reverse order.