



Lenovo Ideatab A1000 Teardown / Take apart / Disassembling

Lenovo Ideatab A1000 Teardown / Take apart / Disassembling

Written By: ZFix



INTRODUCTION

How to completely disassemble your tablet.

_____ **Video tutorial:**_____

[video: <http://youtu.be/rgX0-UzZT3o>]

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Lenovo Ideatab A1000 Teardown / Take apart / Disassembling



- Unscrew the two Phillips screws under the memory card and the SIM card covers.
- Use a plastic tool and remove the back cover.

Step 2



- Unscrew the 8x screws and remove the mother board cover.
- Disconnect the battery connector.

Step 3



- Volume Buttons, Power Button and Vibration motor
- Audio Jack Connector, Touch Screen Flex Cable connector, LCD Display Flex Cable Connector.
- Wi-Fi Antenna Connector, Speaker Connector, GPS Antenna Connector.

Step 4




- Remove the lower speaker and the microphone.
- Unstuck the Power button, Volume buttons and Vibration motor from the middle frame.
- Unhook the LCD Display and the Touch screen flex cables.
- 2x Phillips screws securing the main board.

Step 5



- Remove the Logic board.
- Be careful, the mother board is sticked to the front outer case.

Step 6

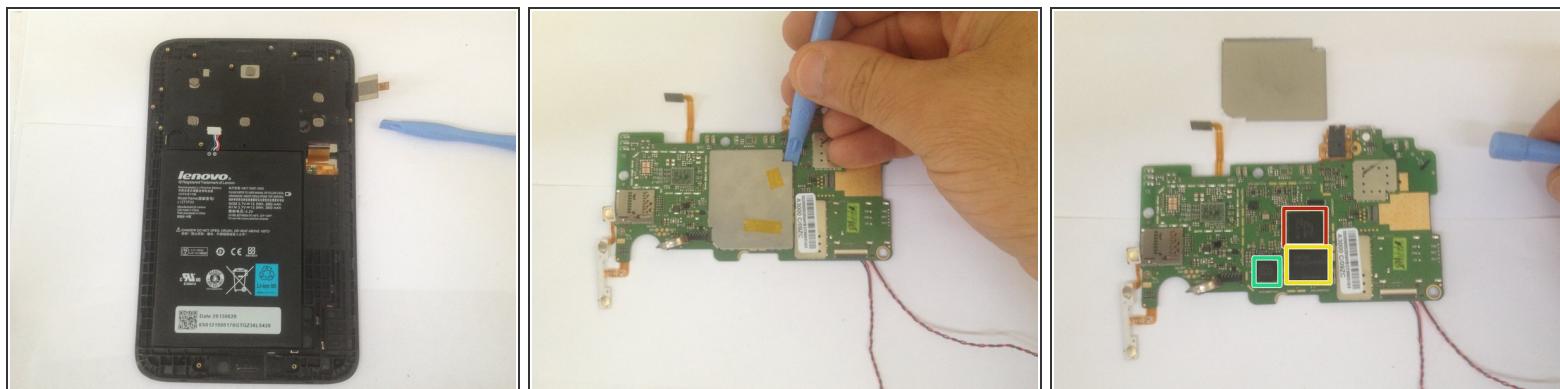

- CPU - Mediatek, MT8317ATA
- Memory chip - eMMC(16GB)+LPDDR2(1GB) - KMK3U000VM-B410
- Power management chip - Mediatek MT6329BA
- .
- .
- That's all.

To reassemble your device, follow these instructions in reverse order.