



Lenovo Slim DVD Burner DB65 Disc Tray Locking Mechanism Replacement

This guide shows how to take apart the Lenovo Slim DVD Burner DB65 to replace the disc tray locking mechanism.

Written By: Matthew Green



This document was generated on 2019-09-18 09:55:37 PM (MST).

INTRODUCTION

This guide shows how to take apart the Lenovo Slim DVD Burner DB65 to replace the disc tray locking mechanism.

TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Fingers](#) (1)
- [Paper Clip](#) (1)

Step 1 — Disc Tray Locking Mechanism





- Flip the unit over so that way the bottom is facing you.
- Remove the two black 7.6mm Phillips #0 screws from the bottom cover.

Step 2

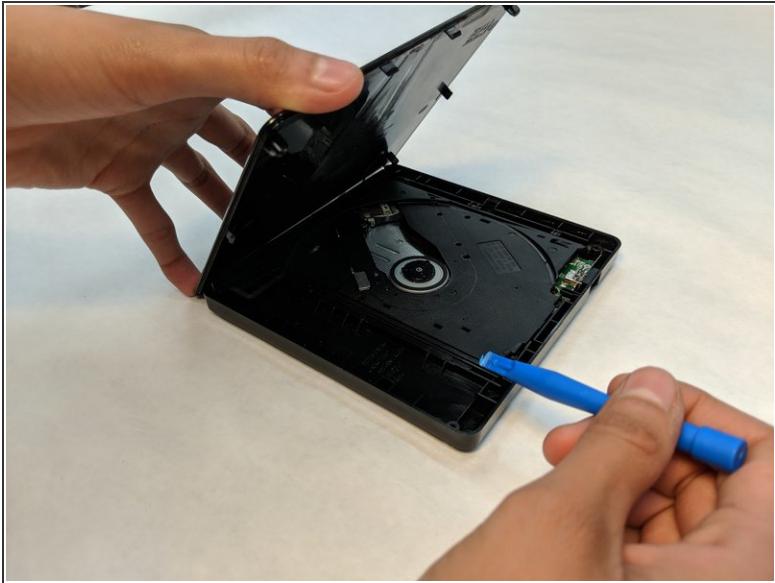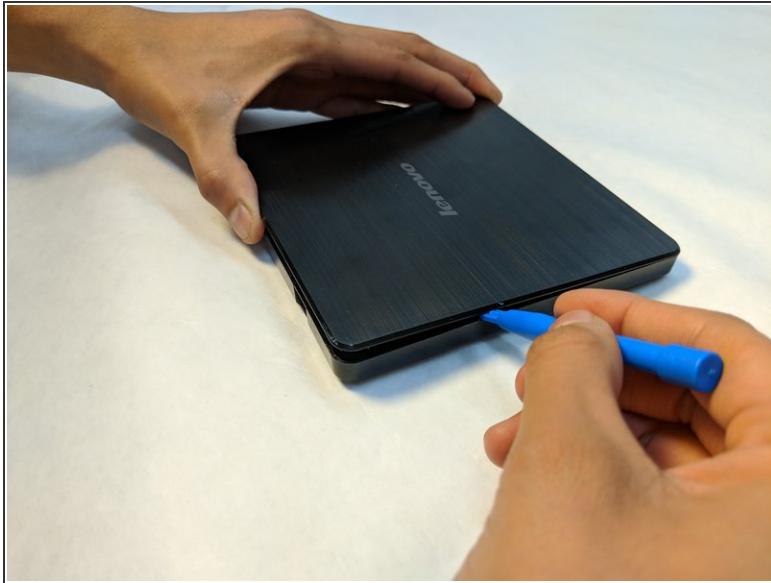



- Use the iFixit Opening Tool to gently pry the unit apart to gain access to the interior.
- If the top seems stuck, run the iFixit Opening Tool along the edge while simultaneously pulling up on the top with your fingers. Continue to apply pressure until it opens completely.

Step 3

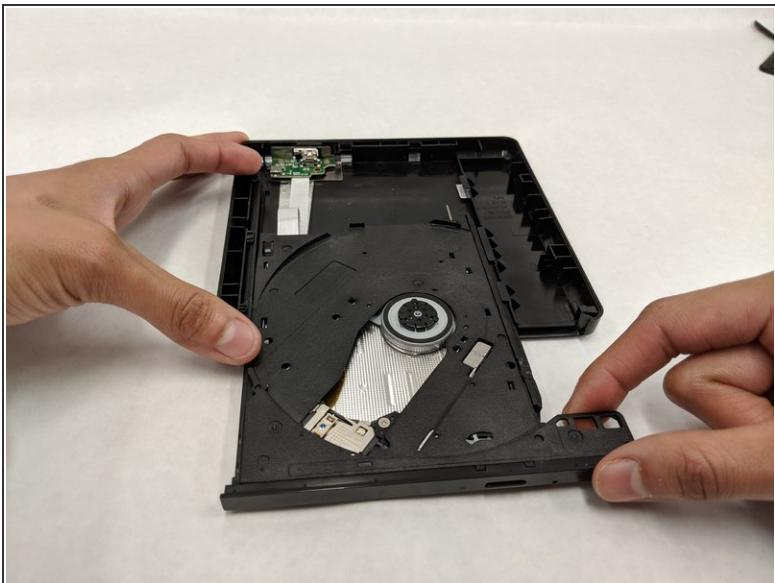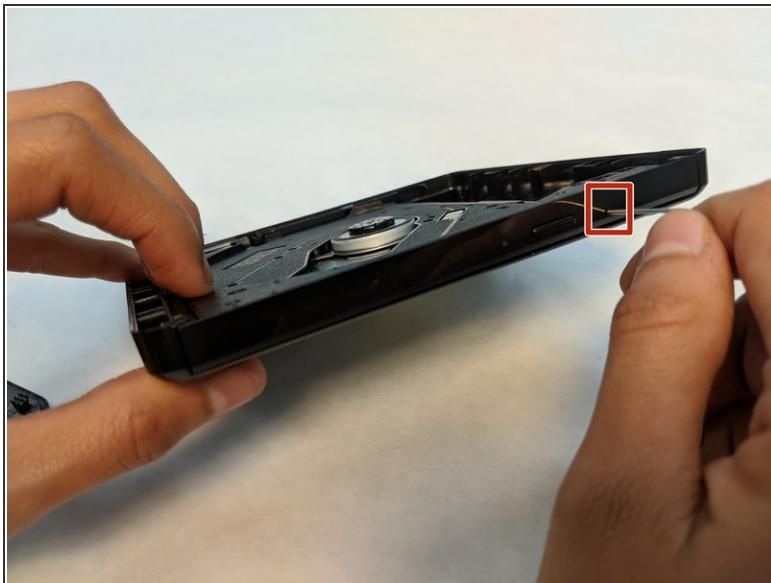


- Open the device tray by inserting a paper clip into the eject hole.

Step 4

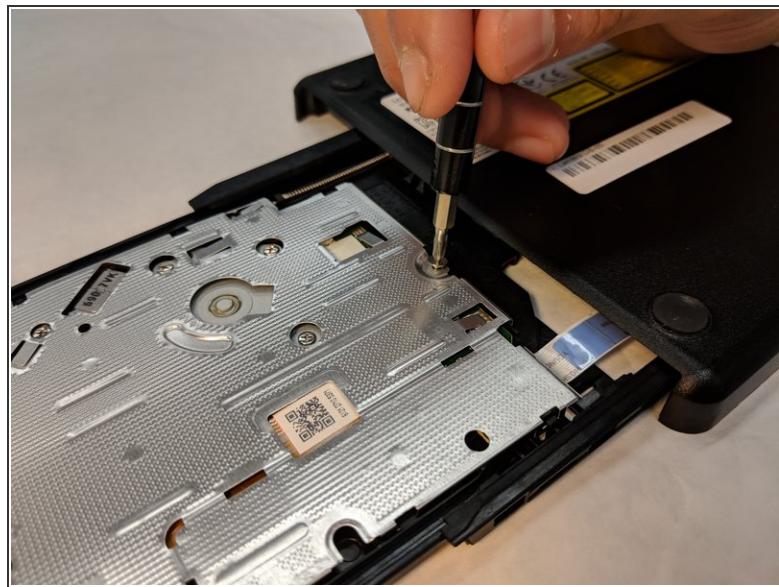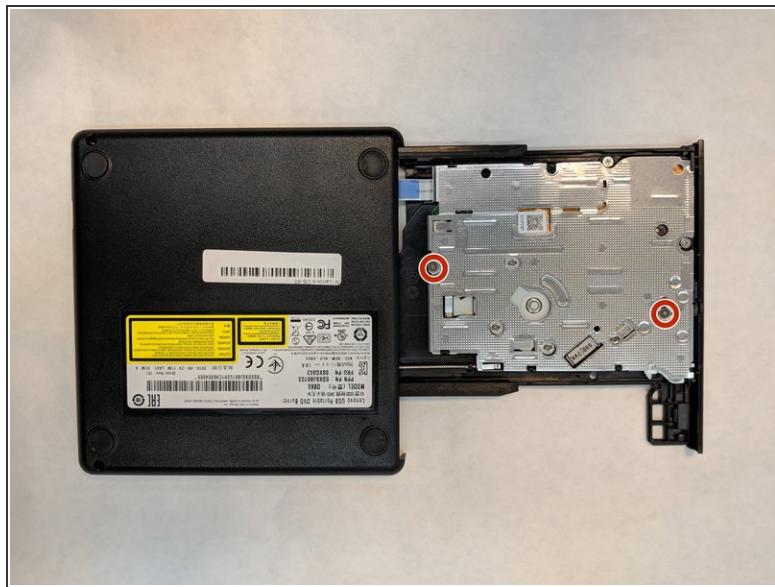


- Turn the unit over and remove the two silver 3mm Phillips #0 screws from the aluminum cover.

Step 5

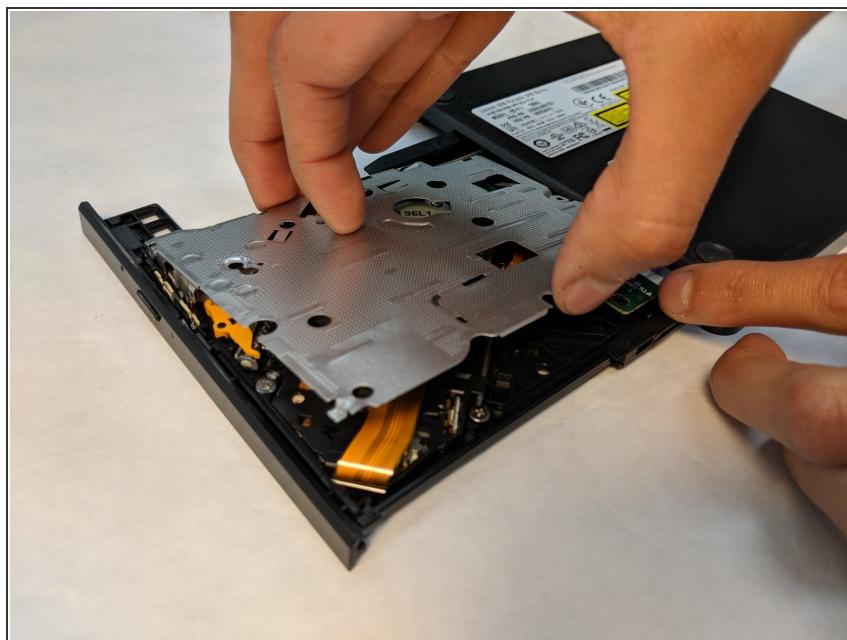


- Lift the silver cover up to expose the internal components.
- *i* If the cover seems stuck gently pull up on one edge. The cover should remove completely after one side is free.

Step 6

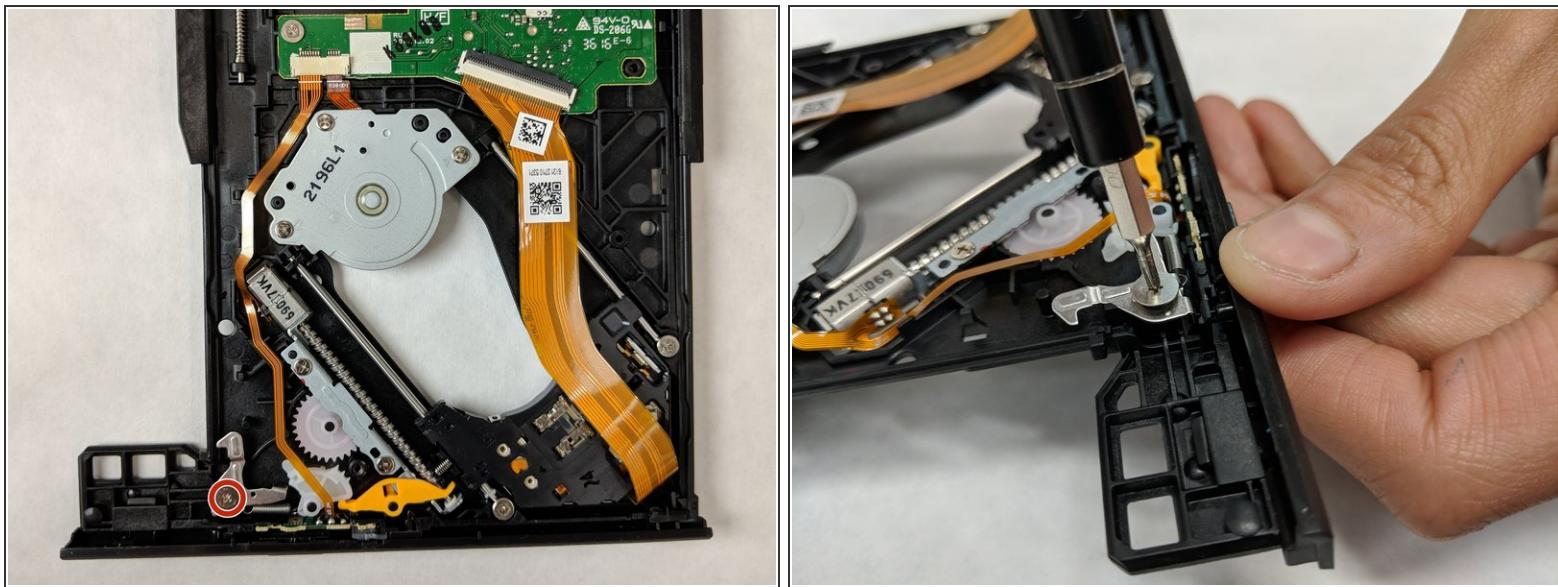

- Remove the single 3mm Phillips #0 screw.

Step 7

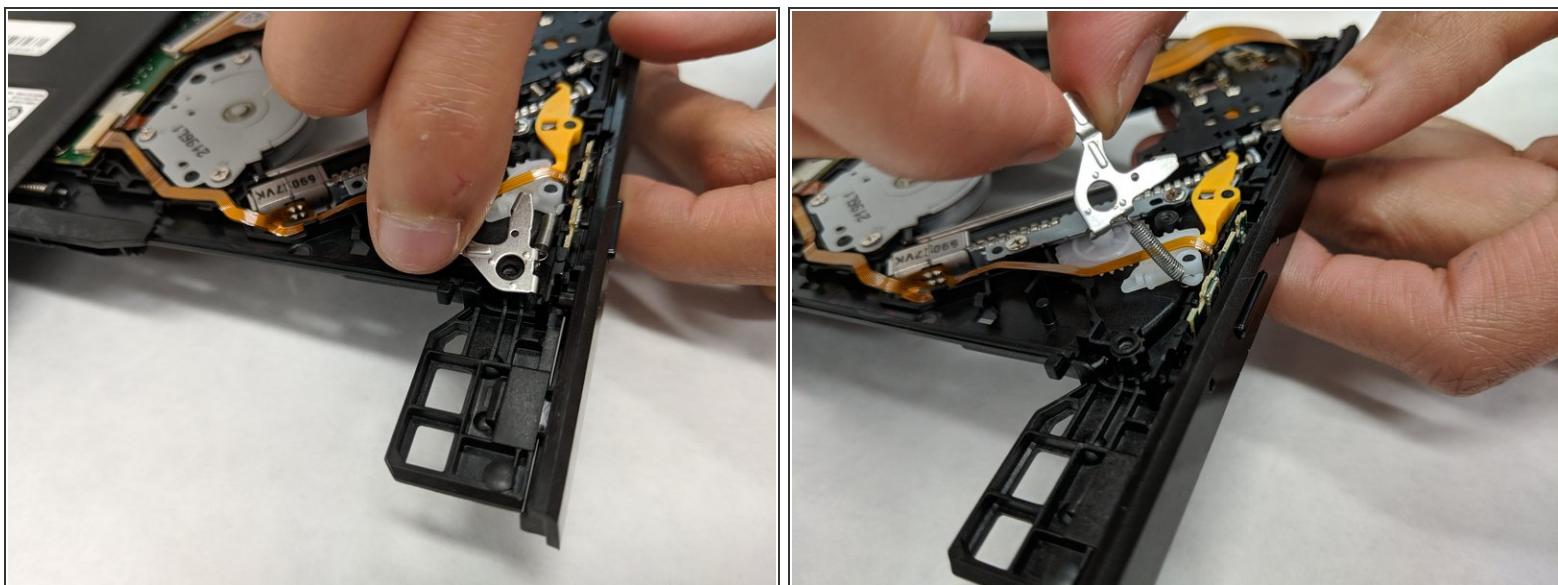

- Lift and remove the silver tray locking mechanism by detaching the spring which is hooked on the white plastic internal component.

 Be careful when removing this mechanism—the spring is delicate.

To reassemble your device, follow these instructions in reverse order.