



Lenovo ThinkPad E540 Battery Replacement

A guide to replacing the battery of your Lenovo Thinkpad E540.


Written By: Timothy Sumner



INTRODUCTION

A guide to replacing the battery of your Lenovo Thinkpad E540.

Step 1 — Battery

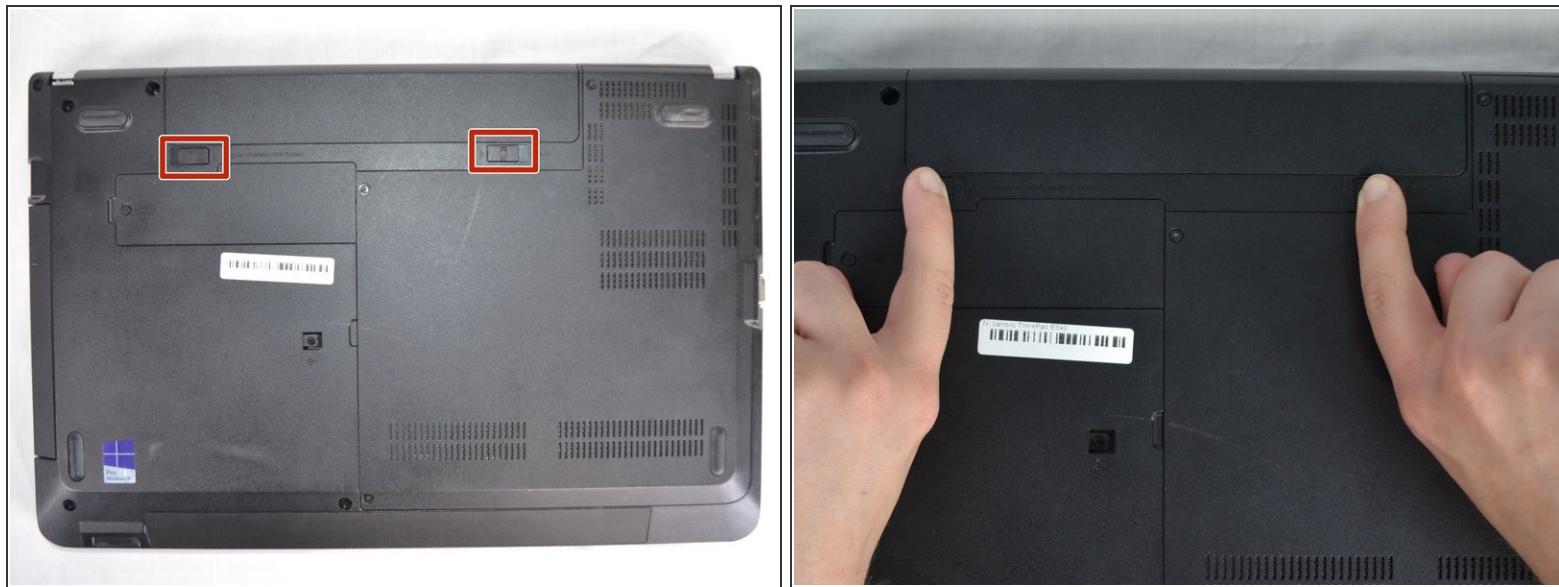

- Push the battery release switches away from each other.

Step 2



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.