



# Lenovo ThinkPad HK11e Battery Replacement

## How to replace the battery on a Lenovo ThinkPad HK11e.

Written By: Sam Dahdal



This document was generated on 2020-04-04 06:19:47 PM (MST).

## INTRODUCTION

This tutorial will show how to replace a built-in battery on a Lenovo ThinkPad HK11e with the 14 inch screen.

### TOOLS:

- [T10 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Battery



- Make sure the Lenovo laptop is shut off.
- Turn over laptop and lay it on its face exposing the back-plate screws.

## Step 2



- Find the six screws that hold together the back plate.
- Carefully unscrew the six 3.3 mm screws that fasten the back plate using the T5 Torx screwdriver.

## Step 3



- Use a plastic opening tool or a spudger to carefully remove the back plate.

## Step 4



- Battery is located in the bottom right portion of the laptop.
- Find the three screws that mount the battery.
- Carefully unscrew the three 3.5 mm screws that fasten the battery down using the T5 Torx screwdriver.

## Step 5



- Notice a connector that joins the battery to the laptop.
- Slowly disconnect the connector by pulling back on the six-wire harness.

## Step 6



- Remove the battery from its assigned location.

## Step 7



- Reverse steps to mount new battery correctly.

To reassemble your device, follow these instructions in reverse order.