


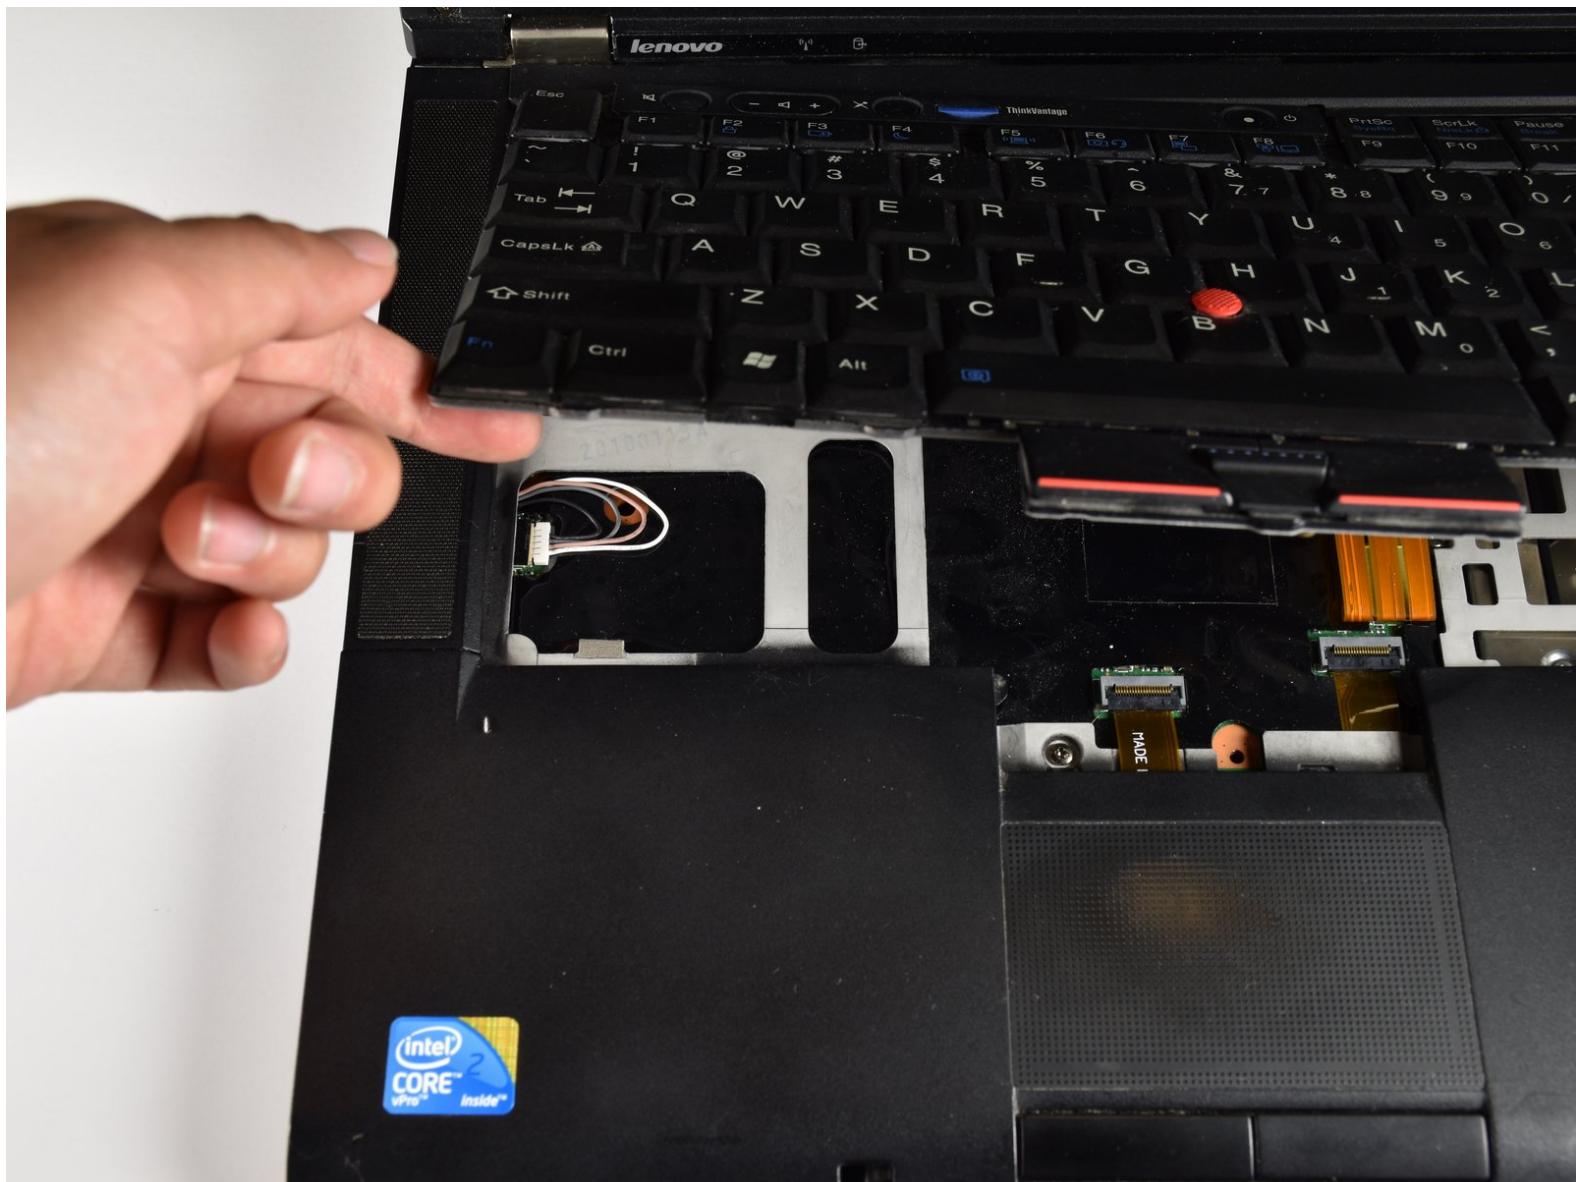

Lenovo ThinkPad T400s Keyboard Replacement

Replacing the keyboard for a Lenovo ThinkPad T400s.

Written By: Morgan Montalvo



INTRODUCTION

This guide will show you how to replace the keyboard.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Standard

- [iFixit Opening Tools](#) (1)

Small

PARTS:

- [Lenovo Keyboard - 45N2211](#) (1)

Step 1 — Keyboard




- Remove the Phillips #0-6mm screw.
- Lift up the back cover to the RAM cards.

Step 2



- Pull the lock for the battery to the left to unlock it.
- While holding the tab in the unlocked position, remove the battery.

Step 3

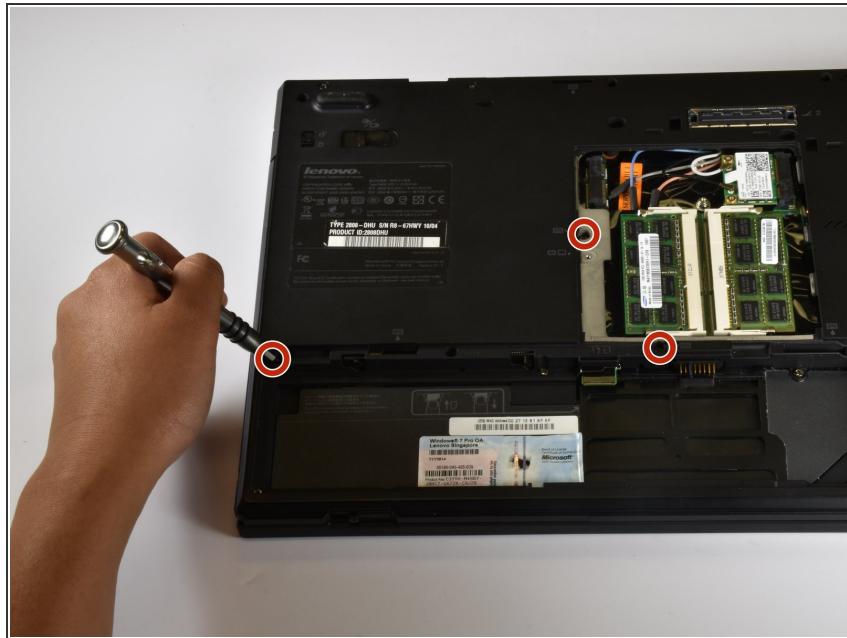


- Remove the three Phillips #0-6mm screws on the back panel.
- *(i)* These screws are marked with a keyboard symbol next to them.

Step 4



- Turn the computer over and open the lid.
- Wedge the small metal spudger between the palm rest and the keyboard.

Step 5

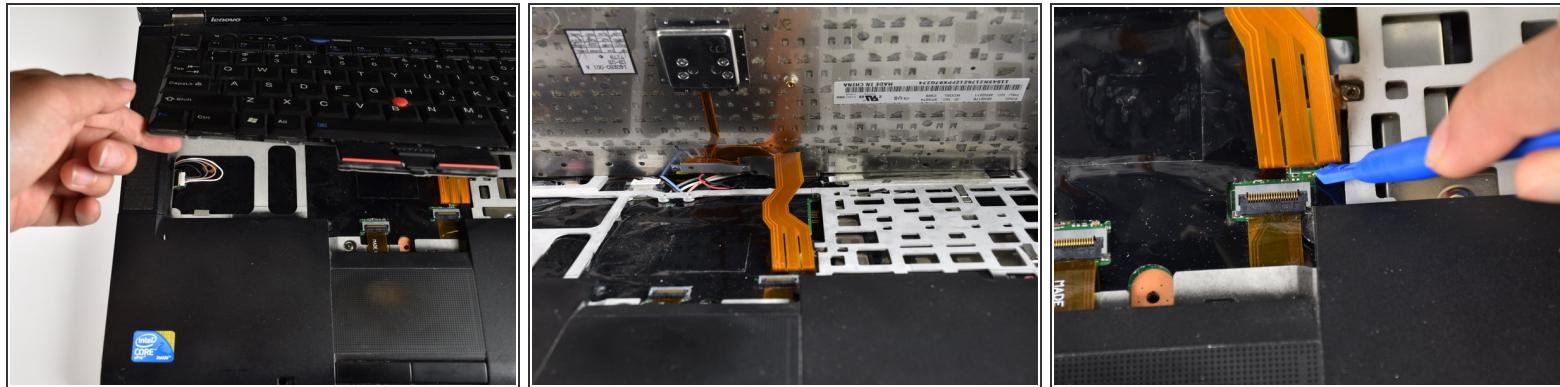

- Lift up the keyboard, but be careful not to completely remove.
⚠ Don't lift the keyboard too quickly, there is a connector cable you must disconnect first.
- Wedge the small plastic opening tool underneath copper band and tilt back.
- Remove keyboard to replace.

To reassemble your device, follow these instructions in reverse order.