




Lenovo ThinkPad T410s RAM Replacement

This guide will demonstrate how to replace the RAM on the ThinkPad T410s.

Written By: Jared Quintana

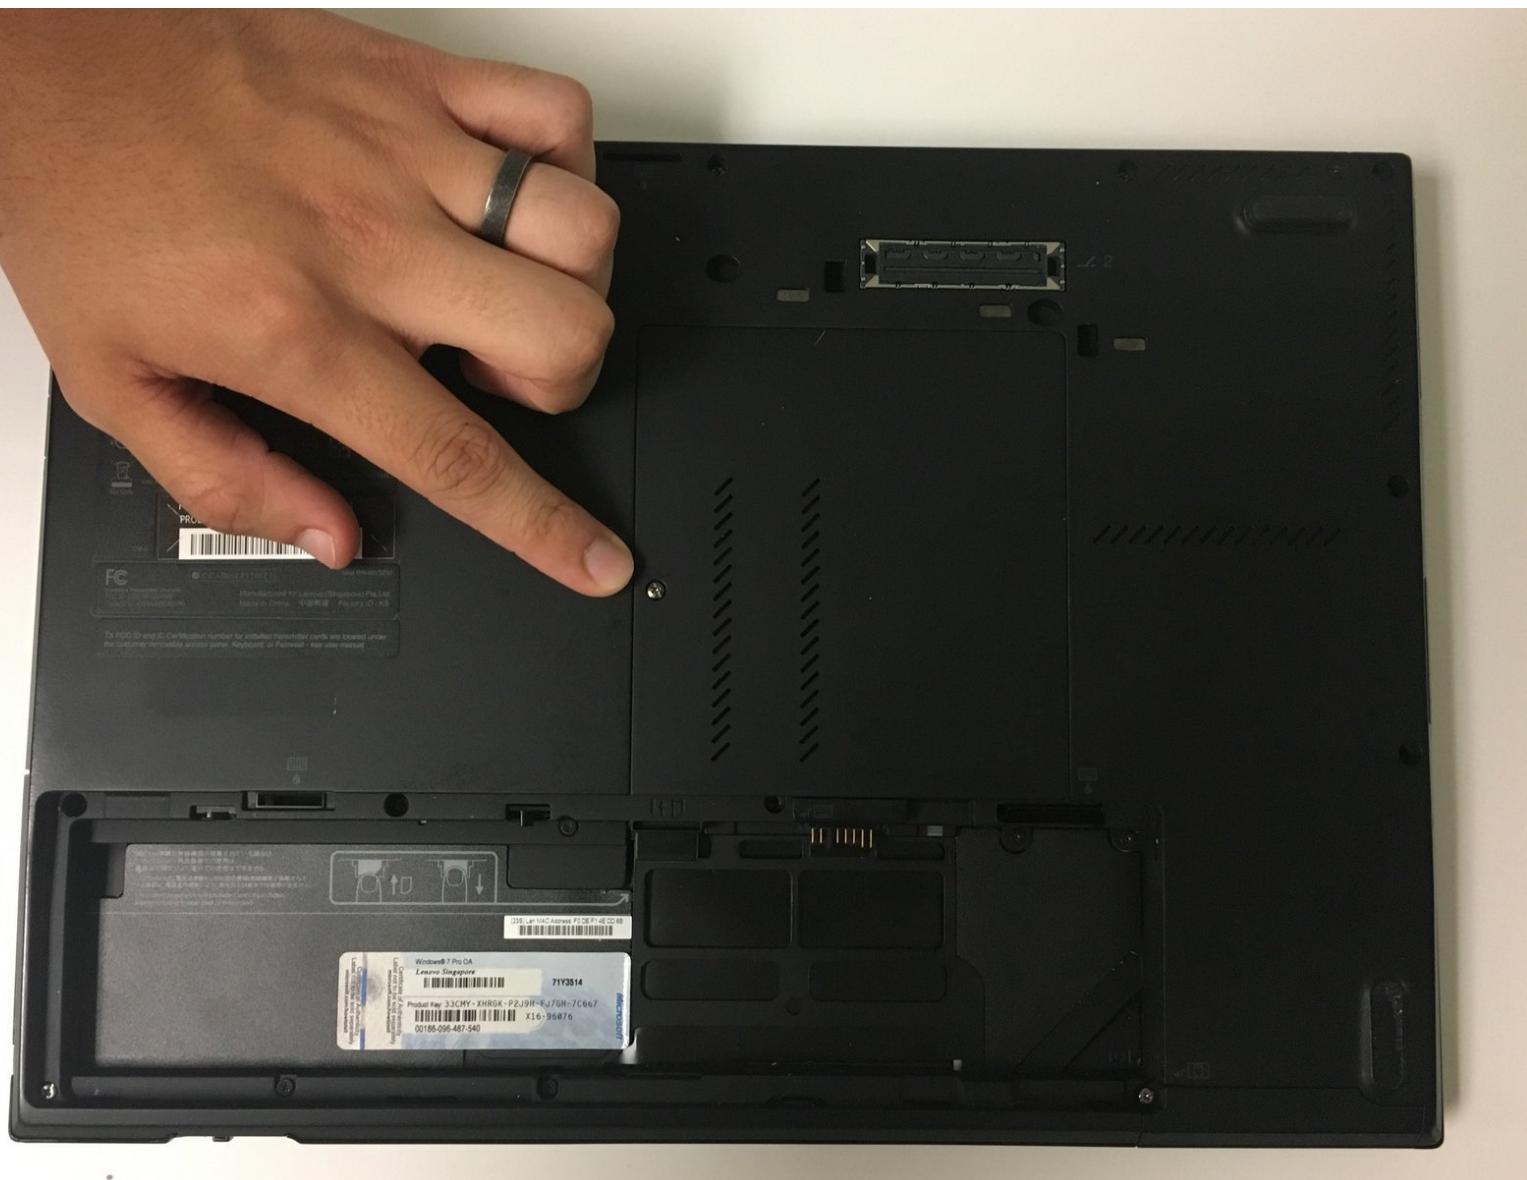


INTRODUCTION

This guide will demonstrate how to replace the RAM on the ThinkPad T410s.

TOOLS:


- Phillips #0 Screwdriver (1)

Step 1 — Battery

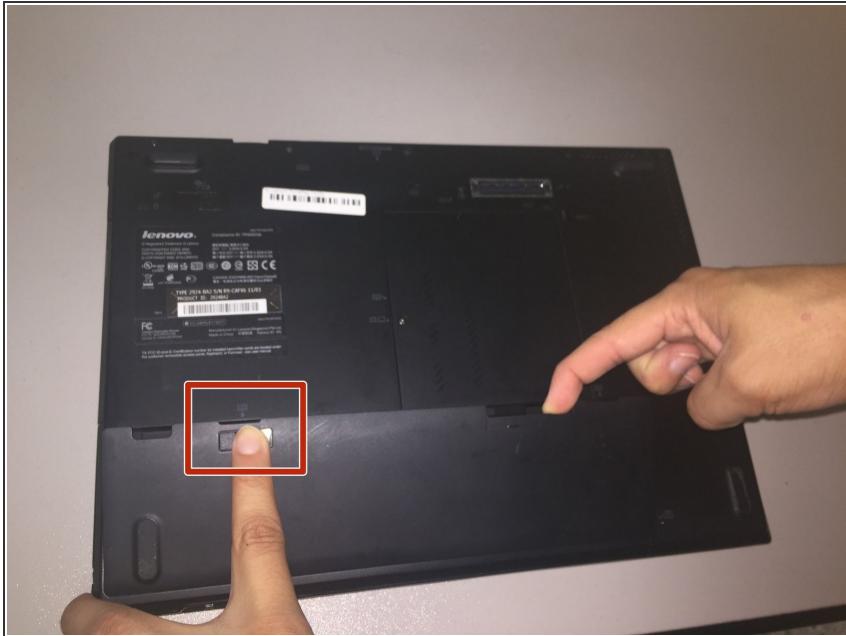

- Flip the laptop over.
- Push and hold the locking switch to the left.
- Pull the battery out with your other hand.

Step 2 — RAM

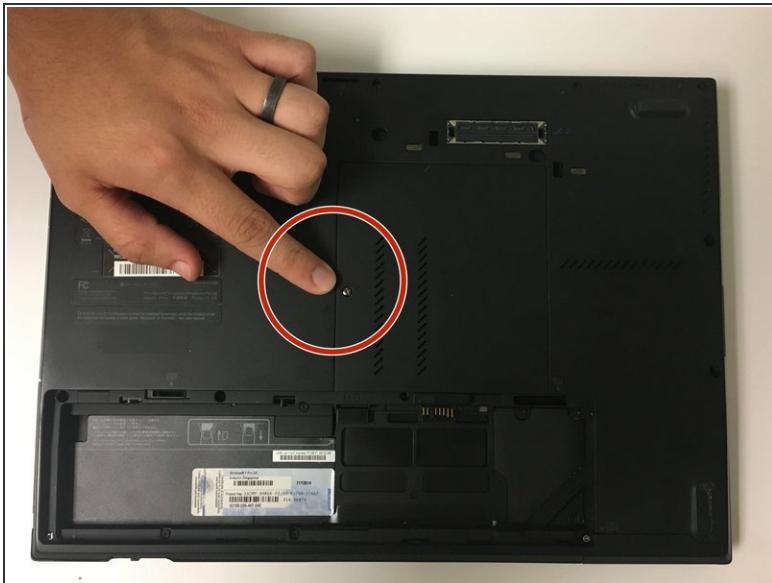

- Remove the single Phillips #0 screw from the back panel.
- Pull the back panel off.

Step 3



- Pull the metal prongs at the side of the RAM away from each other.
- *(i)* The RAM will pop out of its socket when done correctly.
- Pull the RAM out.

To reassemble your device, follow these instructions in reverse order.