




Lenovo ThinkPad T420s LCD Fuse Replacement

Most of the time when the screen becomes constantly dimm/dark it is because the fuse is blown

Written By: Spoofo9t9

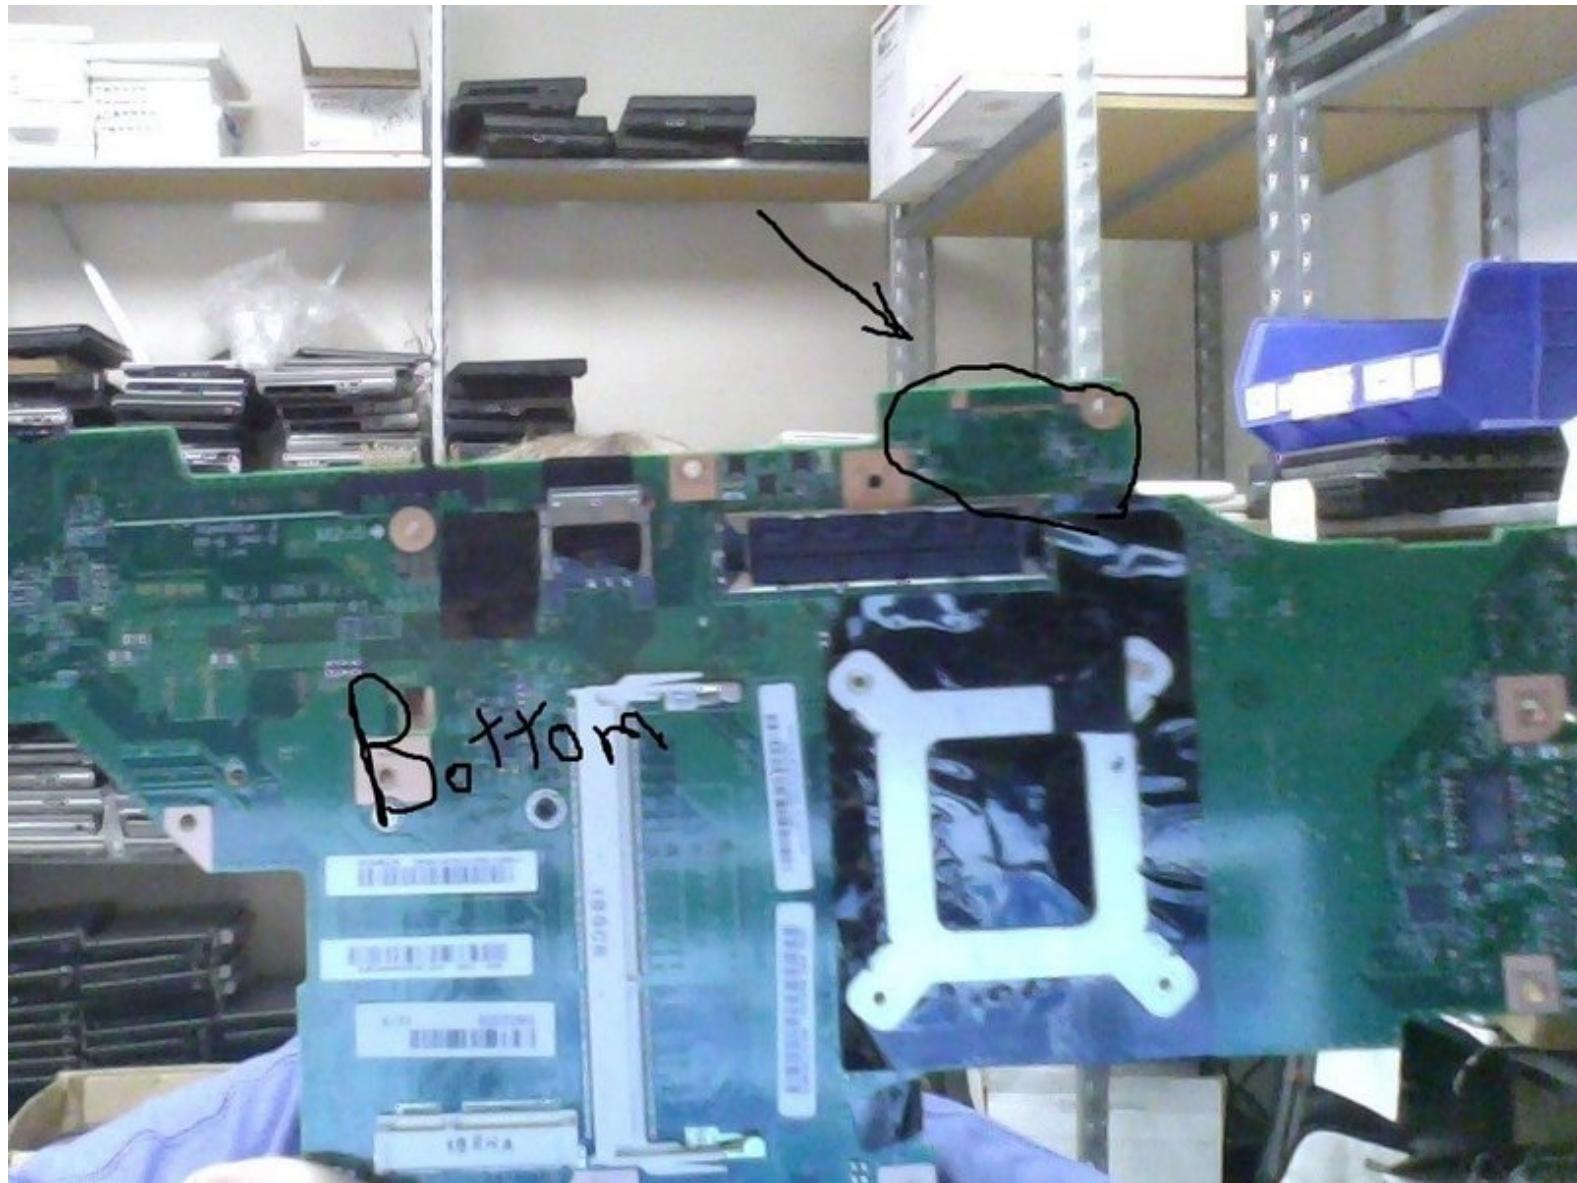



INTRODUCTION

Most of the time when the screen becomes constantly dimm/dark it is because the fuse is blown

TOOLS:

- Metal Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — LCD

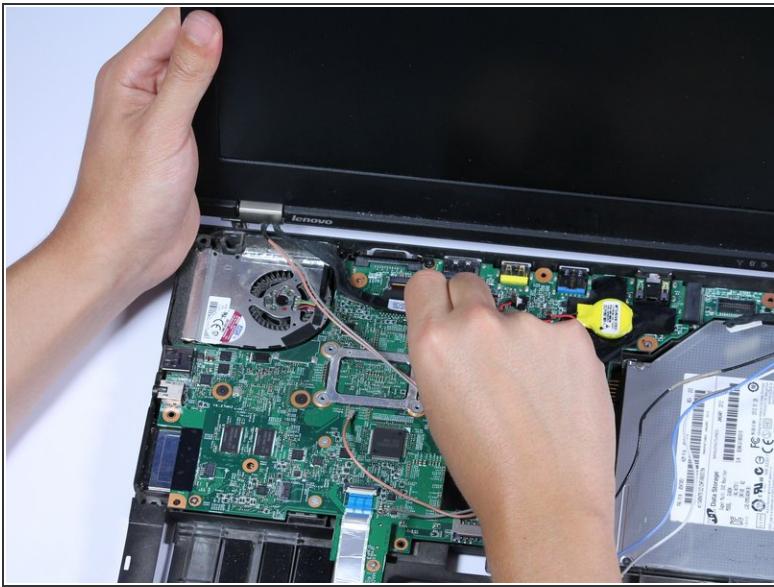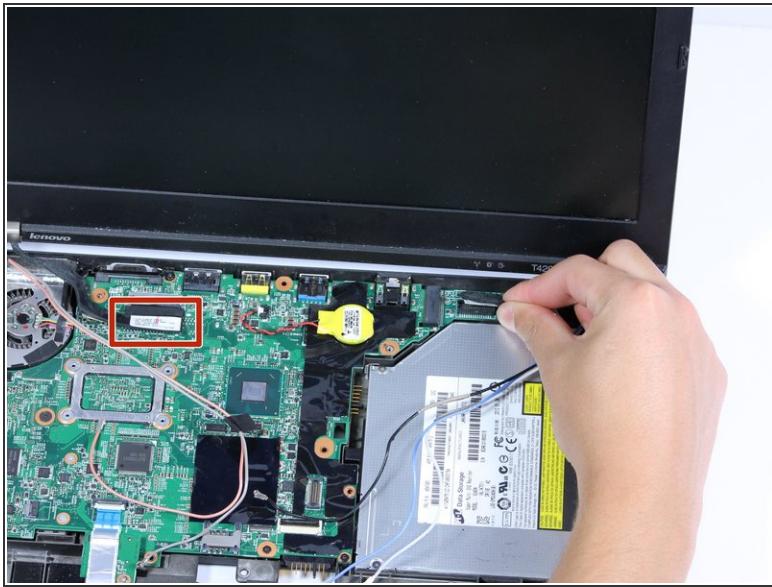

- Unplug the two black cables that connect the screen to the motherboard.

Step 2




- Flip your laptop so the back-side is facing towards you.
- Remove any black stickers covering the screws using the nylon or metal spudger.
- Remove the two 7mm screws using the Phillips #0 screwdriver.

Step 3



- Remove the LCD screen unit by holding the sides and lifting it upwards.

Step 4 — Bottom of Motherboard

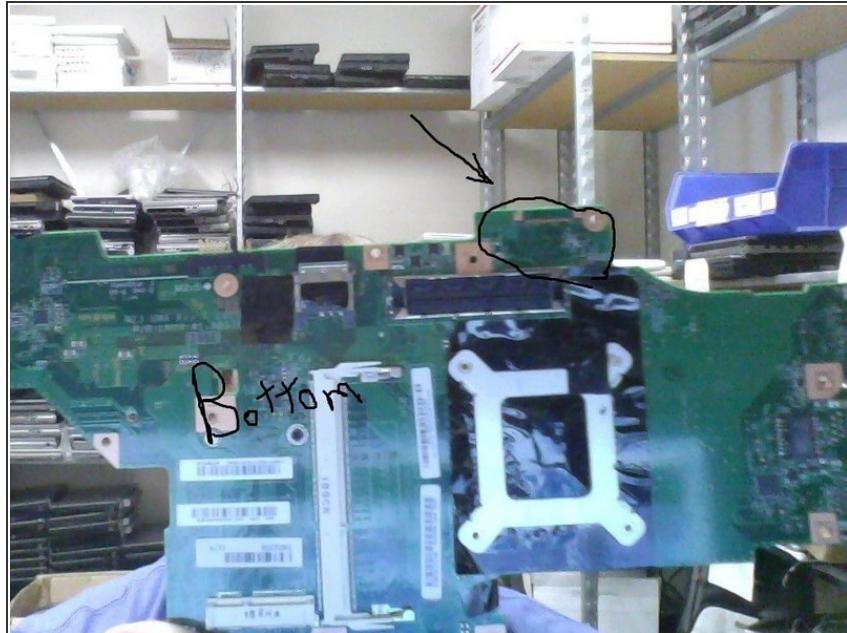

- you will need to take the tape off in order to get to the fuse

To reassemble your device, follow these instructions in reverse order.