



# Lenovo ThinkPad T440p Hard Drive Replacement

How to replace a Lenovo ThinkPad T440p hard drive.

Written By: Christian Abad



## INTRODUCTION

The hard drive is primarily used for the Lenovo ThinkPad T440p's storage. If your computer is slow, it most likely needs replacing. The replacement is simple and will only require unscrewing screws and using a spudger to lift the hard drive out.

### TOOLS:

- Phillips #1 Screwdriver (1)
- Phillips #0 Screwdriver (1)
- Spudger (1)

### PARTS:

- 1 TB SSD / Upgrade Bundle (1)
- 250 GB SSD / Upgrade Bundle (1)
- 500 GB SSD / Upgrade Bundle (1)
- 2 TB SSD / Upgrade Bundle (1)

## Step 1 — Battery



- Flip the laptop so that the back is facing up.

## Step 2



- Slide the battery latches to the unlocked position.

## Step 3



- Slide the battery pack out of the battery slot.

## Step 4 — Back Cover



- Use a Phillips #1 screwdriver to remove the two 9mm screws holding the back cover.

## Step 5




- Slide down the back cover.

## Step 6





- Remove the back cover.

## Step 7 — Hard Drive

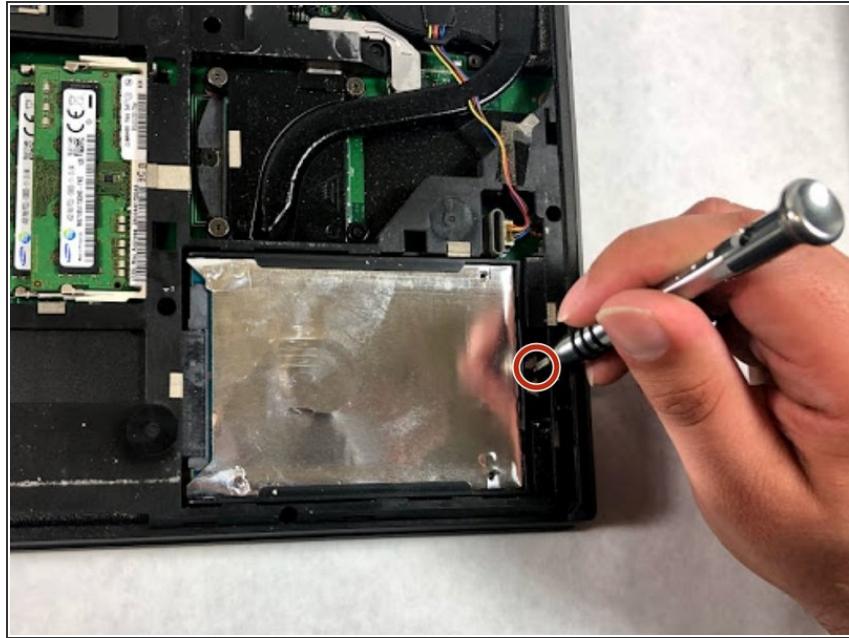



- Use a Phillips #0 screwdriver to remove one screw holding the hard drive.

## Step 8

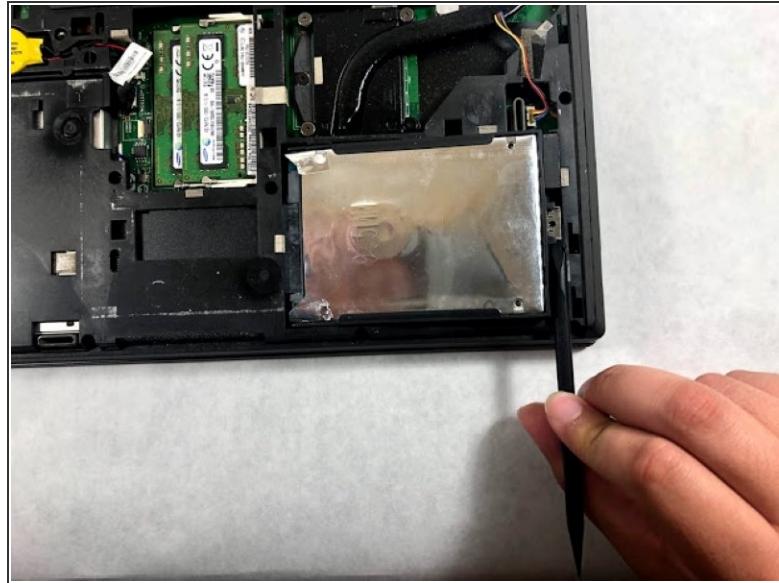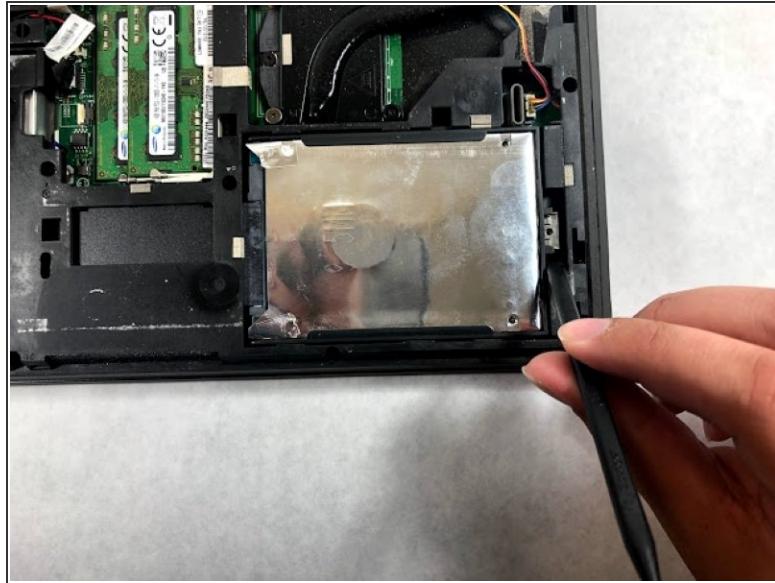


- Place the spudger underneath the hard drive mount and lift it up.

## Step 9

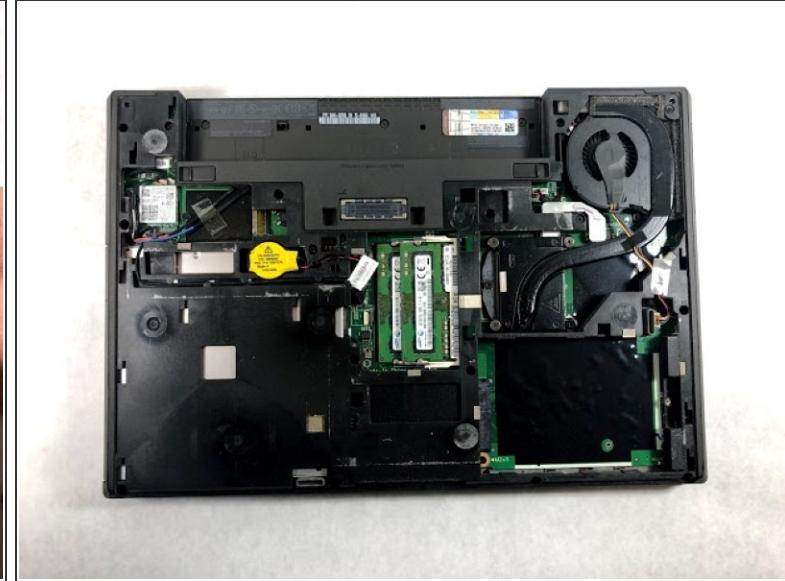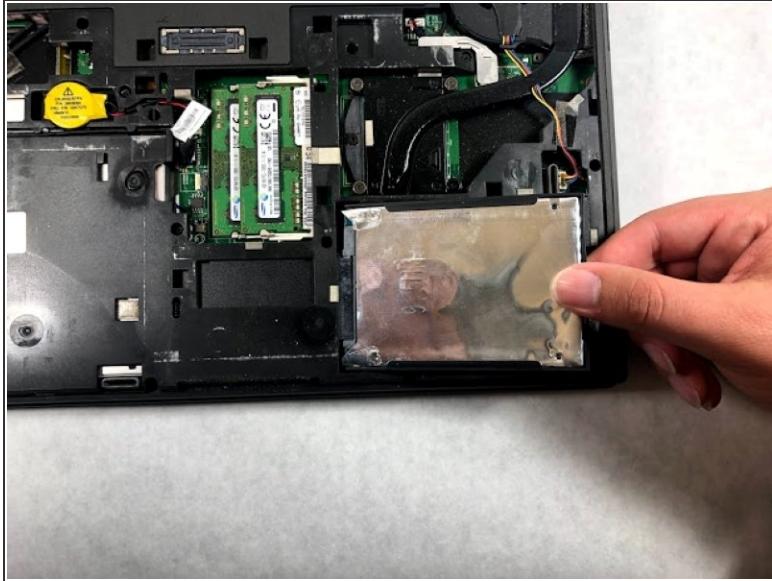

- Remove the hard drive.

## Step 10

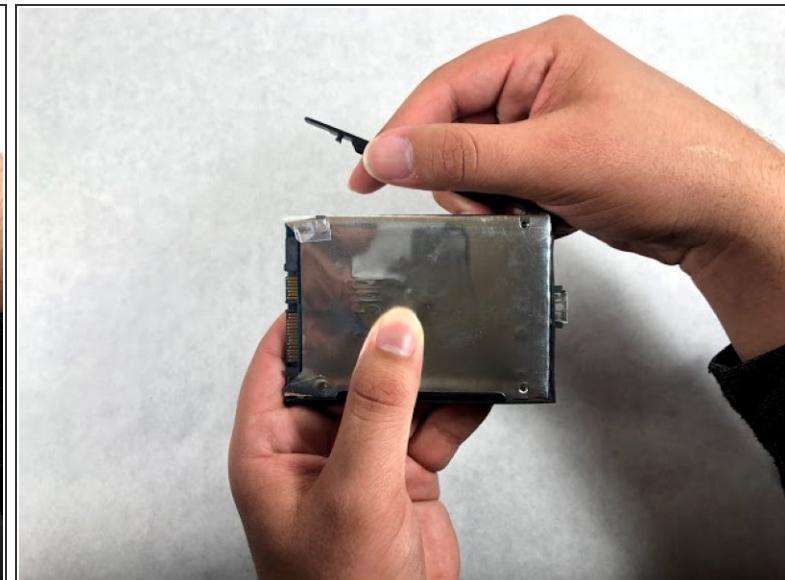

- Remove the hard drive from the plastic mount.

To reassemble your device, follow these instructions in reverse order.