



# Lenovo ThinkPad T460s Battery Replacement

How to replace both batteries in Lenovo ThinkPad T460s.

Written By: kewei xia



## INTRODUCTION

If your Lenovo ThinkPad T460s ([all models](#)) has a depleting battery life (1-2 hours without charging), use this guide to replace the battery module.

The battery module is used to power up your laptop when you unplug the charger. A faulty battery module will die out very quickly, usually within 1-2 hours.

This guide will guide you through how to replace both batteries of the Lenovo ThinkPad T460s (Yes, there are two!). Before using this guide, make sure you have two new batteries to be replaced and the tools we list.

Before beginning, make sure to power off your laptop completely and disconnect from any external power source.

If your battery is swollen, you may refer to this [link](#).

## TOOLS:

- [ESD Safe Tweezers Blunt Nose \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)


## Step 1 — Battery



- Remove all five 5.5mm Phillips #1 screws.


⚠ Note that these screws cannot be removed completely since all the screws have a retainer from the back.

## Step 2

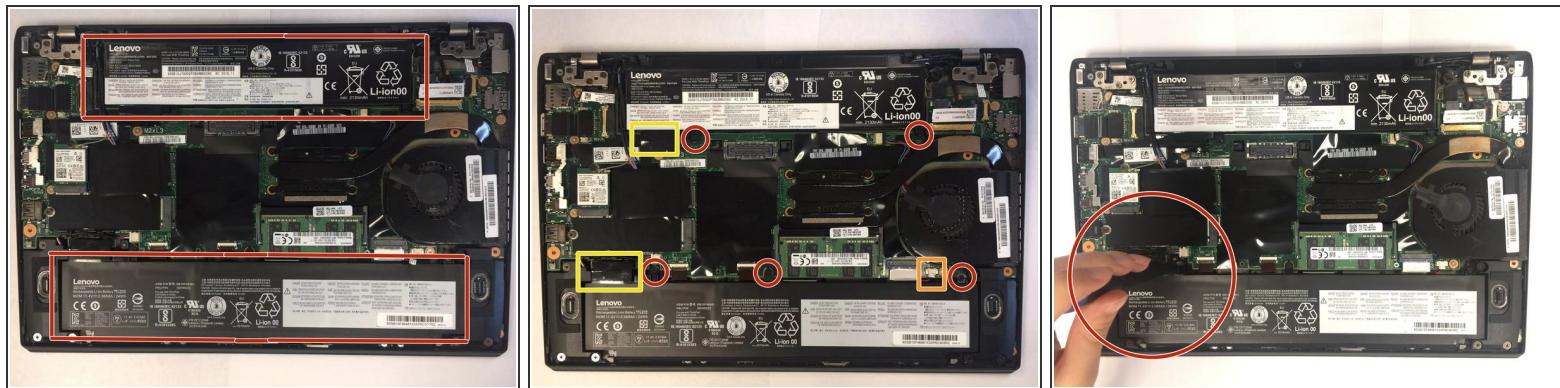

- Remove all five 5.5mm Phillips #1 screws.
- Unplug the battery from the device.
- These tabs are used to remove the battery.

## Step 3

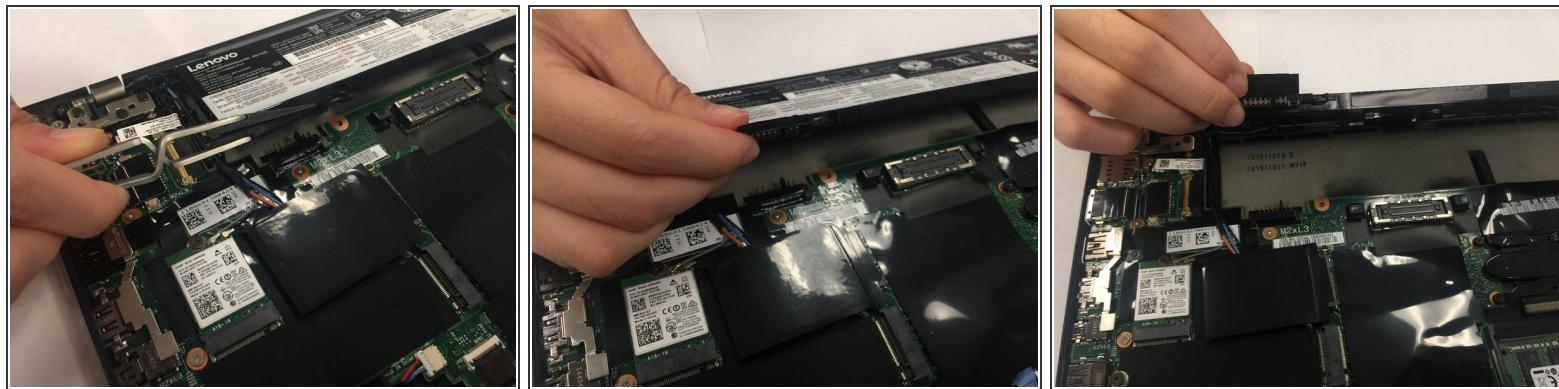

- Remove the batteries from the device.

To reassemble your device, follow these instructions in reverse order.