



Lenovo ThinkPad T500 Battery Replacement

This guide will show the user how to replace the battery of the Lenovo ThinkPad T500.

Written By: Nickie Gurney



INTRODUCTION

The Lenovo Thinkpad T500 supports 6-cell and 9-cell batteries.



PARTS:

- [ThinkPad Li-ion Battery \(9 Cell\) \(1\)](#)

Step 1 — Battery



- Slide the battery locking tab on the underside of the ThinkPad T500 to the right.

Step 2



- With the tab in the "unlock" position, gently slide the battery away from the body of the ThinkPad.

Step 3



- The battery is out! You can now replace it with the correct replacement battery and be on your way!

To reassemble your device, follow these instructions in reverse order.