


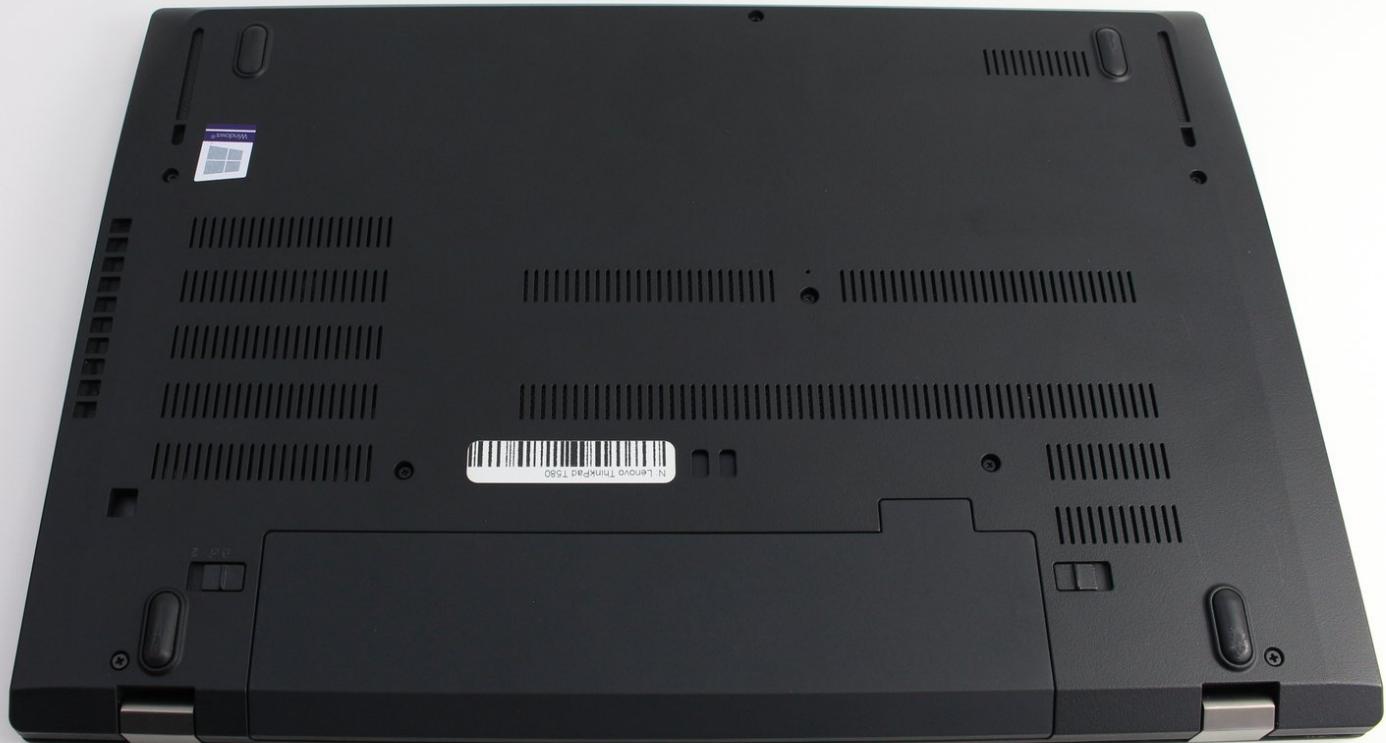

Lenovo ThinkPad T580 External Battery Replacement

How to replace the second (external) battery on the Lenovo Thinkpad T580.

Written By: Ben Elkayam



INTRODUCTION

Welcome to the external battery replacement guide for the Lenovo Thinkpad T580.

This guide will detail the steps necessary to replace the external battery.

The most common reasons why this component would need to be replaced is because:

- The external battery has gone bad.
- The port is damaged.
- The battery no longer recharges as effectively.

If you are not experiencing these problems with this component, consider examining the [troubleshooting page for this device](#).

There are no specialized skills required for replacing the external battery.


You do not need to buy a second replacement battery if your goal is just to remove the external battery.

Step 1 — External Battery



- Arrange the laptop so it is upside-down and the front is facing away from you. This will get the battery directly in front of you.

Step 2

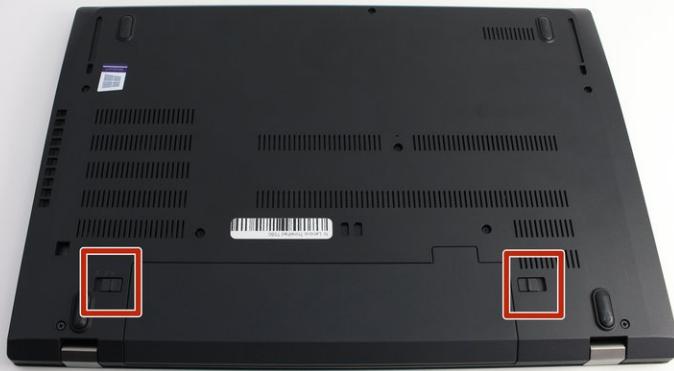

- Pull the slides away from the center of the laptop to release the battery.

Step 3

- Pull the battery directly out of the socket.



To reassemble your device, follow these instructions in reverse order.