


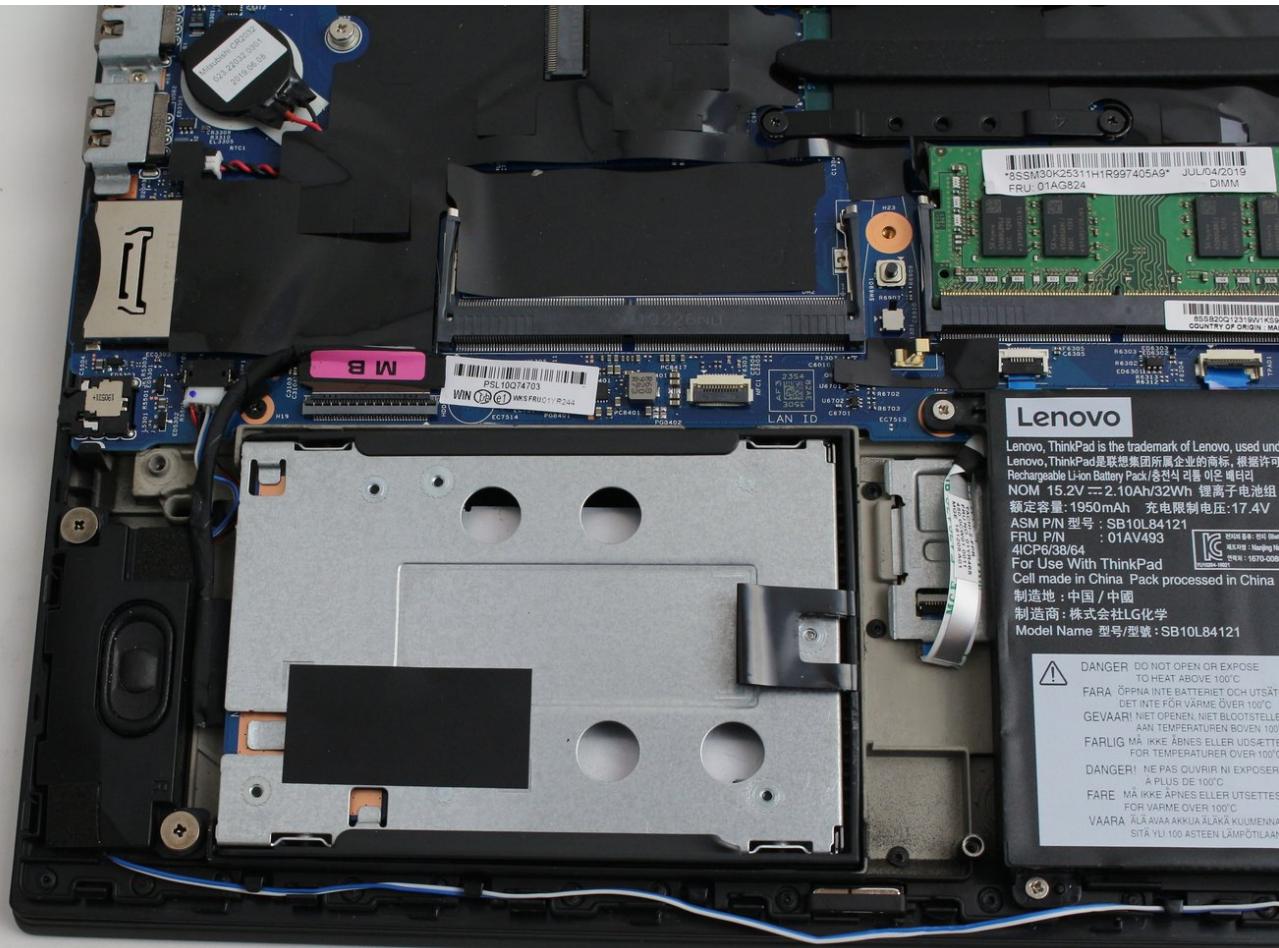

Lenovo ThinkPad T580 Hard Drive Replacement

How to replace the hard drive in the Lenovo Thinkpad T580.

Written By: Ben Elkayam



INTRODUCTION

Welcome to the hard drive replacement guide for the Lenovo Thinkpad T580.

This guide will detail the steps necessary to replace the hard drive.

The most common reasons why this component would need to be replaced is because:

- Your hard drive is full
- Your BIOS indicates your hard drive is damaged

If you are not experiencing these problems with this component consider examining the [troubleshooting page for this device](#).

There are no specialized skills required for replacing the hard drive.

TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
- [Phillips PH000 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — External Battery



- Arrange the laptop so it is upside-down and the front is facing away from you. This will get the battery directly in front of you.

Step 2

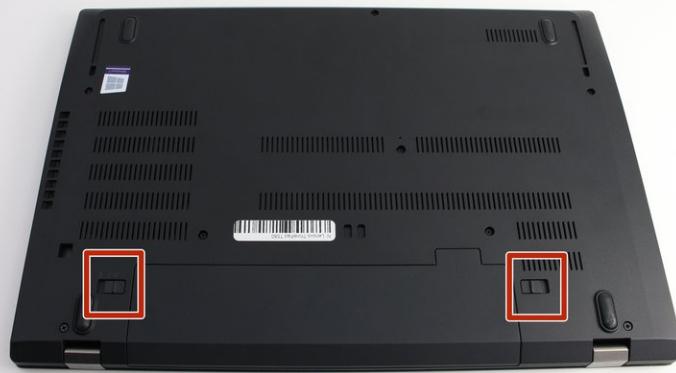

- Pull the slides away from the center of the laptop to release the battery.

Step 3



- Pull the battery directly out of the socket.

Step 4 — Bottom Case




- Using a Phillips #000 screwdriver, unscrew eight 3.3 mm screws on the bottom of the laptop.
- The screws will not come out of the case.

Step 5



- Run a plastic opening pick along the crease of the computer all the way around.
- Once all the clips are released, remove the bottom cover.

Step 6 — Hard Drive

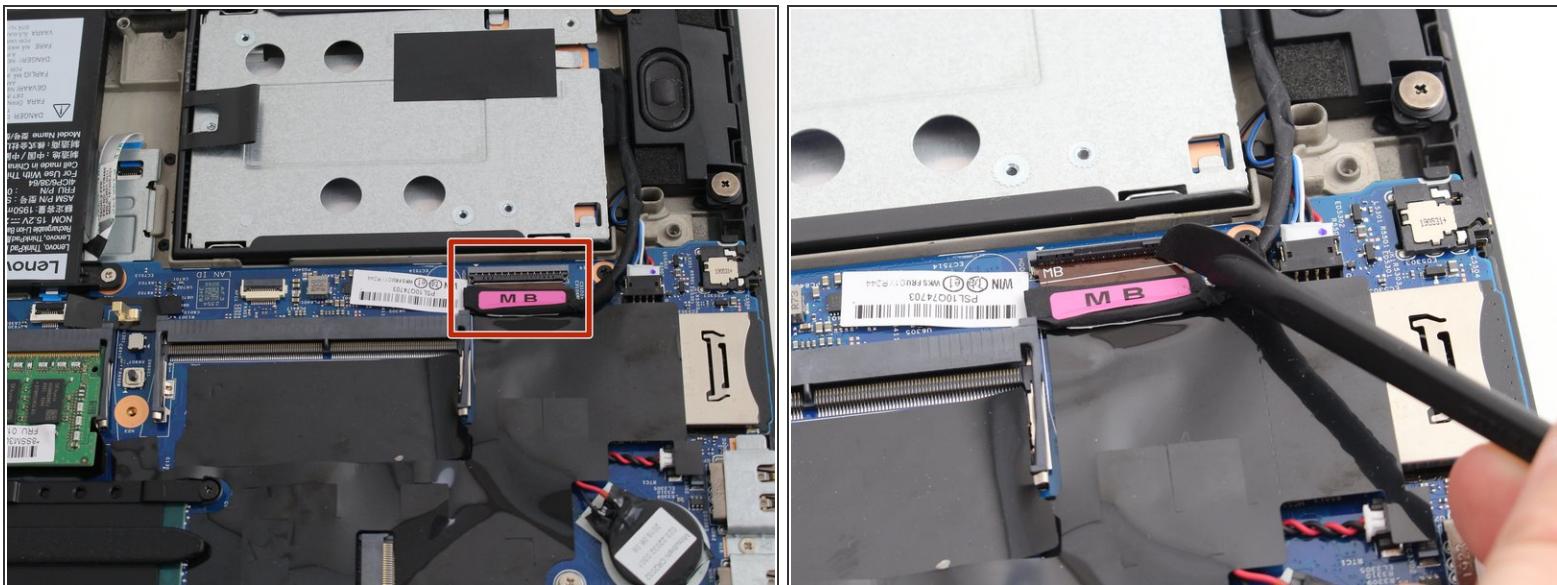

- Using a spudger, remove the hard drive cable from the motherboard.

Step 7



- Pull the hard drive case out of the slot using the tab.

To reassemble your device, follow these instructions in reverse order.