



# Lenovo ThinkPad Yoga 14 20FY RAM Replacement

Replace the RAM card of your Lenovo ThinkPad Yoga 14 20F.

Written By: jose aguirre



# INTRODUCTION

Has your computer performance diminished? Try replacing the RAM card.



## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:

- [PC3-12800 8 GB RAM Chip](#) (1)

## Step 1 — Back Cover

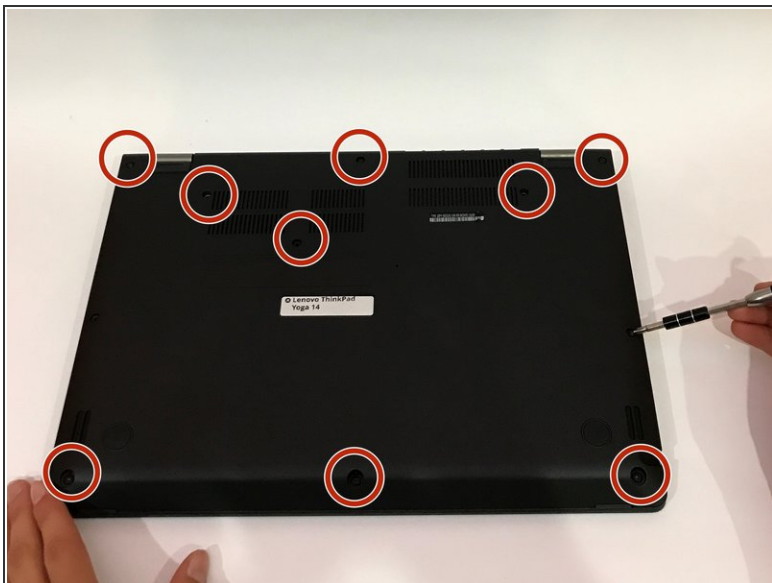

- Remove the indicated nine M2 x 6 mm nylon-coated screws using a Phillips head screwdriver.

**i** The screws do not come all the way out. Do not force them out.


## Step 2



- After removing all of the screws, gently lift up on all covers to remove the back plate and reveal the interior of the device.




## Step 3 — RAM

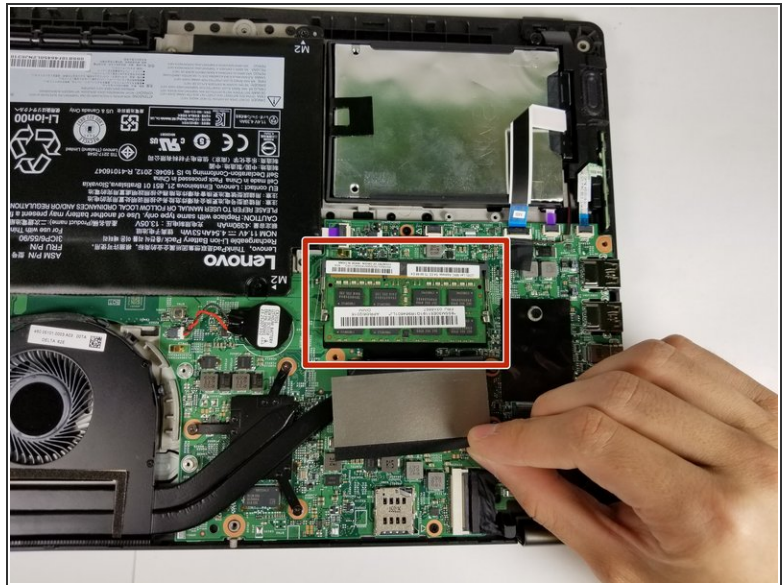

- The RAM is hidden behind the black piece of plastic. Pull the plastic back.

## Step 4

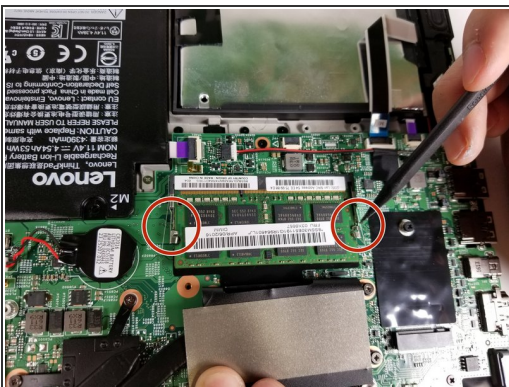

- The RAM is held in place by two metal pieces on both sides.
- Use the spudger to push off both metal pieces to release the RAM.

## Step 5



- Take the ram card out of its slot.

To reassemble your device, follow these instructions in reverse order.