



Lenovo Thinkpad E540 Hard Drive Replacement

Follow this free guide to replace the hard drive on your Lenovo ThinkPad E540 laptop.

Written By: Timothy Sumner



INTRODUCTION

Follow this guide to replace the hard drive on your Lenovo ThinkPad E540 laptop.


TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD / Upgrade Bundle](#) (1)

Step 1 — Battery

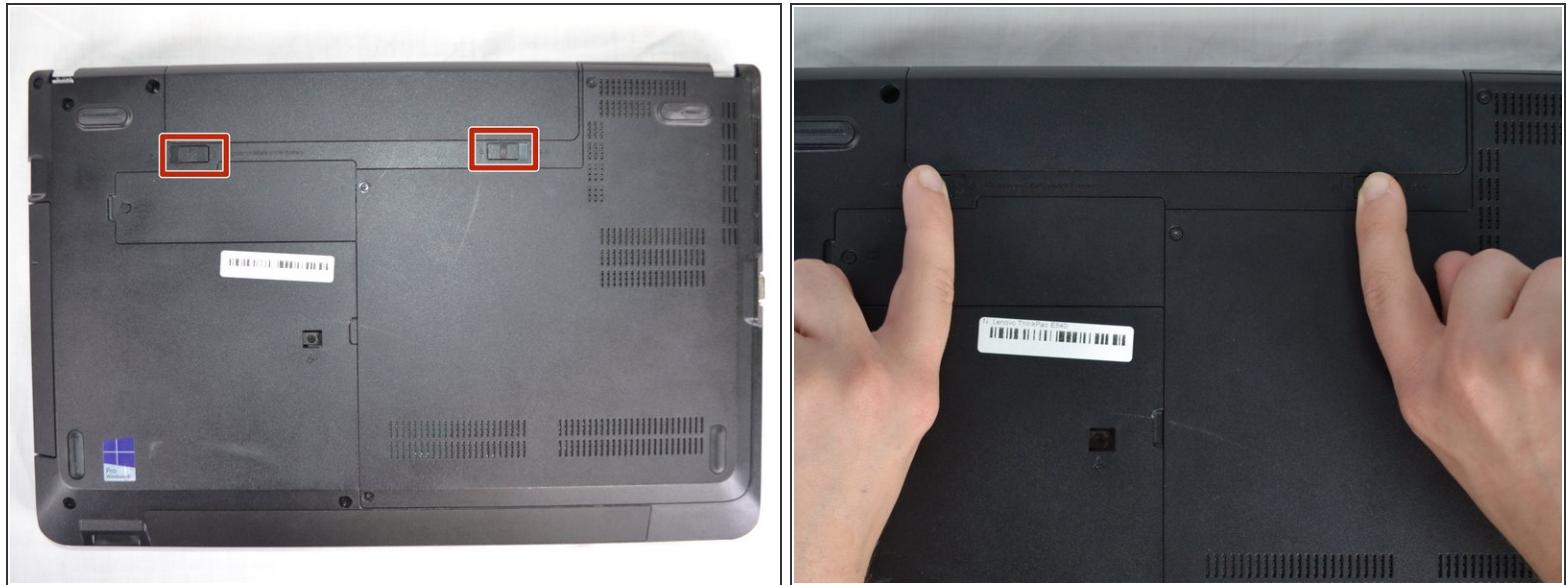


- Push the battery release switches away from each other.

Step 2




- Remove the battery.

Step 3 — Disassembly of the Back Panel

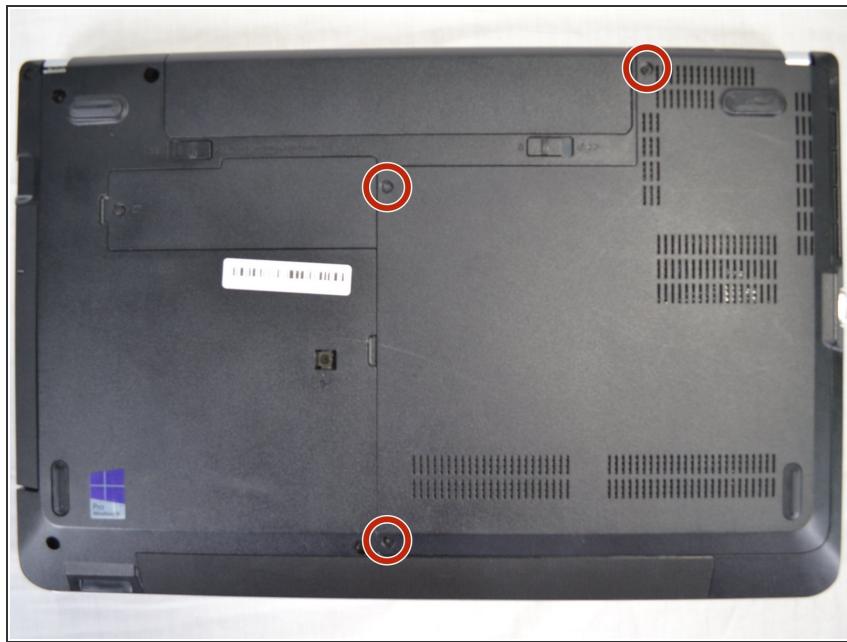

- Remove the three 1.2mm Phillips #00 screws from the bottom panel.

Step 4

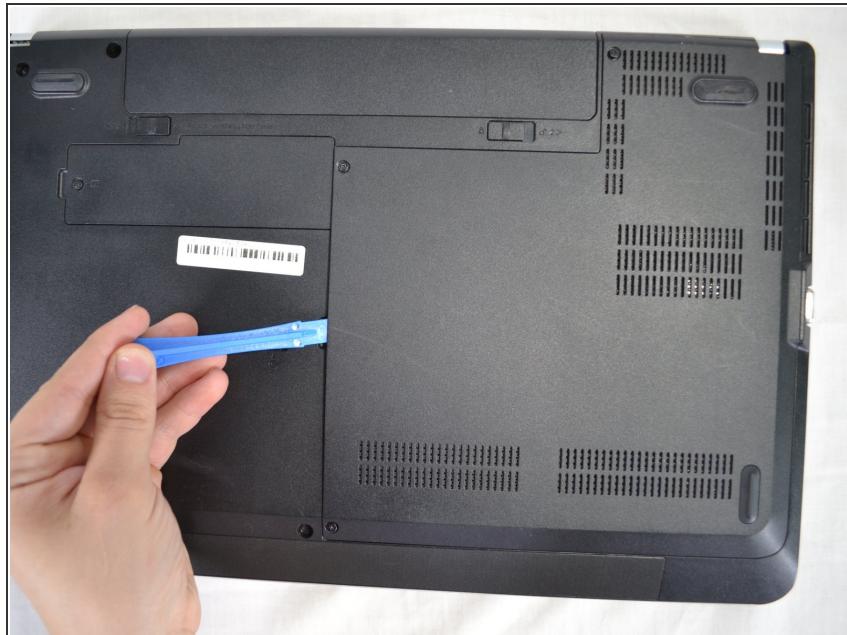

- Use a plastic opening tool to pry off the bottom panel.

Step 5 — Hard Drive



- Remove the four 1.2mm Phillips #0 screws from the hard drive.

Step 6



- Pull up on the hard drive to allow for removal.

Step 7



- Disconnect the hard drive and pull out to remove.

To reassemble your device, follow these instructions in reverse order.