



# Lenovo Thinkpad T410i Keyboard Replacement

How to replace the keyboard for the Lenovo Thinkpad T410i

Written By: Gabriel Cordova



# INTRODUCTION

In this guide we show you how to successfully remove the old keyboard assembly for the Lenovo Thinkpad T410i when keys have become sticky, unresponsive, or have gone missing.

## Guide Notes

- This is a hardware installation only, no firmware is required.
- The Lenovo Thinkpad T410i keyboard is flexible yet fragile, when uninstalling be sure to **remove all restraints before detaching the keyboard** as it may snap.

## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

## PARTS:

- [Keyboard for Lenovo Thinkpad T410i](#) (1)

## Step 1 — Keyboard



- Remove the battery.
- *i* Unfortunately, the battery isn't pictured because our device did not come with a battery at the time of the creation of this guide.

## Step 2




- Loosen (do not remove) the 14.0mm screw in the DIMM slot cover with a Phillips #2 screwdriver.

## Step 3



- Pry loose the top left key-covers with a plastic opening tool.

## Step 4

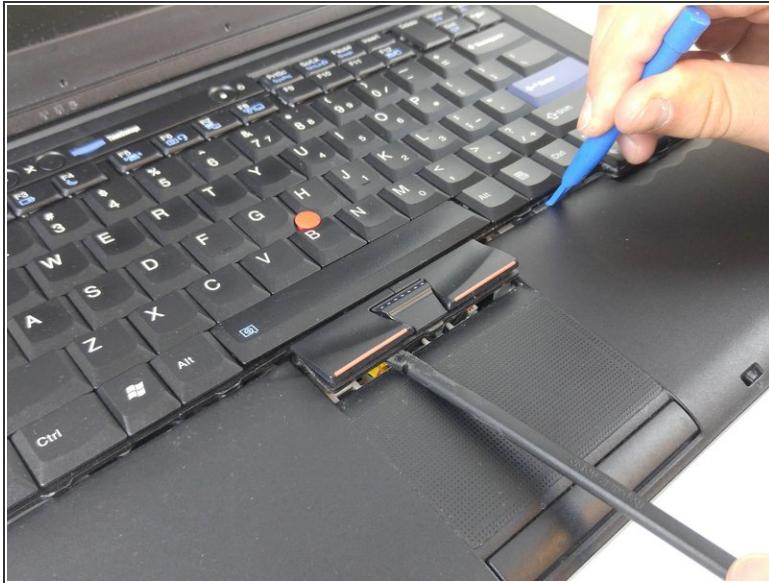

- Nudge the plastic tabs around the keyboard using the plastic opening tool while lifting it with a spudger.
- Ensure all 5 clips are loosened from the front of the keyboard before removing.

## Step 5



- Slowly raise keyboard away from the laptop. A short ribbon must be removed before keyboard is free.
- Remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.