




# Lenovo Thinkpad T440s RAM Replacement

This guide will show how to access the RAM card slot in the Lenovo Thinkpad T440s

Written By: Terelle Montalvo

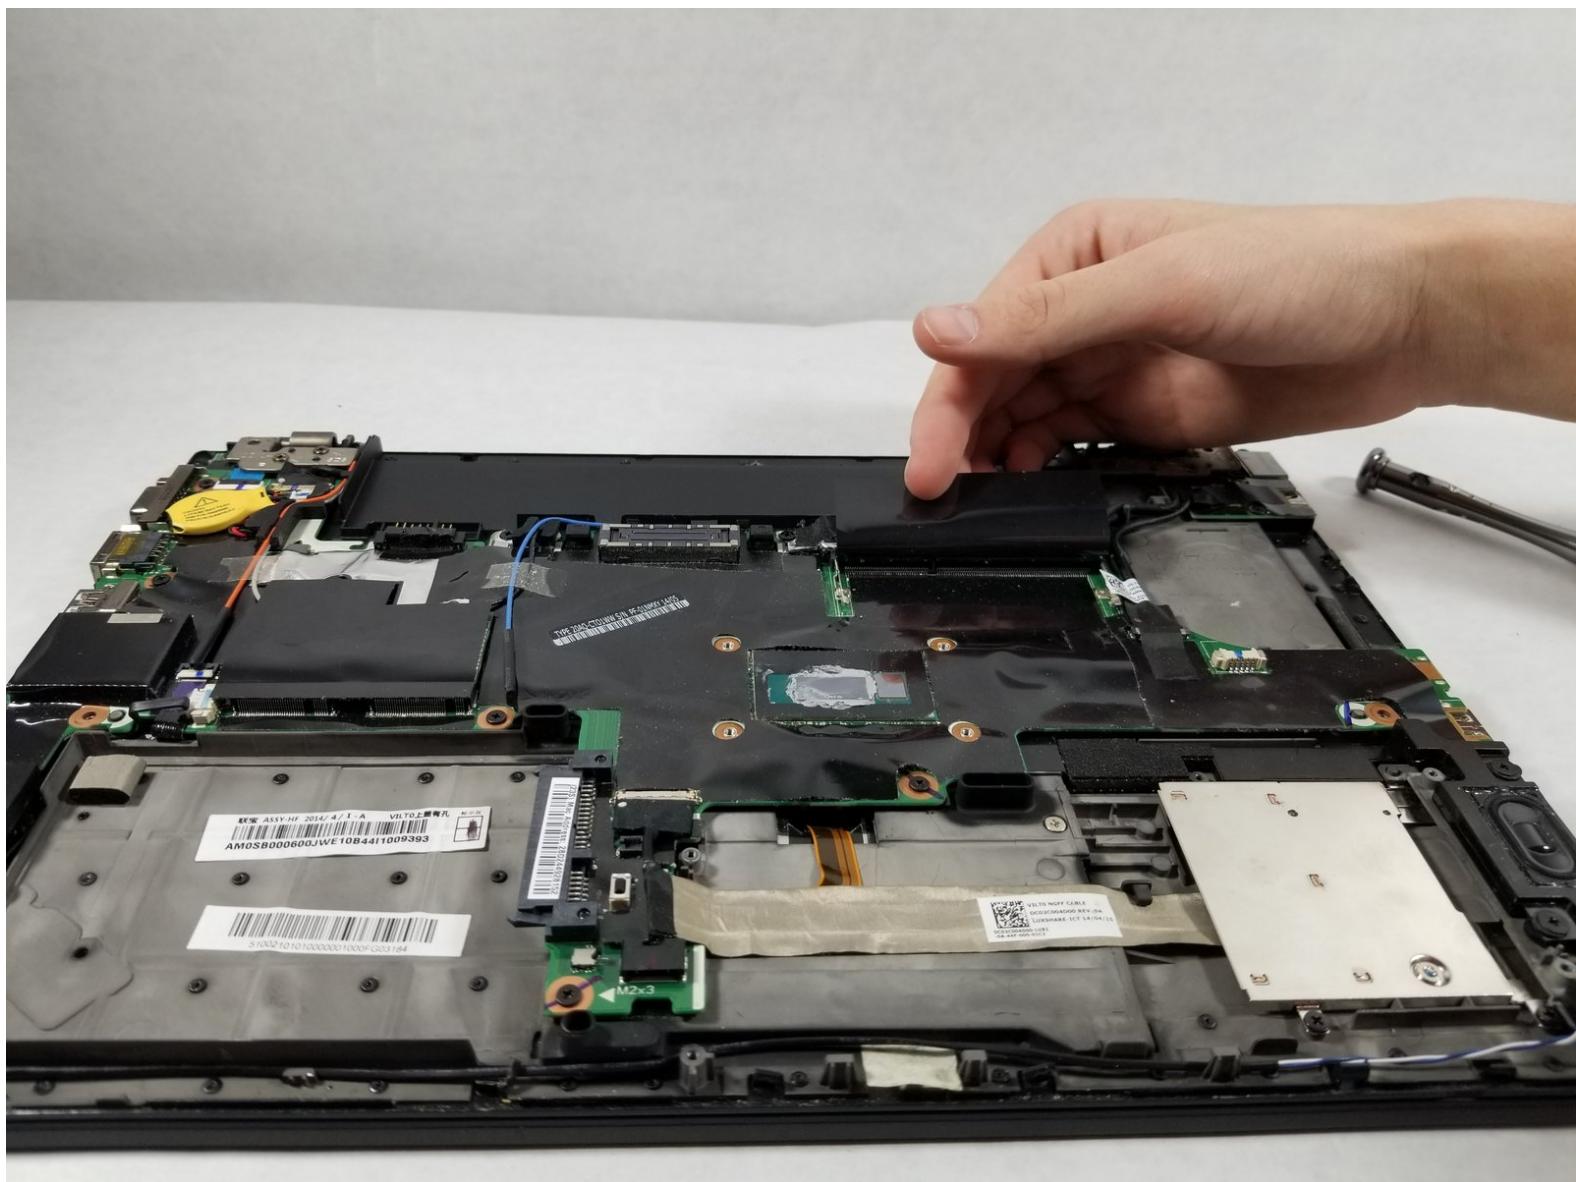

## INTRODUCTION

Is your device experiencing problems with loading and saving while the computer is in use?  
Consider using this guide to replace the RAM in your device.

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Back Panel




- Make sure to power down and turn off your device before proceeding with the repair.
- Flip your laptop over so that the backside is facing you.

## Step 2

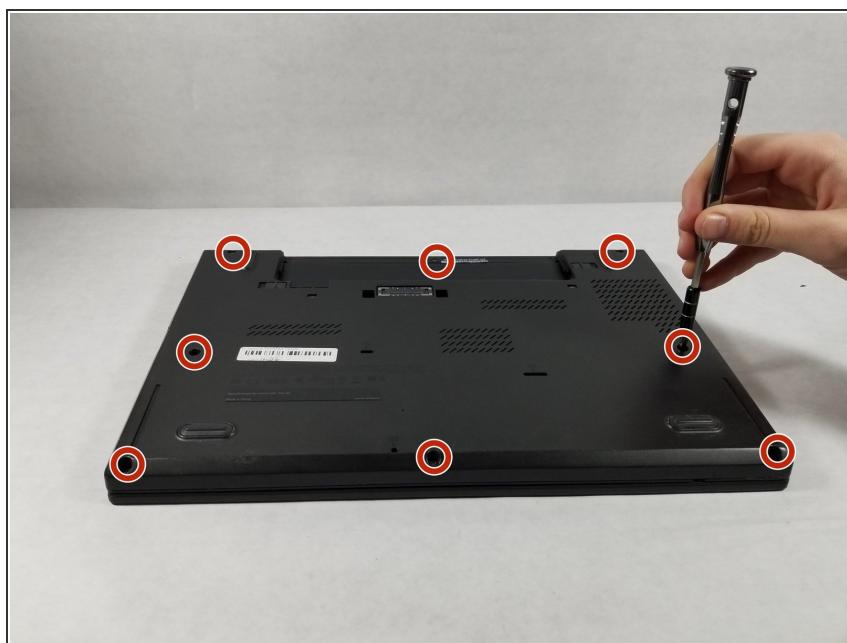


- Using a Phillips #1 screwdriver, remove the eight screws securing the backplate.

## Step 3

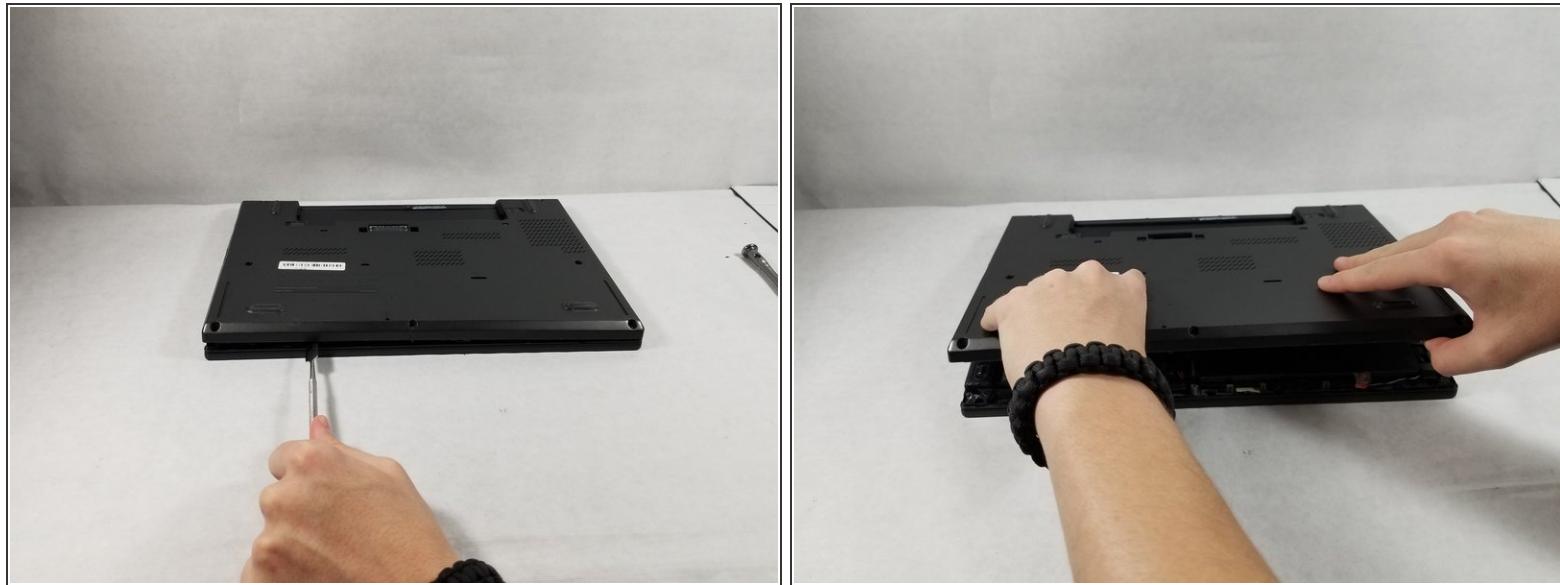


- Using the metal spudger, wedge it in the seam where the backplate meets the front plate and run the tool along the seam to separate the backplate.

## Step 4

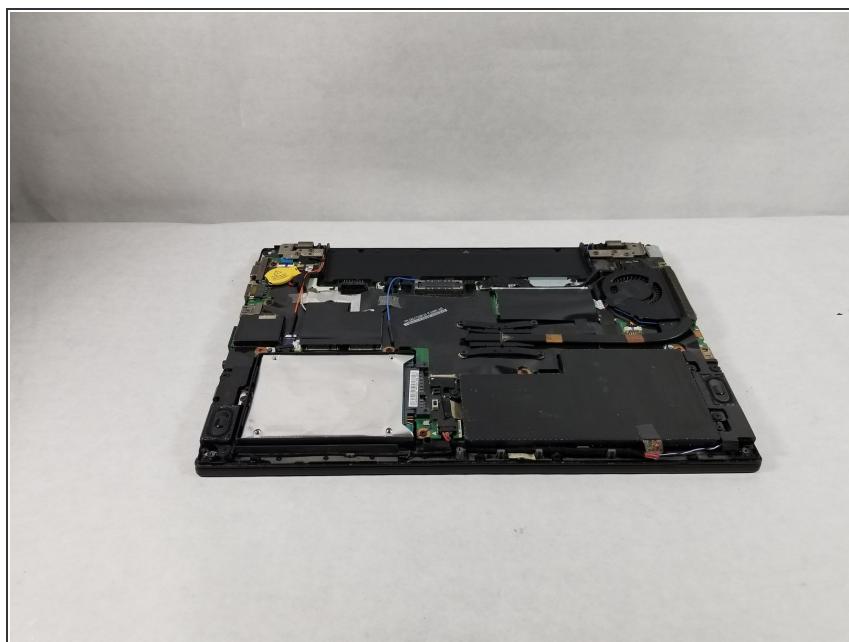

- Remove the back panel from the device.

## Step 5 — RAM

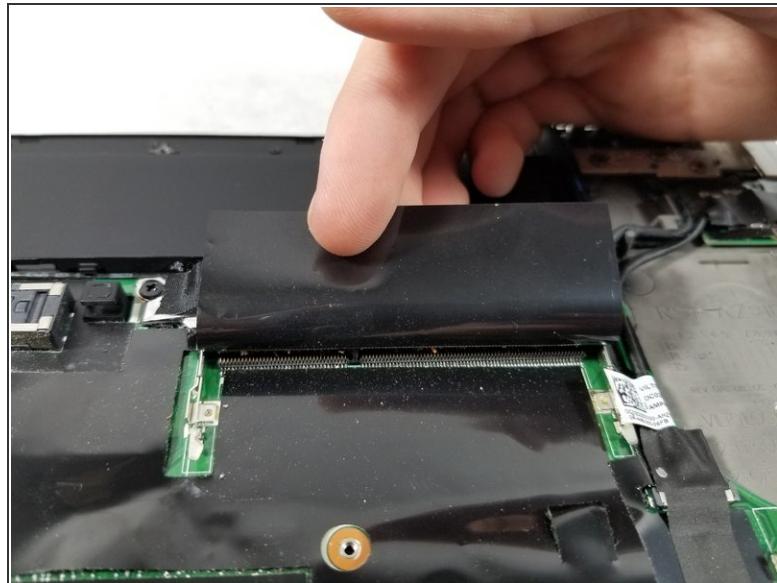

- Right below the battery slot on the right half of the device is where you can access the RAM card Slot.
- Remove the RAM by pulling it straight out of the device.

To reassemble your device, follow these instructions in reverse order.