


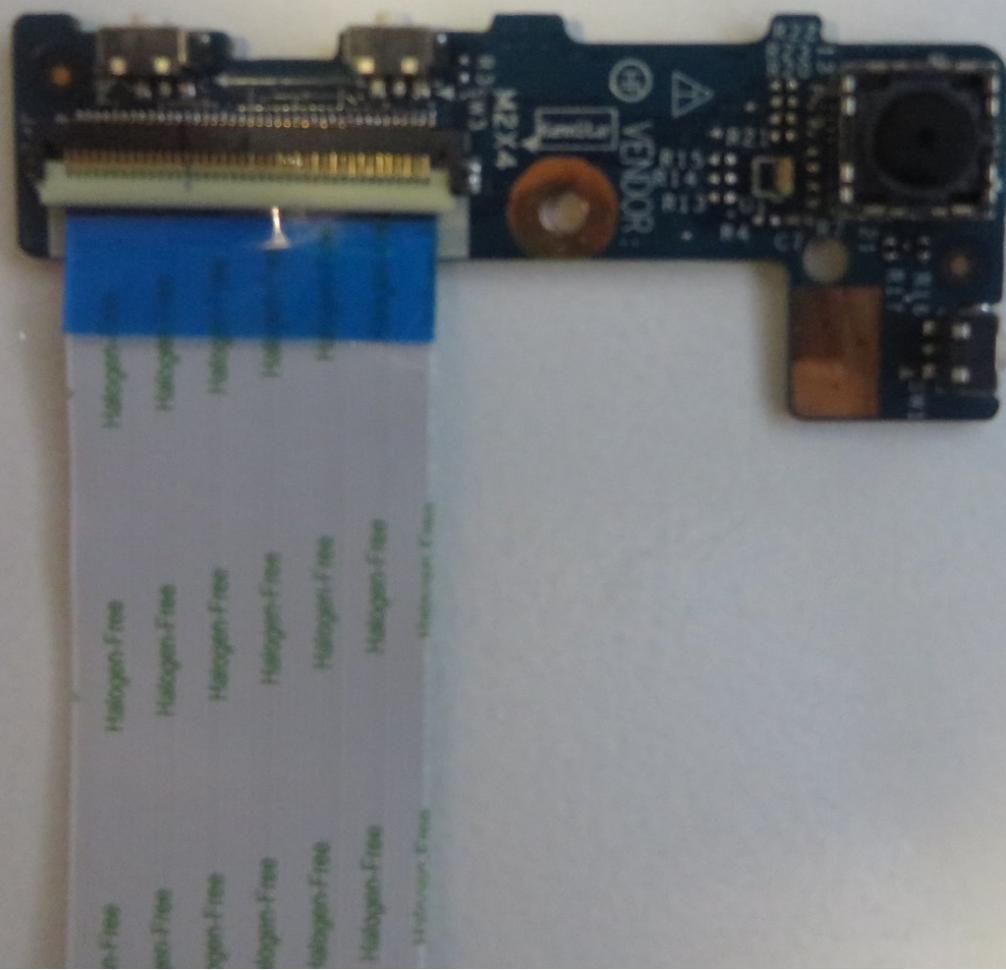

Lenovo Thinkpad Tablet 1838 Camera Replacement

In this guide, we will replace the Lenovo Thinkpad Tablet 1838 camera and ribbon cable.

Written By: Juan Rojo



INTRODUCTION

Follow this guide to successfully replace the ribbon cable and camera for the Lenovo ThinkPad Tablet 1838.

TOOLS:

- Essential Electronics Toolkit (1)

Step 1 — Camera



- To access the camera, remove the button covers by prying them off.

Step 2





- After removing the buttons, remove the two screws marked.

Step 3



- Carefully pry off the outer perimeter of the tablet using a plastic opening tool.

Step 4

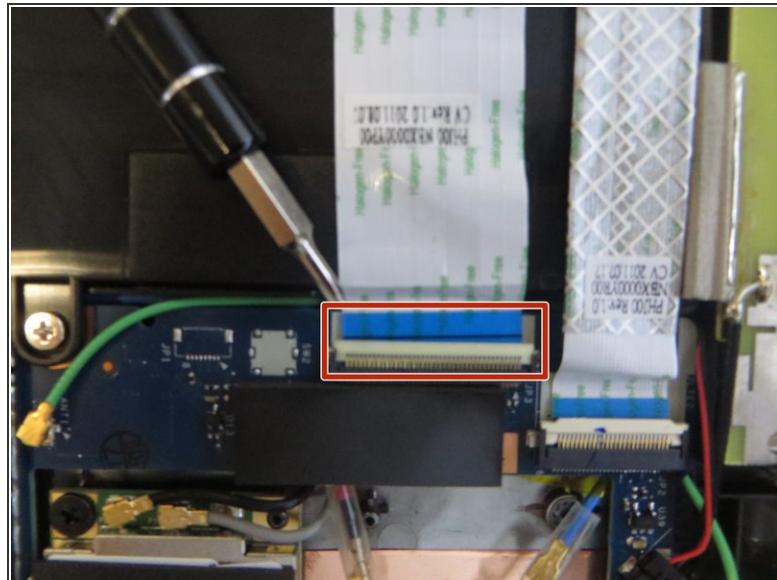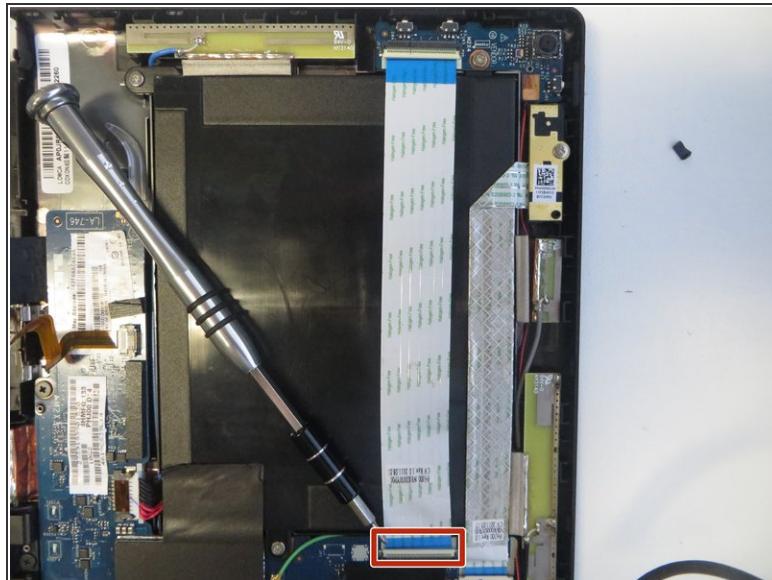

- Lift the tab located on the back and slide it out to remove the ribbon cable.
- Only the back side of the cable has been removed—the other can remain connected.

Step 5



- Remove the marked screw and lift out the entire camera assembly.

To reassemble your device, follow these instructions in reverse order.