



Lenovo Thinkpad X240 RAM Replacement

How to replace the RAM of the Lenovo Thinkpad X240.

Written By: Joe Edmondson



INTRODUCTION

RAM giving you any trouble? Follow along while we show you how to get it replaced! All you need is your iFixit Toolkit.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:


- [New RAM for Lenovo X240](#) (1)

Step 1 — RAM



- Flip the laptop up side down as shown in the photo.

Step 2

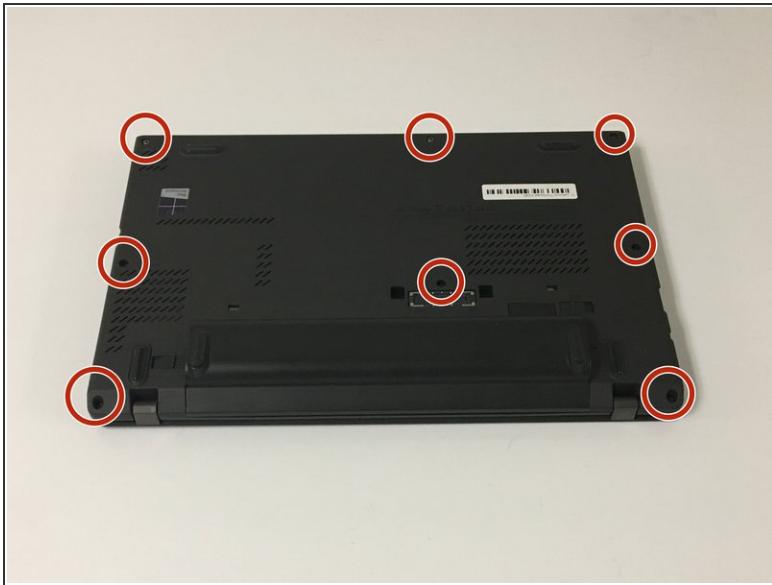

- Remove the 8 0.2mm Phillips screws connecting the back cover to the laptop.



Step 3



- Remove the back cover using the opening tools.

⚠ Gently use the plastic opening tools to prevent scratching your device.

Step 4

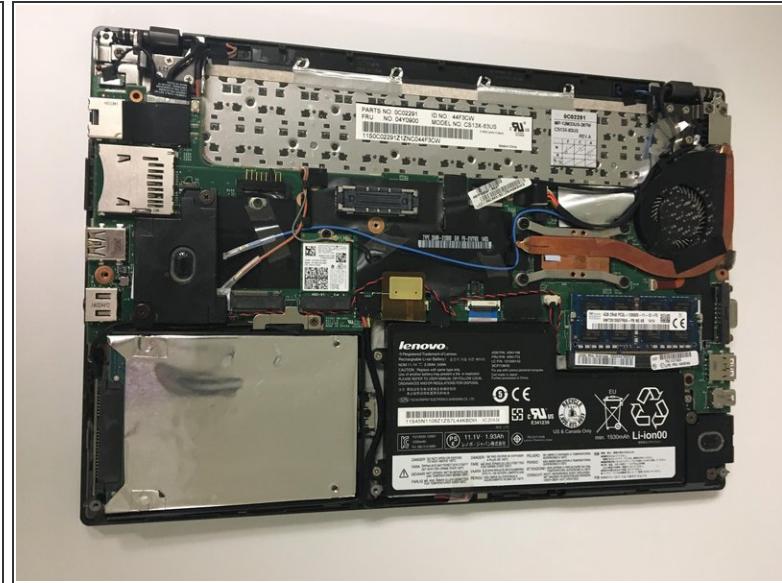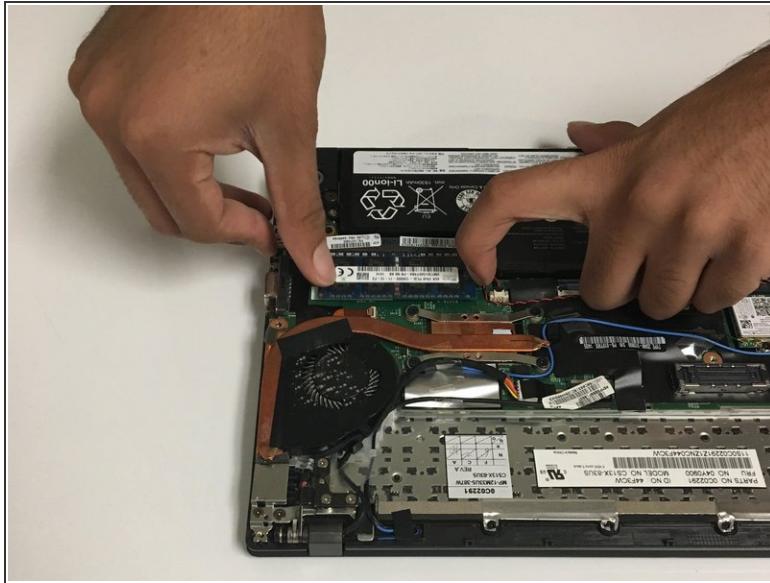

- Remove the RAM stick by carefully popping its holders out of place.

To reassemble your device, follow these instructions in reverse order.