



Lenovo Thinkpad x240 Internal Battery Replacement

How to replace the Lenovo Thinkpad x240 battery.

Written By: Mohammed Alsaadi



INTRODUCTION

Having issues with your battery life? No worries! Follow this simple guide to replace the internal battery.

TOOLS:

- TR6 Torx Security Screwdriver (1)
- Phillips #0 Screwdriver (1)

PARTS:


- New internal battery pack compatible with Lenevo Thinkpad x240 (1)

Step 1 — Internal Battery




- Turn off the laptop.
- *i* Device's lights should all be off.

Step 2

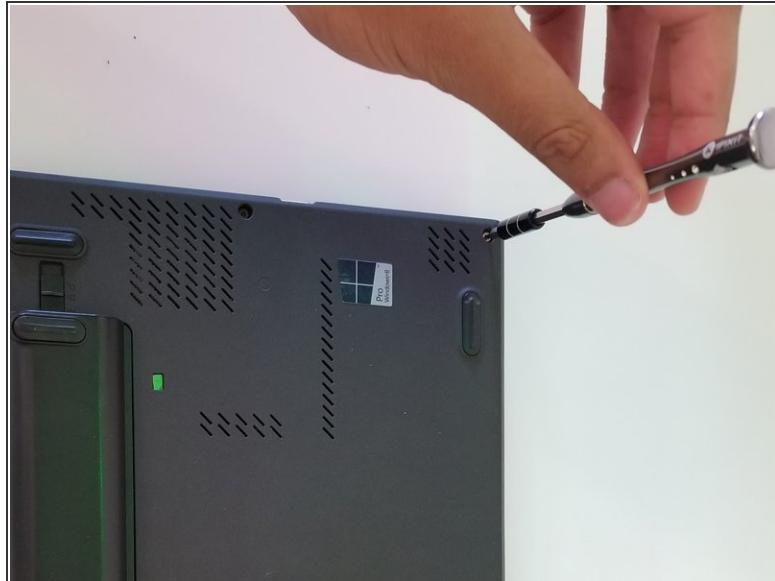

- Remove the back cover by unscrewing the 8 0.2 mm screws holding it in place.

Step 3

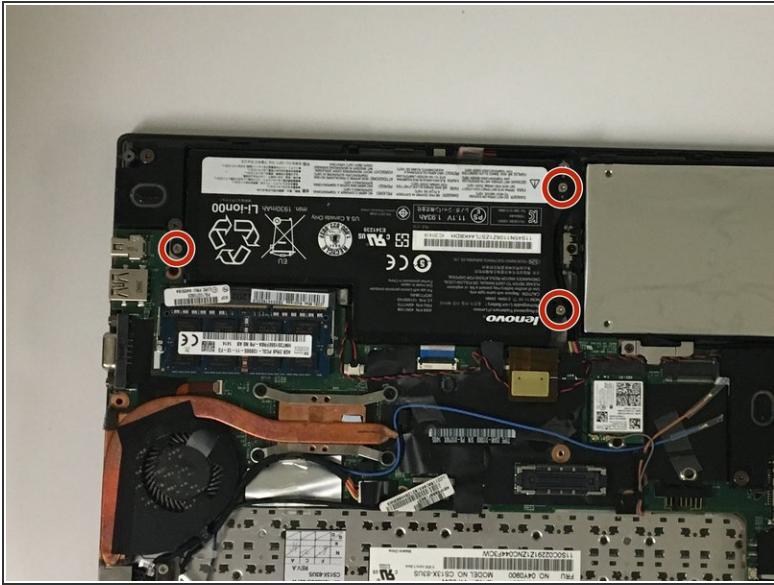

- Locate the internal battery pack and unscrew the 3 0.2 mm screws holding it in place.

Step 4



- Unplug the connector cable that connects the internal battery pack to the laptop.

Step 5



- Insert the new internal battery pack into the laptop.

To reassemble your device, follow these instructions in reverse order.