



# Lenovo Y50-70 Touch Battery Replacement

This is a guide to taking out and replacing the battery to the Lenovo Y50-70 Touch laptop.

Written By: Nicholas Hardy



## INTRODUCTION

Batteries wear out over time and should be replaced if battery life becomes excessively short. Before removing this battery, be sure that the computer is turned off and unplugged.

### **TOOLS:**

- Phillips #1 Screwdriver (1)

### **PARTS:**

- [Lenovo L13M4P02%2FL13M4P01 Replacement Battery \(1\)](#)

## Step 1 — Battery



**⚠** Make sure to turn off the computer first!

- Remove all twelve 6 mm long screws on the back of the laptop with a Phillips #1 screwdriver.
- **ⓘ** Apply a lot of pressure to prevent the screws from stripping.

## Step 2



- Gently pull off the back cover of the laptop. It should come off easily.


## Step 3



- Unplug the battery from the computer.



**⚠** Do not pull too hard on the battery cable, as this can damage the battery's connection to the laptop.

## Step 4

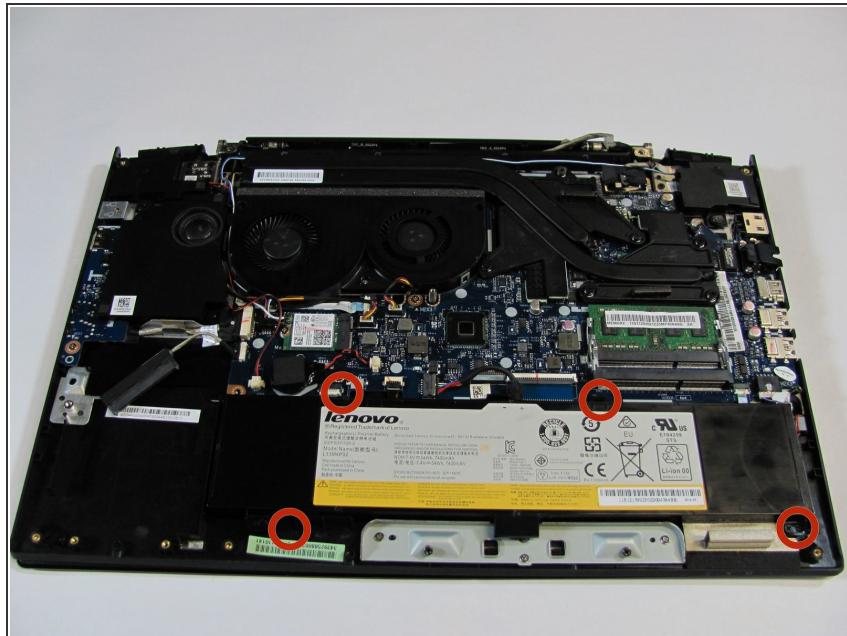

- Remove all four 6 mm screws from the battery using the Phillips #1 screwdriver.

## Step 5

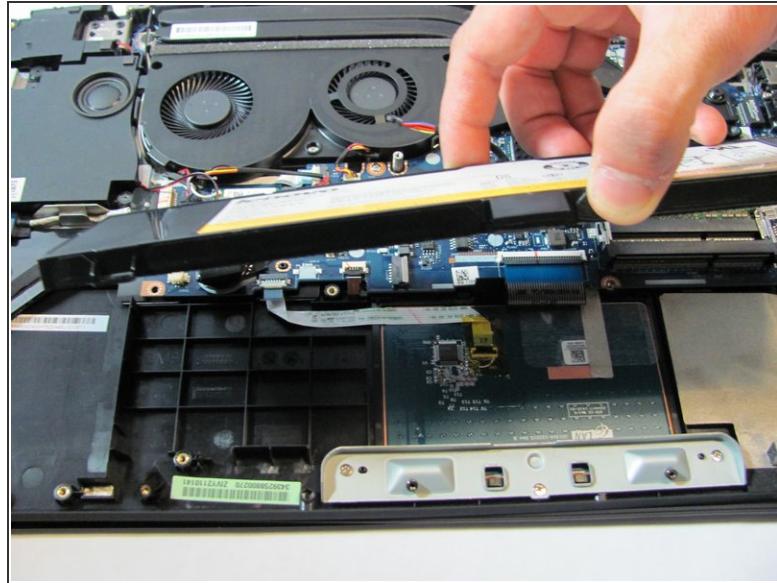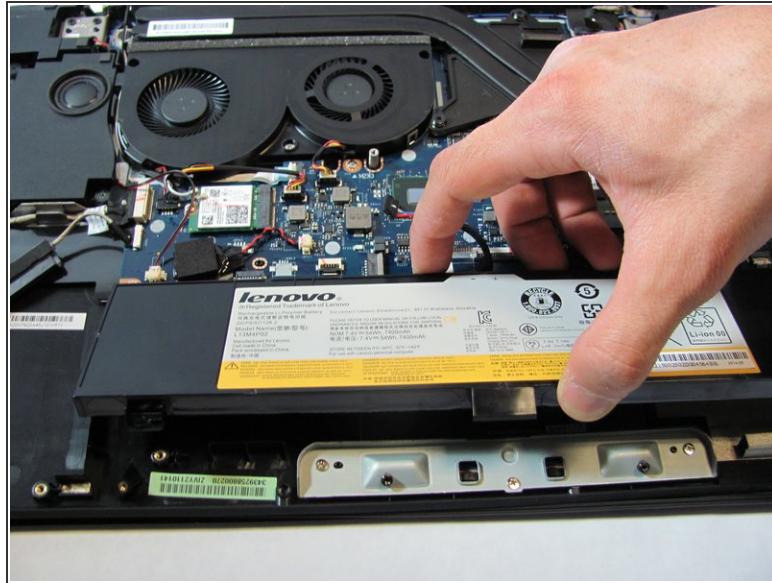

- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.