



# Lenovo YOGA 730-15IKB Bottom Cover Replacement

This guide describes the steps required to remove the bottom cover on a Lenovo YOGA 730-15IKB.

Written By: Ellis Ruckman




## INTRODUCTION

Most of the replaceable components in the Lenovo YOGA 730-15IKB are behind the bottom cover. Follow this guide to remove the cover and gain access to the internals.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)


## Step 1 — Bottom Cover

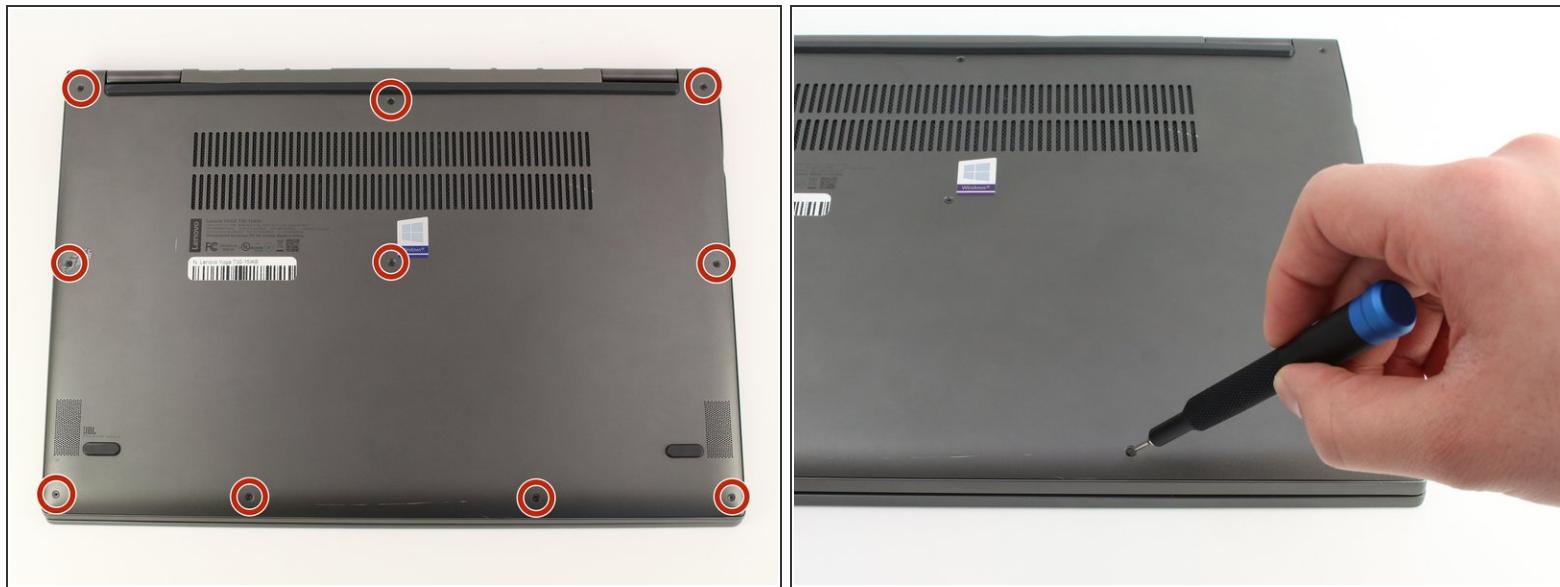

⚠ Turn off the computer and unplug the charger before going any further.

- Flip the laptop over so you can see the underside.
- Remove ten 7mm T5 Torx screws.

## Step 2

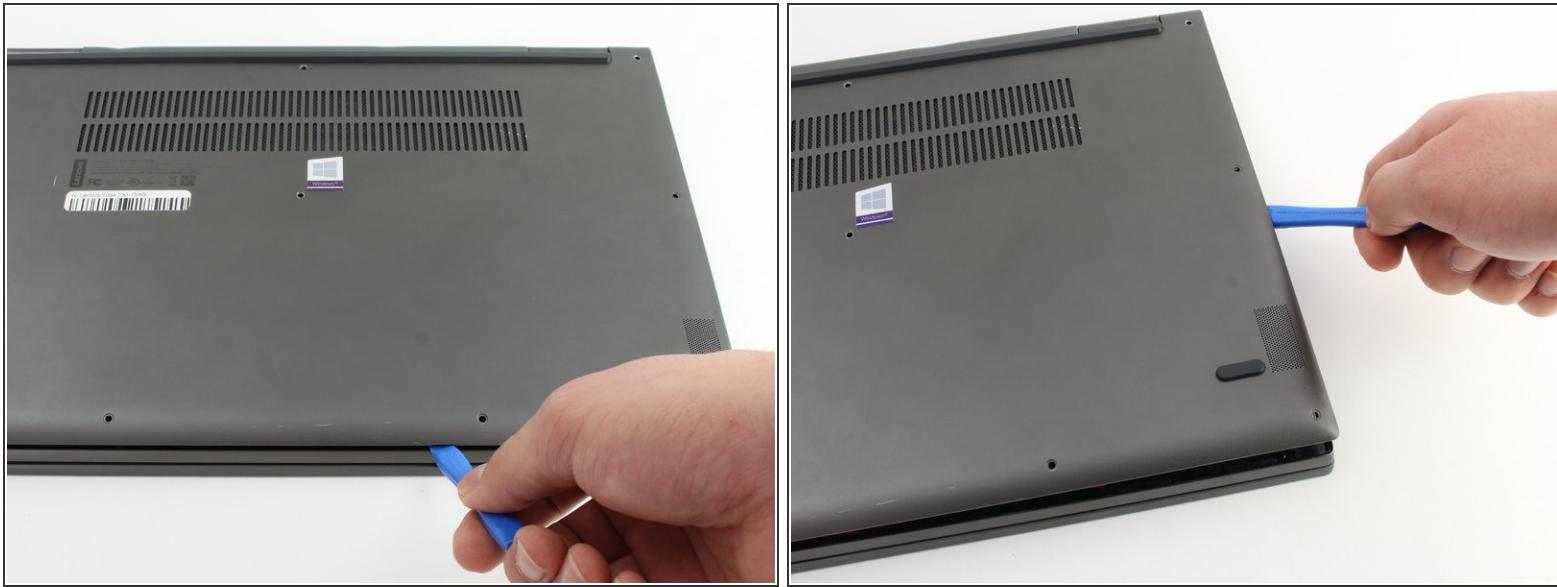

- Pry up the bottom cover with an opening tool.
- Start at the front edge of the cover and make your way along the sides.

## Step 3



- Pull the bottom cover up and away from the back hinges.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-06 08:54:45 AM (MST).

