



Lenovo YOGA 730-15IKB Touchpad Replacement

This guide describes the steps required to replace the battery on a Lenovo YOGA 730-15IKB.

Written By: Daniel Rodriguez Salinas



INTRODUCTION

Follow this guide to replace the touchpad in your Lenovo YOGA 730-15IKB. The touchpad is located in front the keyboard and allows you to move the pointer onscreen. If your touchpad is not clicking or not responding to your touch, it might be faulty and in need of replacement.




TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Bottom Cover



 Turn off the computer and unplug the charger before going any further.

- Flip the laptop over so you can see the underside.
- Remove ten 7mm T5 Torx screws.

Step 2




- Pry up the bottom cover with an opening tool.
 - Start at the front edge of the cover and make your way along the sides.

Step 3



- Pull the bottom cover up and away from the back hinges.


Step 4 — Battery

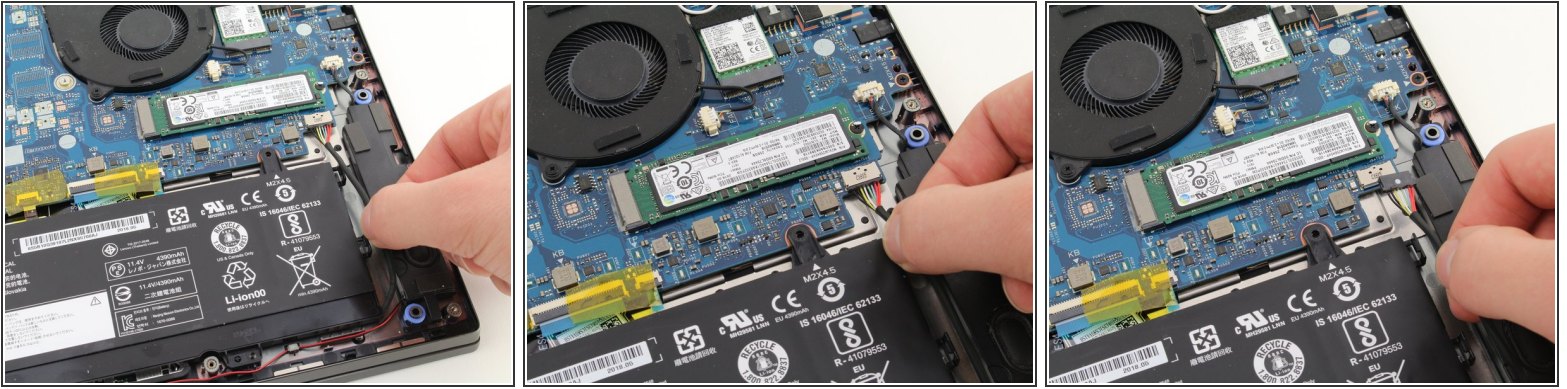

- Remove the battery connector by tugging and wiggling the battery wire using your fingers or a pair of tweezers.


⚠ Unplug the cable gently as the eight wires on the connector are very small and delicate.

Step 5

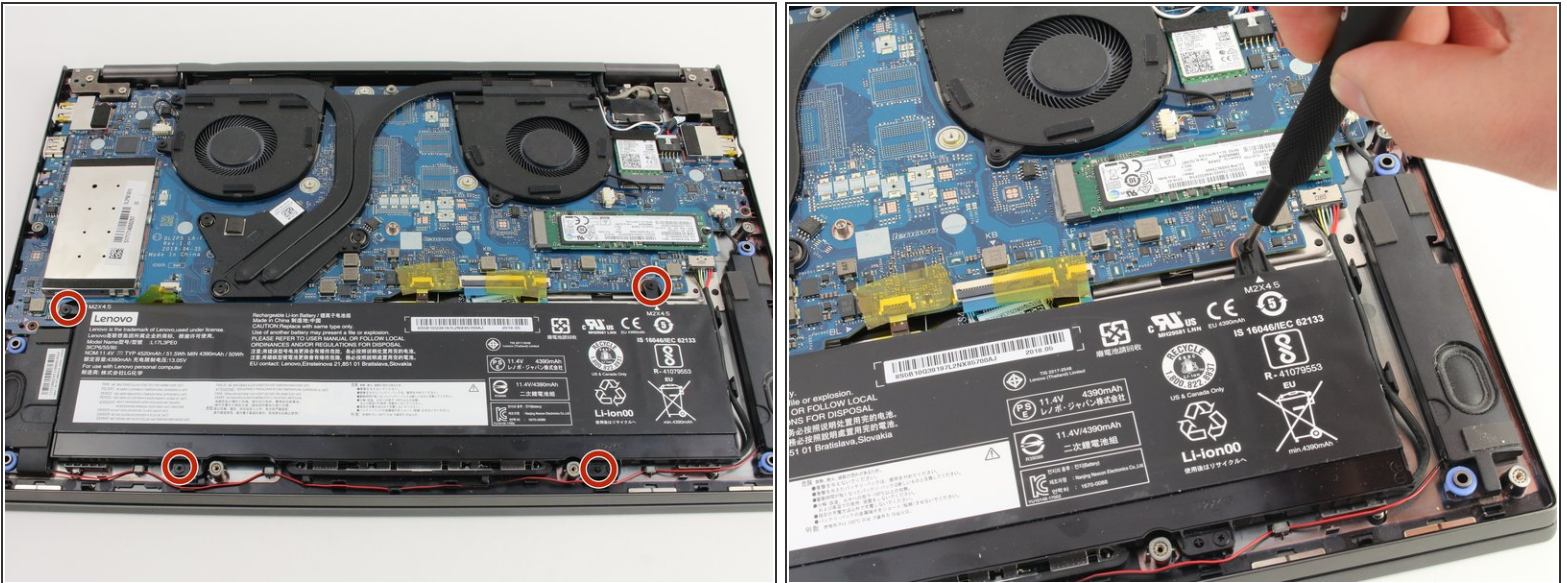

- Remove four 4mm Phillips #1 screws.




Step 6

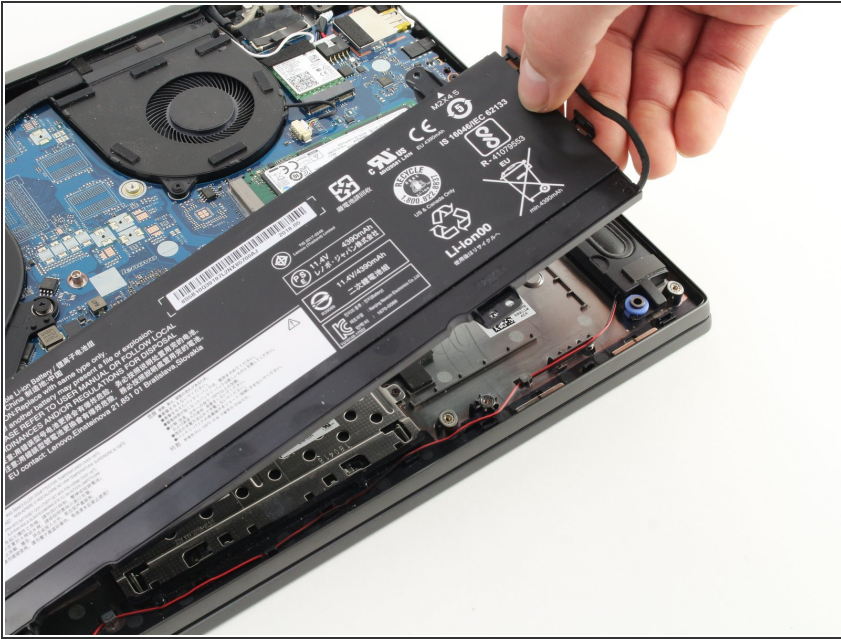

- Pull the battery up and out of the chassis.

⚠ Handle the battery carefully. Touching the terminal may cause electric shock. Puncturing the battery may cause it to catch fire.


Step 7 — Touchpad

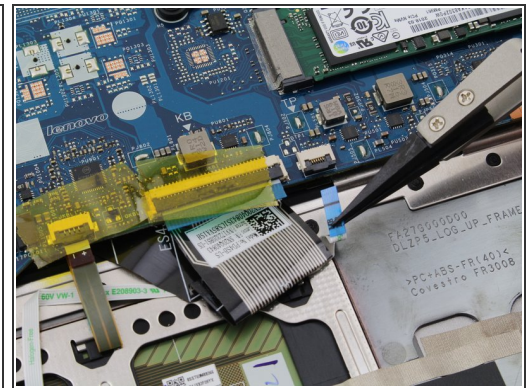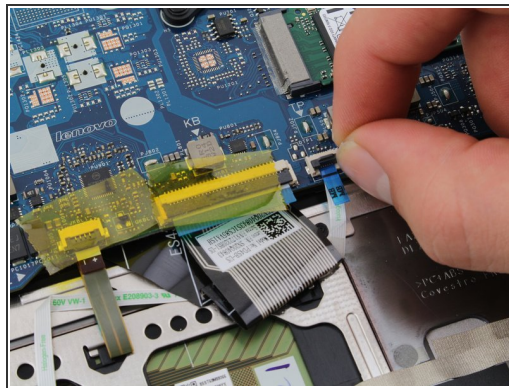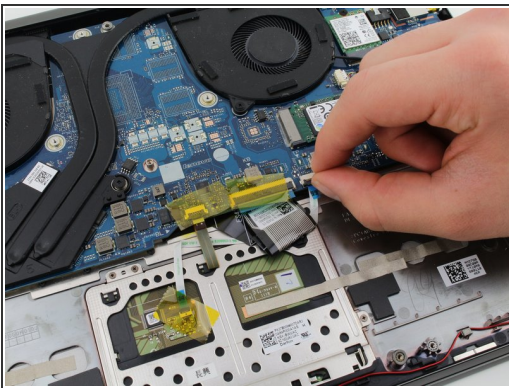

i The touchpad is connected by a ribbon cable to the front edge of the motherboard.



- Pull up on the black tab on the touchpad cable connector.
- The ribbon cable should easily pull out of the connector.

Step 8

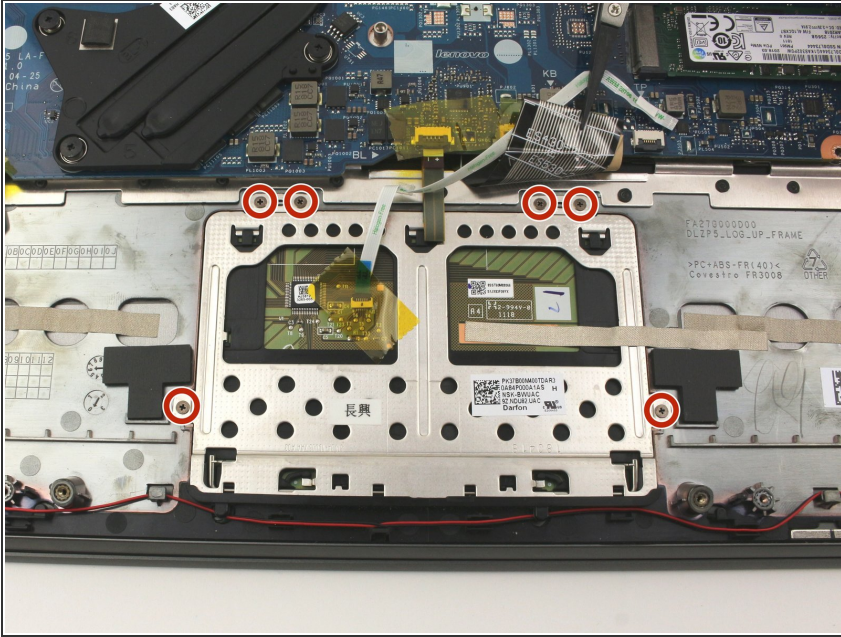

- Remove six 2mm Phillips #000 screws.
- ⓘ Some of these screws may be hidden under other ribbon cables.

Step 9

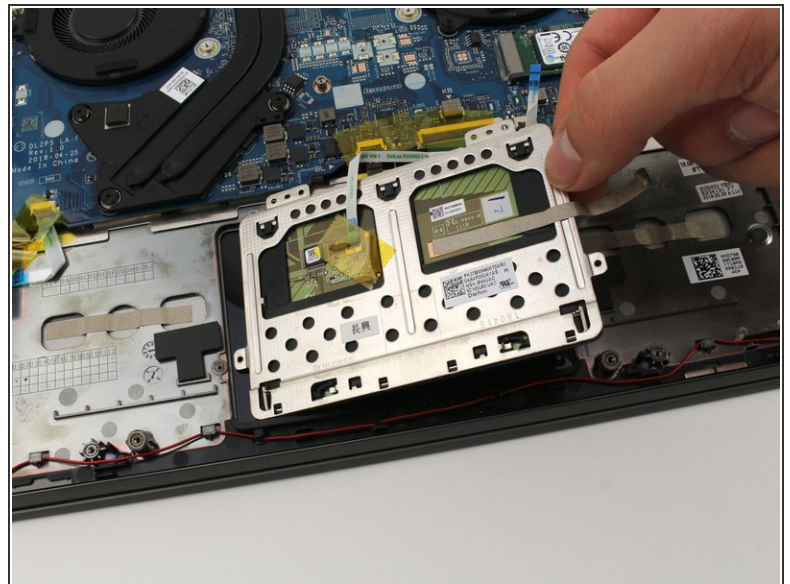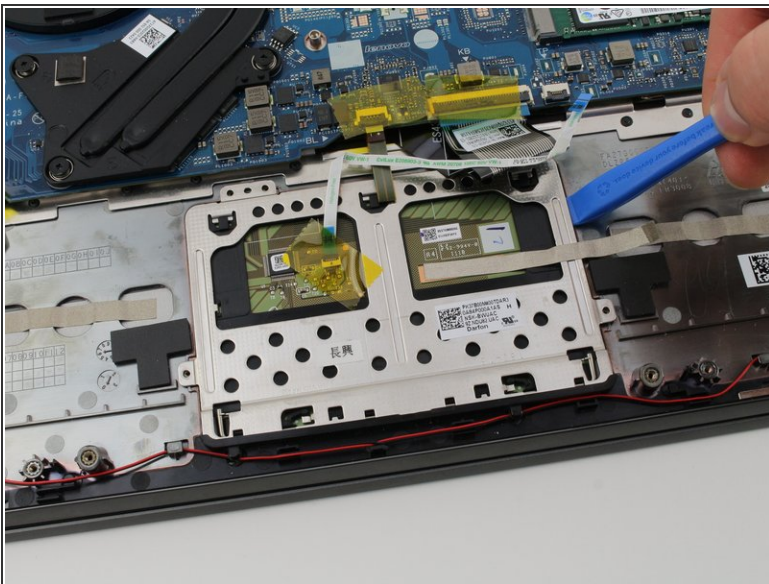

- Pull up on the top edge of the touchpad near the motherboard. Lift the touchpad up and out of the chassis.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-06 08:56:22 AM (MST).

