




# Lenovo Yoga 2 13" Hinge Bracket Fix

If the hinge of your Lenovo Yoga 2-13 is too stiff, the force required to open the lid might break the shell of your notebook. This guide shows you how to adjust the stiffness *\*before\** anything breaks.

Written By: Sven Meier

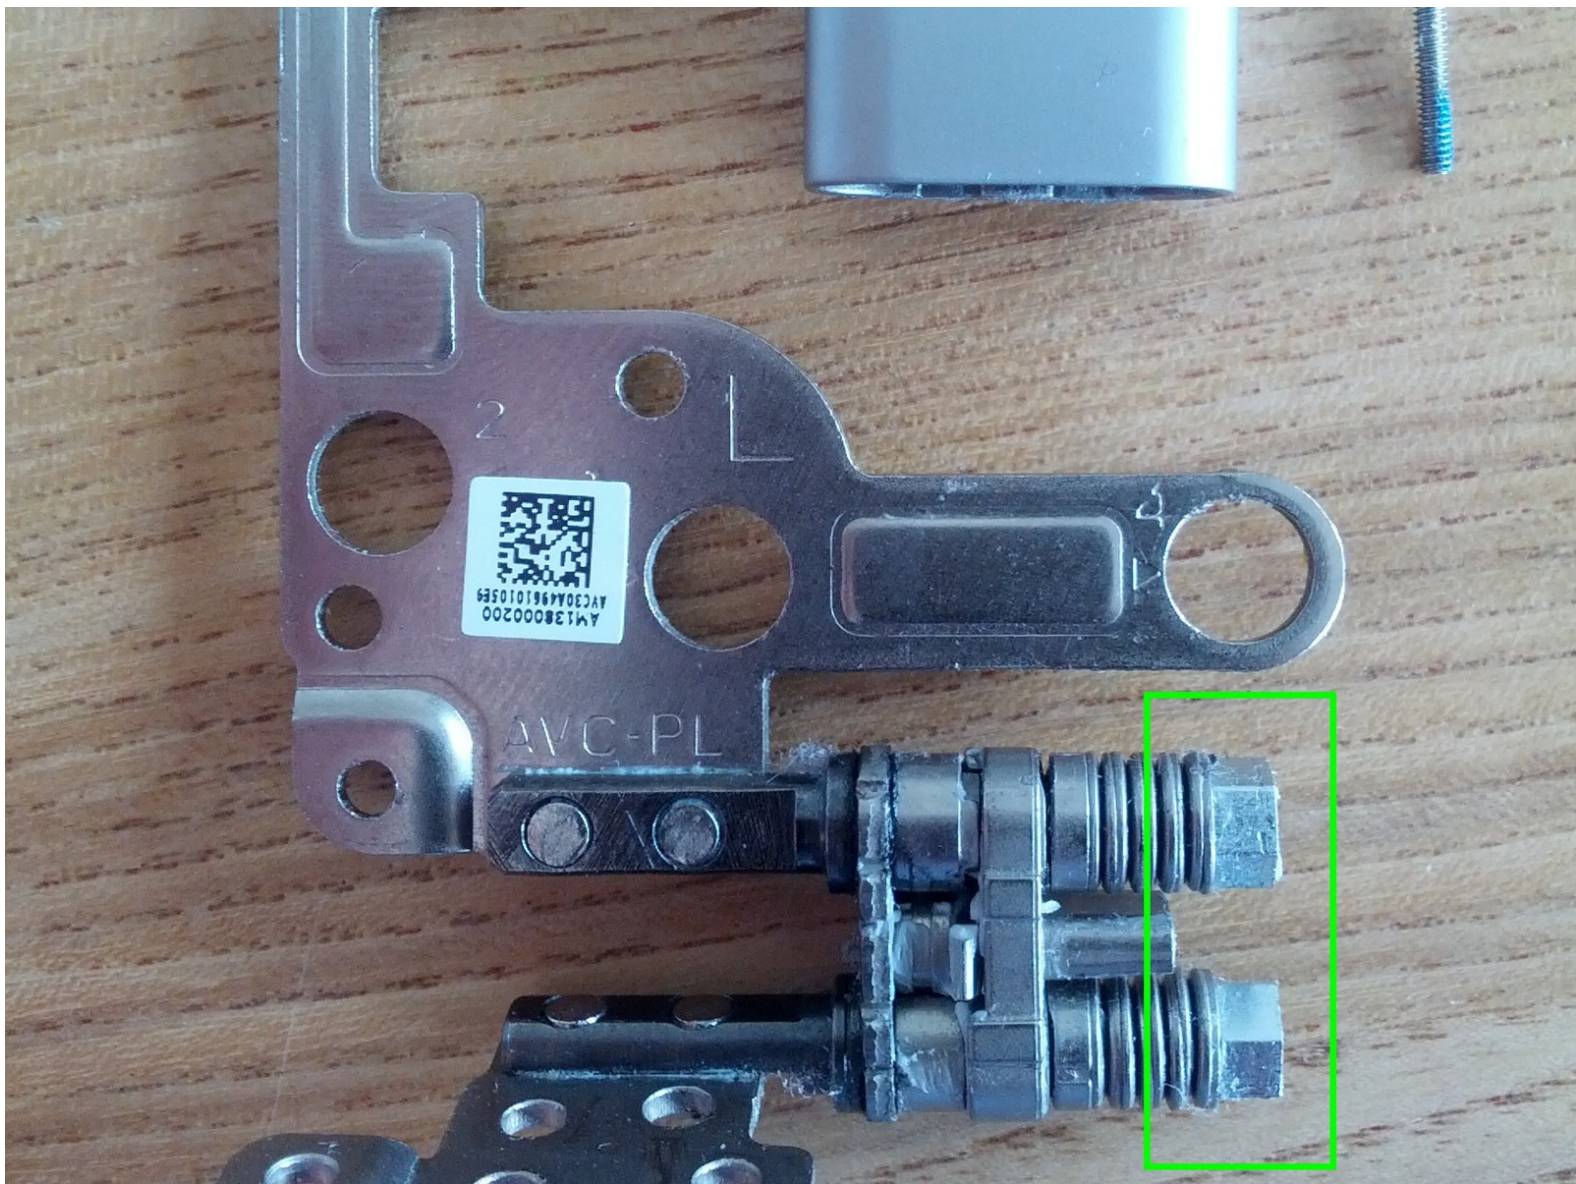

## INTRODUCTION


We have to open the back panel to be able to loosen the hinges, and then remove the display to completely remove them.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [Magnetic Project Mat](#) (1)
  - [1 x Phillips 0 Screwdriver](#) (1)
-

## Step 1 — Back Panel

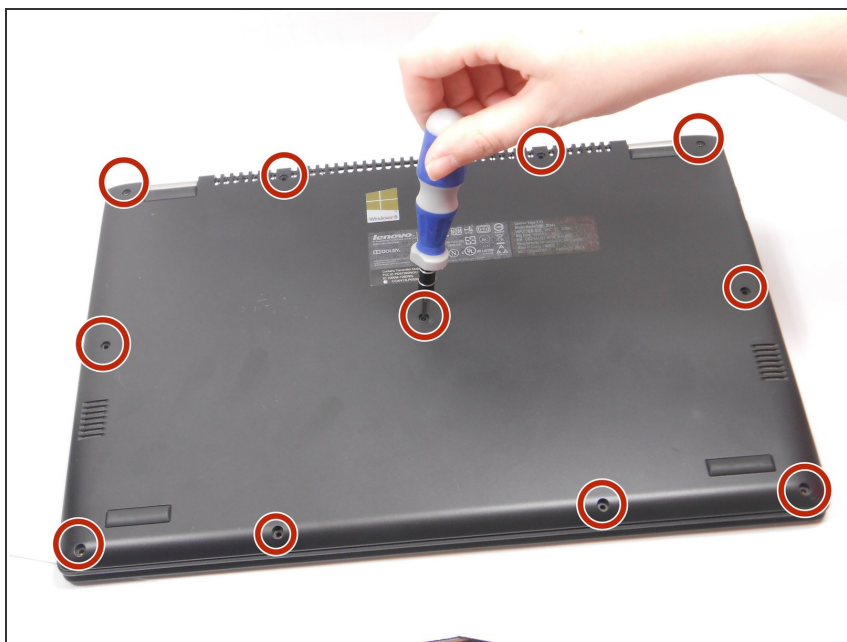

- With a T5 Torx screwdriver, remove eleven 6.35 mm screws from the back of the laptop.


## Step 2



- Carefully separate back panel from the laptop.




### Step 3 — Loosening the connectors

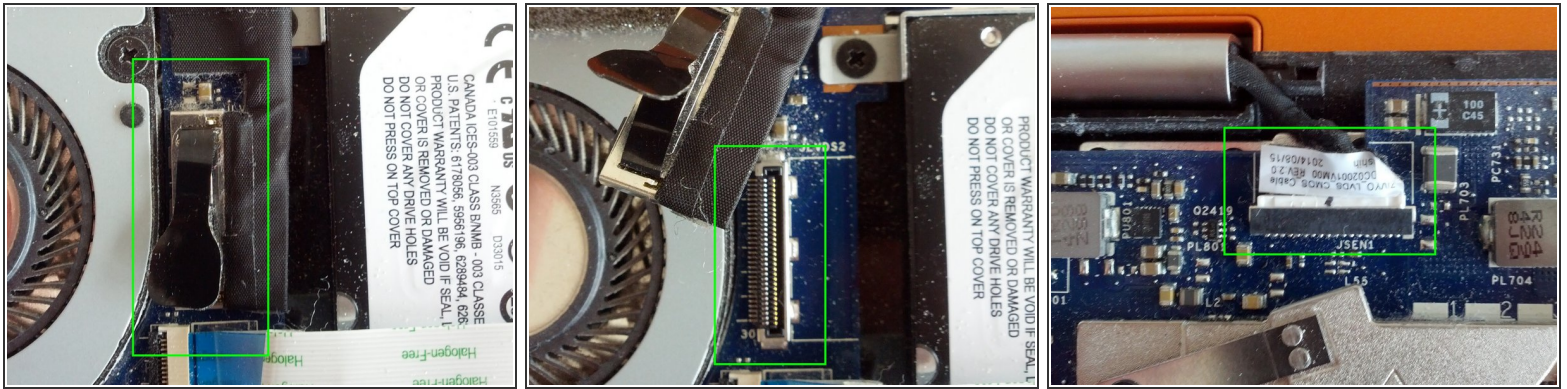


- The video connector can be pulled out with the attached noose. Pull gently possibly supported by lifting the connector with a screwdriver.
- The other connector can be pushed out on the sides with the help of a screwdriver.

### Step 4 — Detach hinge.

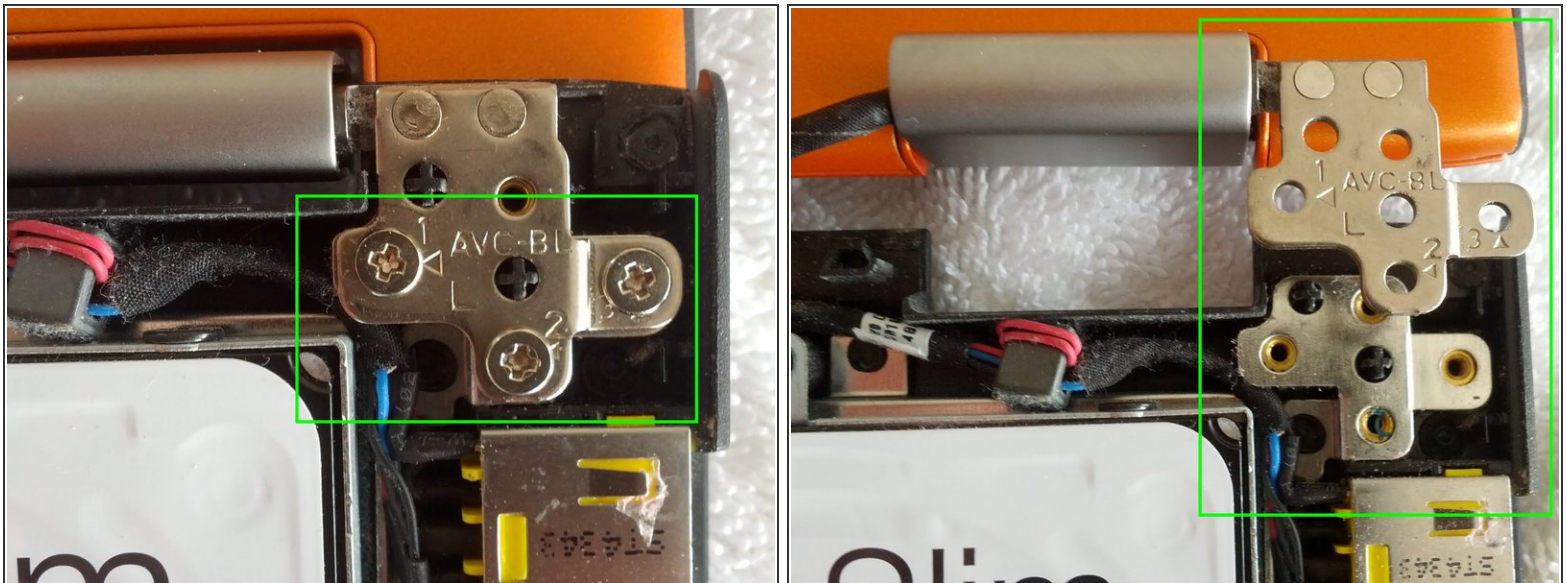


- Unscrew three screws to detach the hinge from the body.

## Step 5 — Lay open the display.

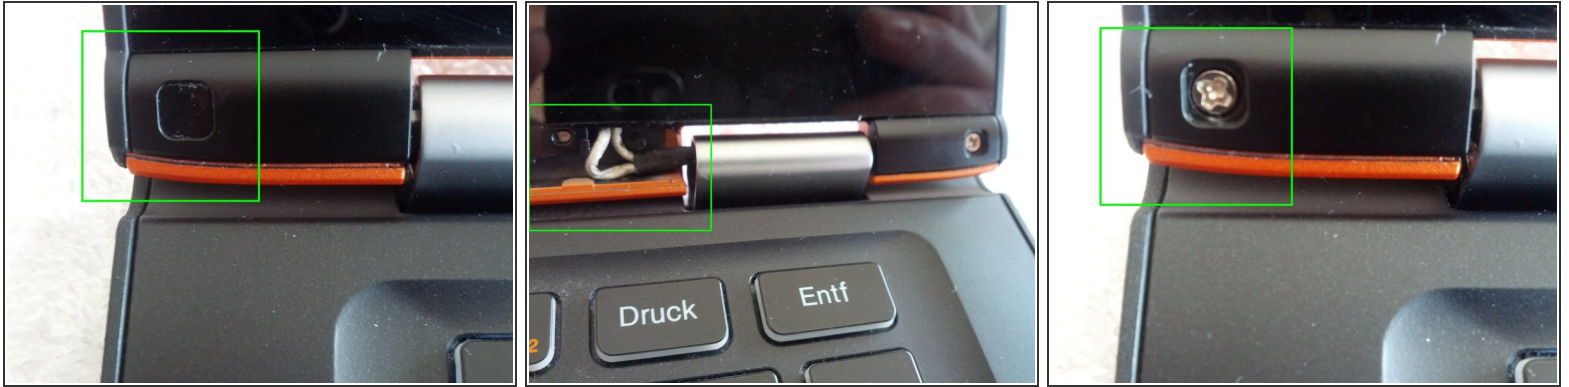

- Peel out a small plastic cover, pull out center cover and unscrew left and right cover below the display.



## Step 6 — Removing the display.

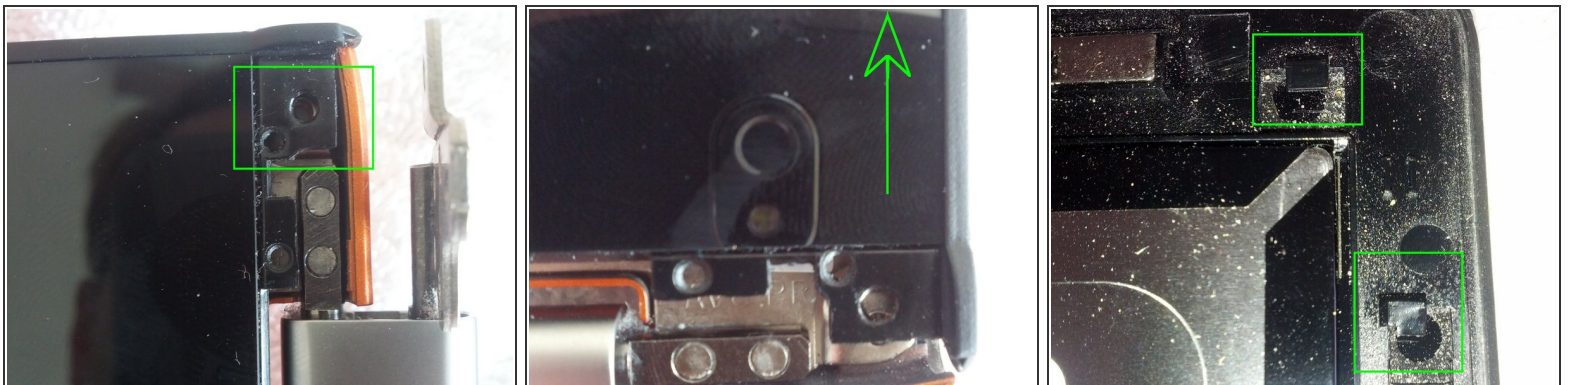

- Once the two screws are loosened, the whole display can be shifted up - don't just pull it away.
- On reassembly, put the display and cover together slightly shifted, and then gently slide the display back into position.




## Step 7 — Free the hinge

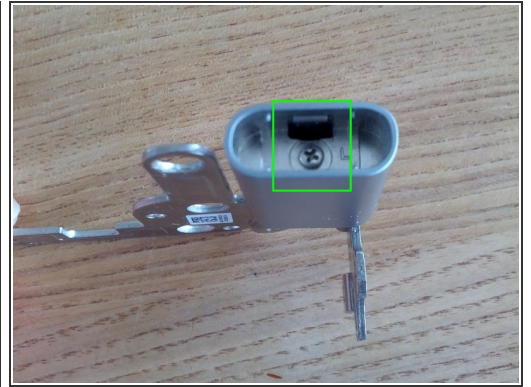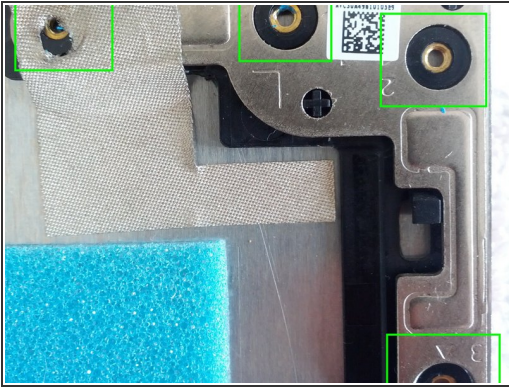

- The hinge is attached to the lid with four screws.
- A cable runs through each hinge, you can just pull out the small rubbery holder.
- Loosen the screw below it to open the hinge.

## Step 8 — Adjusting the hinge stiffness.

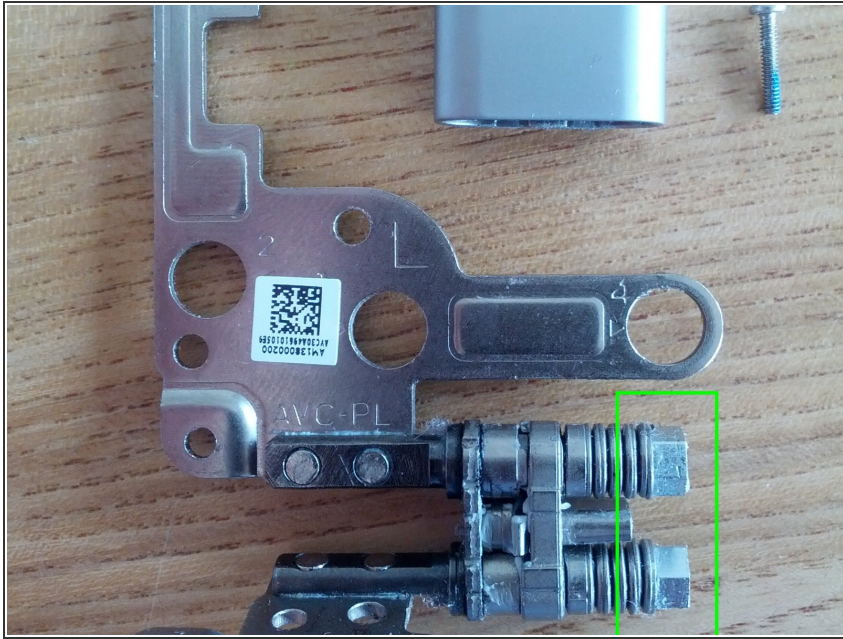

- The stiffness of the hinge can be adjusted by loosening the small nuts. One eighth of a turn might be enough - you will have to repeat adjusting them until the hinge has the right stiffness.

To reassemble your device, follow these instructions in reverse order.