



# Lenovo Yoga 3 11 Audio Jack/USB Port Assembly Replacement

Replace the audio jack/USB port assembly in your Lenovo Yoga 3 11.

Written By: Slade Fernandes



## INTRODUCTION

Are you having trouble hearing sound from your Lenovo Yoga 3 11 laptop when plugging in your headphones, or with your usb port when it does not recognize usb devices? If yes, then you have come to the right place! Your laptop's audio jack/USB port assembly may need to be replaced. This guide will provide you with the information on how to accomplish this replacement task.

## TOOLS:



- [Tweezers \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Lower Case




- Remove the eleven 6 mm T5 Torx screws securing the lower case.
- Gently lift the lower case up and away from the device.

## Step 2 — Audio Jack/USB Port Assembly

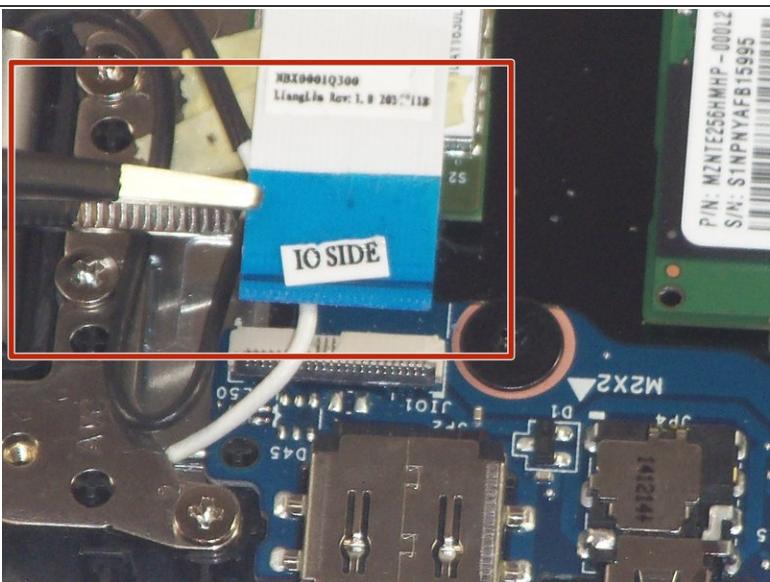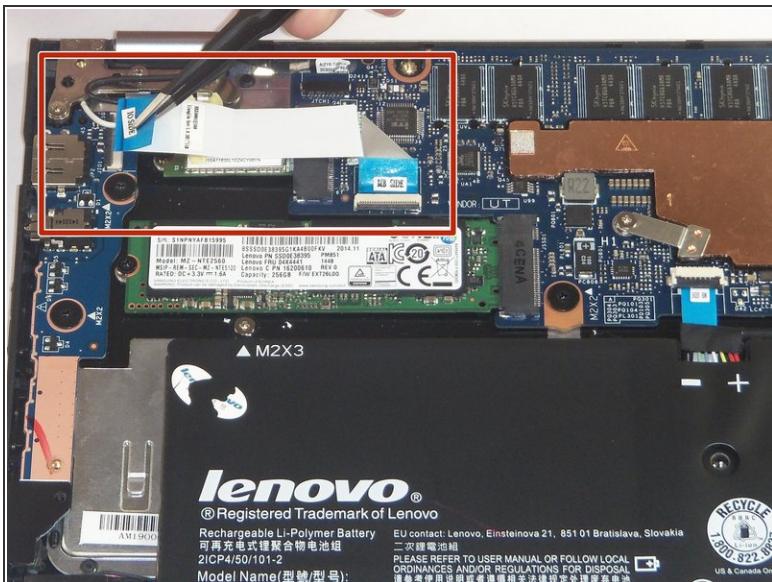

- Use a pair of tweezers to disconnect the [ZIF connector](#) securing the "IO Side" of the USB ribbon cable. Gently lift up the black tab on the connector and the ribbon cable should come free.

## Step 3

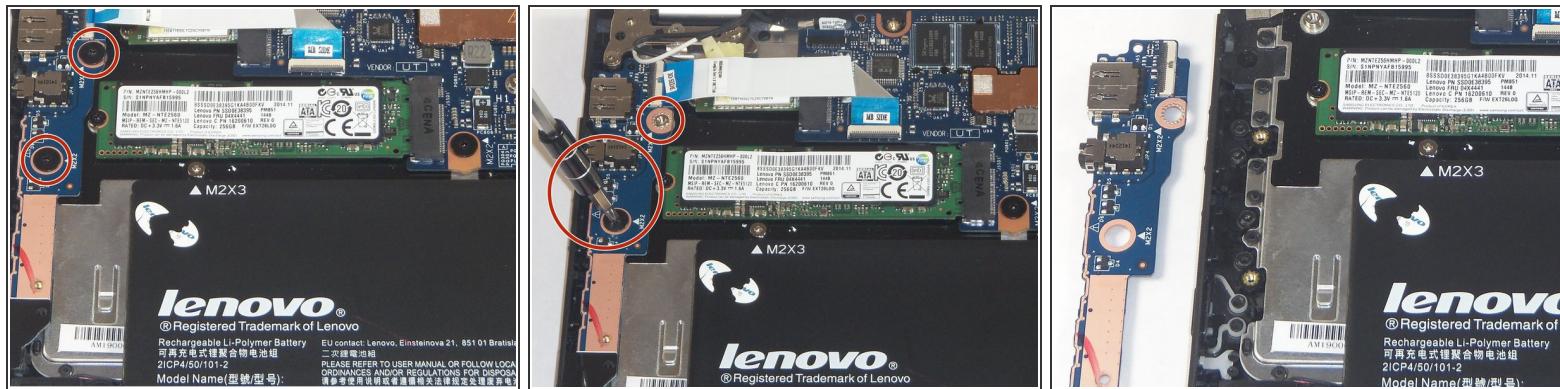

- Remove the two 2 mm Phillips #00 screws securing the audio jack/USB port assembly.
- Gently lift the audio jack/USB port assembly free of the device.

To reassemble your device, follow these instructions in reverse order.