


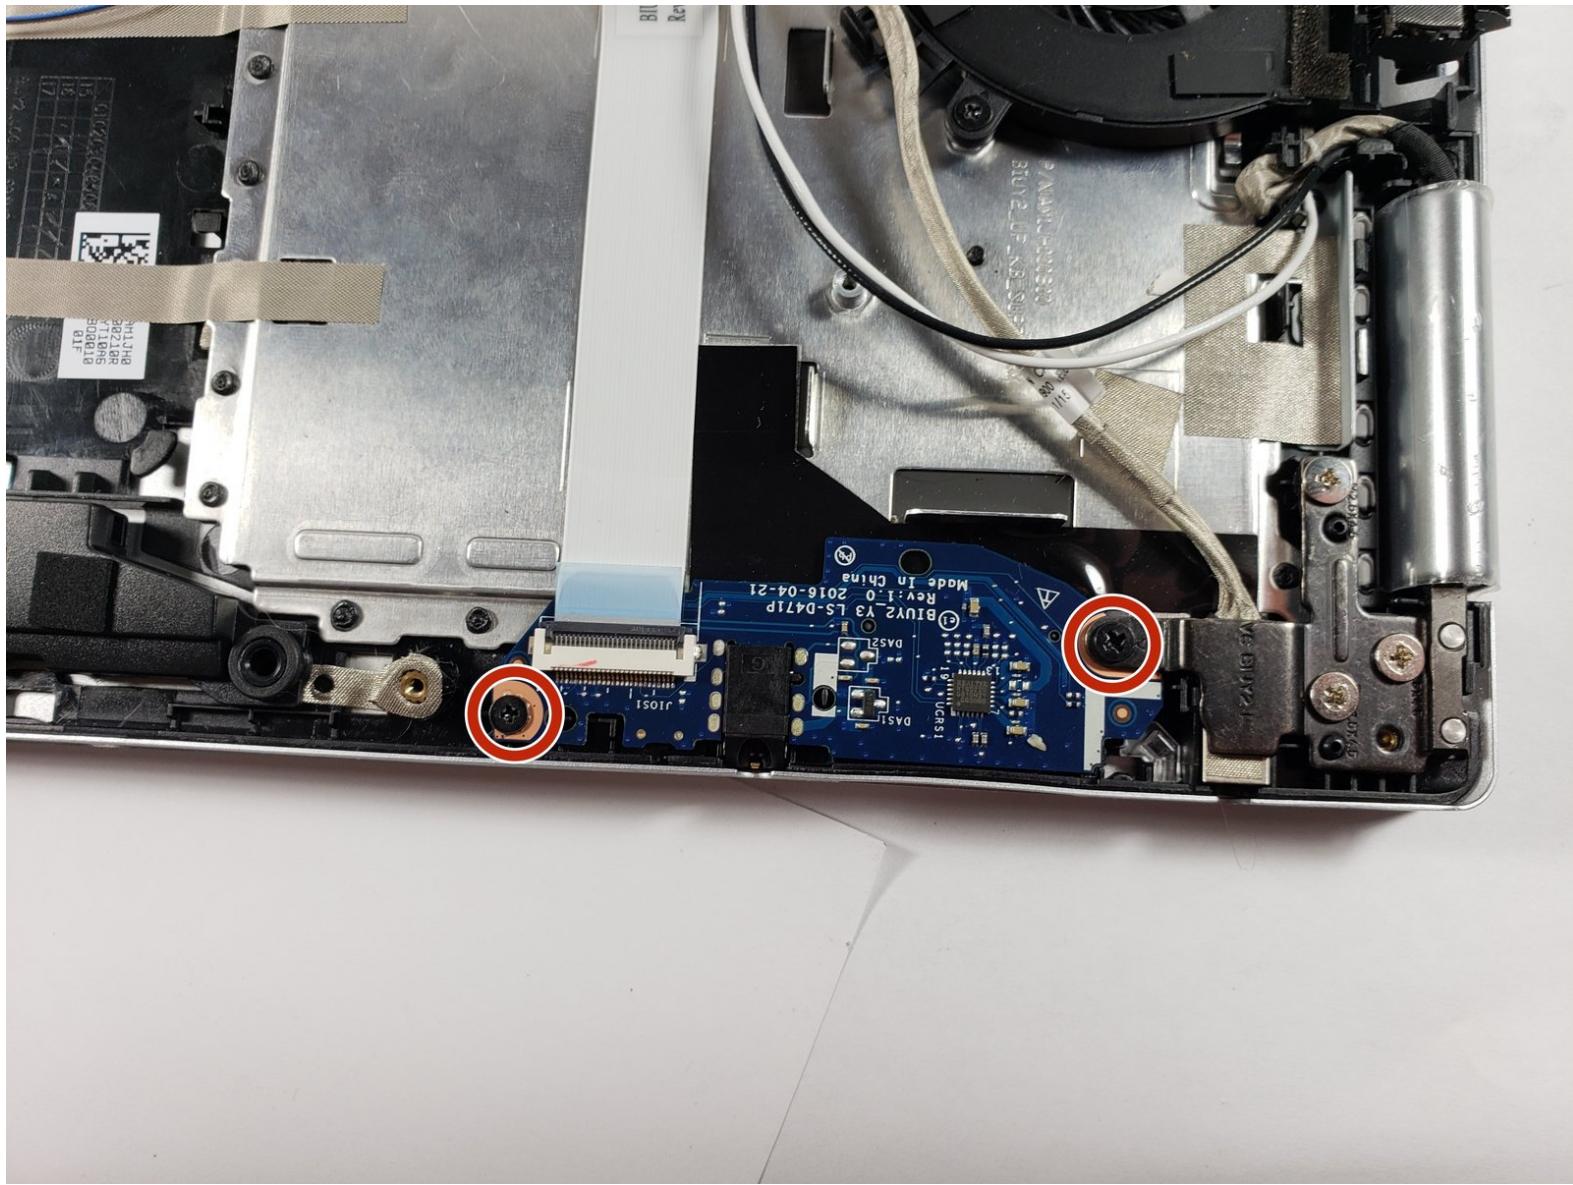

# Lenovo Yoga 710-14IKB Headphone Jack Replacement

In this guide we will remove the headphone jack from a Lenovo Yoga 710-14KB.

Written By: Evan Cruzen




## INTRODUCTION

This simple guide will show you how to remove the headphone jack circuitboard (which also has the SD card attached) from the Lenovo Yoga 710-14KB.

### TOOLS:

- [T4 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover

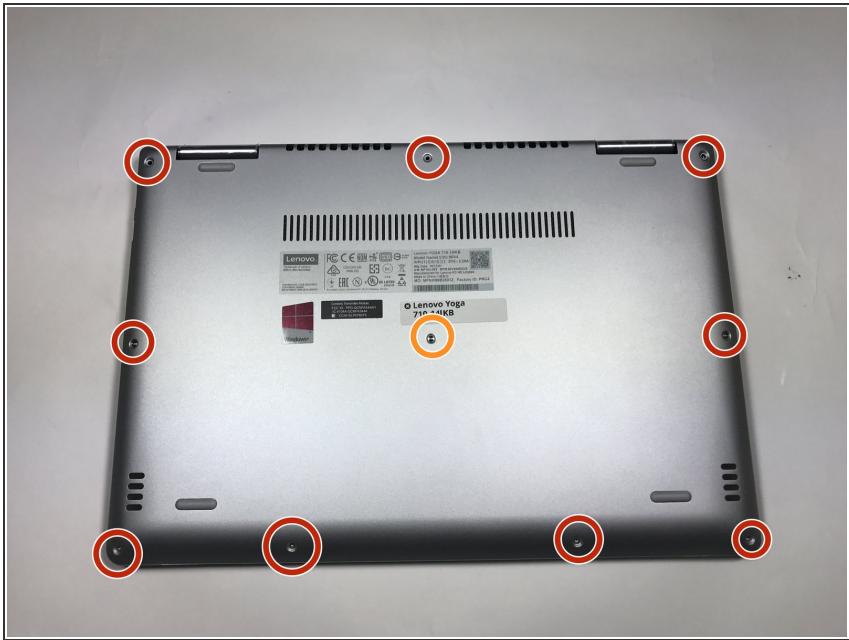

⚠ Ensure your device is completely OFF before starting this guide.

- Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.

- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.

☒ When, reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

## Step 2



- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.

ⓘ The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

## Step 3 — Battery



- Use a Phillips #00 screwdriver to remove the four 3 mm screws holding the battery in place.
- Be careful not to cross-thread the screws. Also, don't let the screws fall down into the laptop case.

## Step 4




- Lift the battery connector straight up away from the board using your fingers or an opening tool.

## Step 5



- Remove the battery.


## Step 6 — Headphone Jack

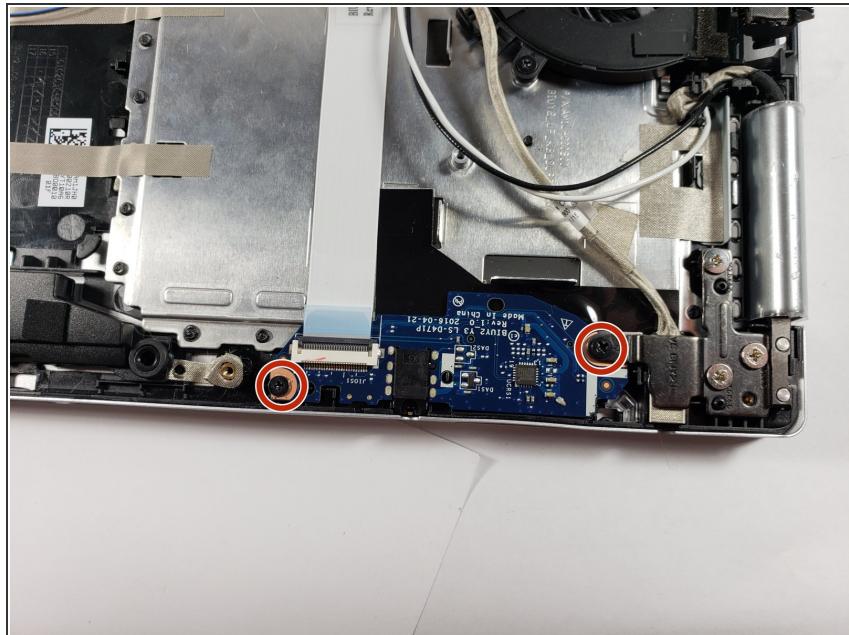

- Remove the two 3mm screws from the headphone jack using a PH00 screwdriver.

Make sure not to strip the screws as they can sometimes be hard to remove.



## Step 7

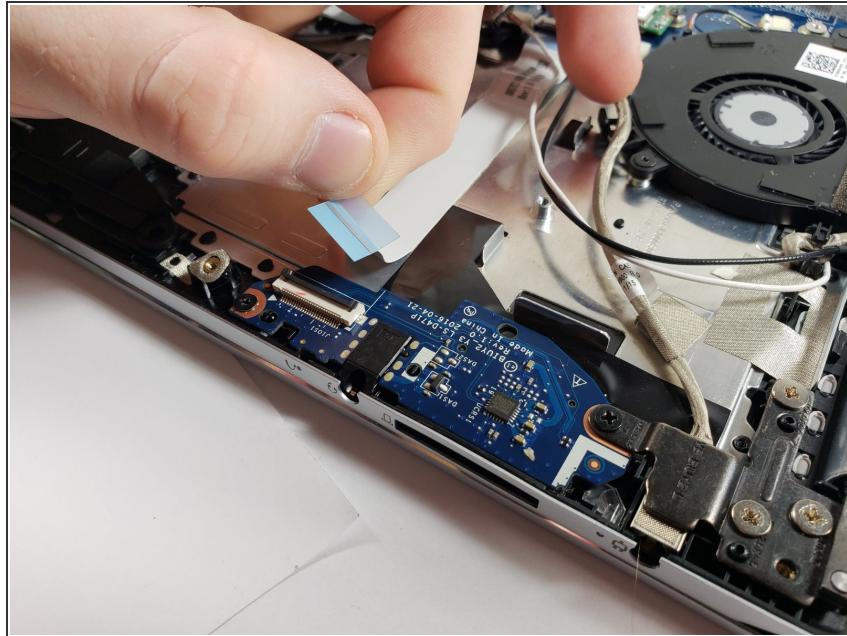

- Pop the black bar on the tip of the wire connected to the headphone jack circuitboard.
- Disconnect the wire.

**⚠** Be careful not to pull or yank the cable.

## Step 8

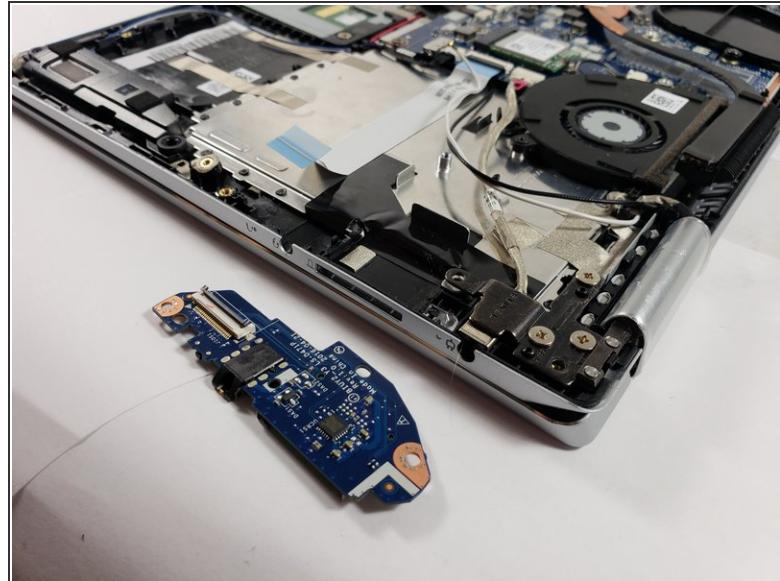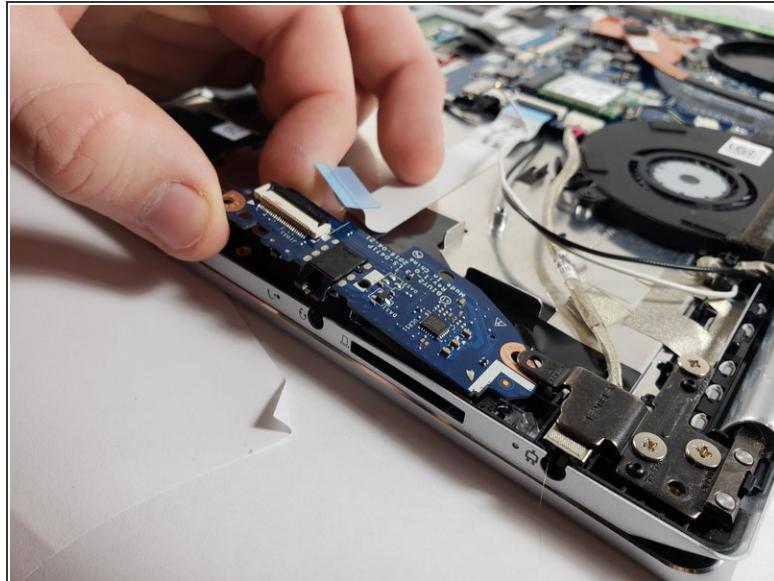

- Remove the headphone jack circuitboard.

To reassemble your device, follow these instructions in reverse order.