




Lenovo Yoga 710-14IKB Speaker Replacement

This guide shows how to remove the speaker in a Lenovo Yoga 710-14IKB.

Written By: Bailey Murphy

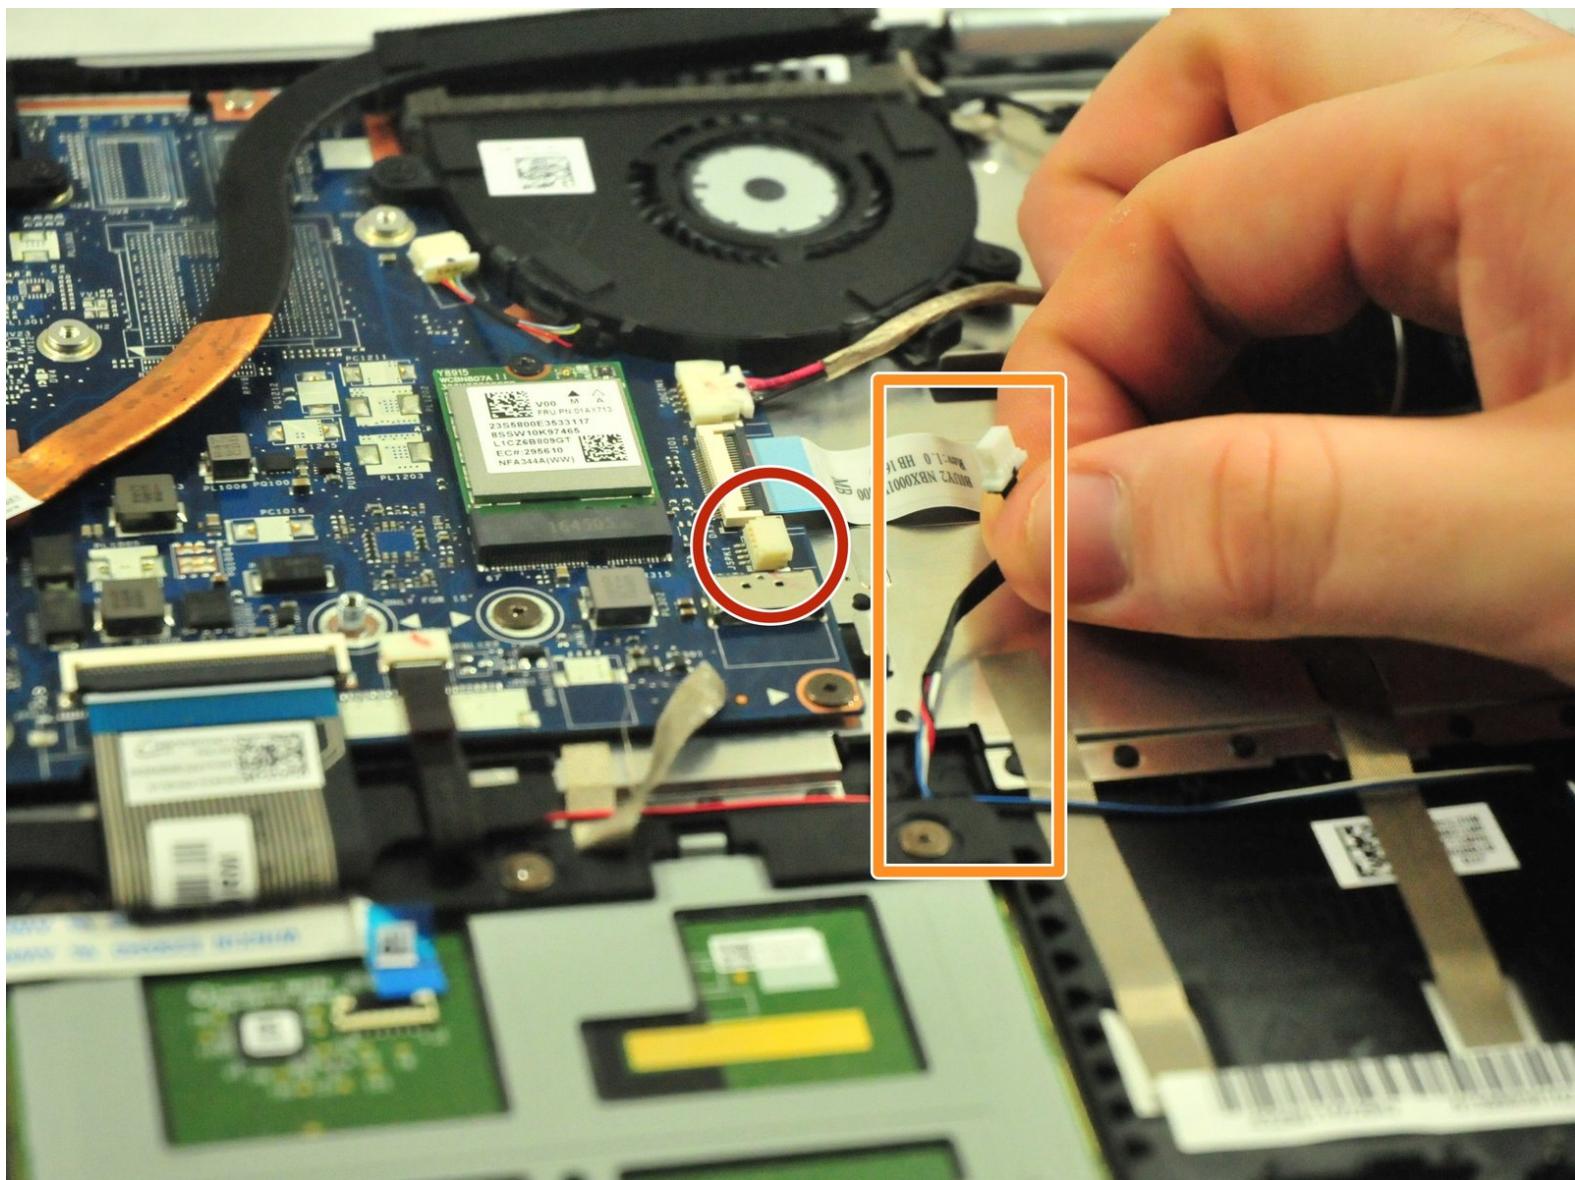


INTRODUCTION

This simple guide will show you how to remove the two speakers from a Lenovo Yoga 710-14KB.

TOOLS:

- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover

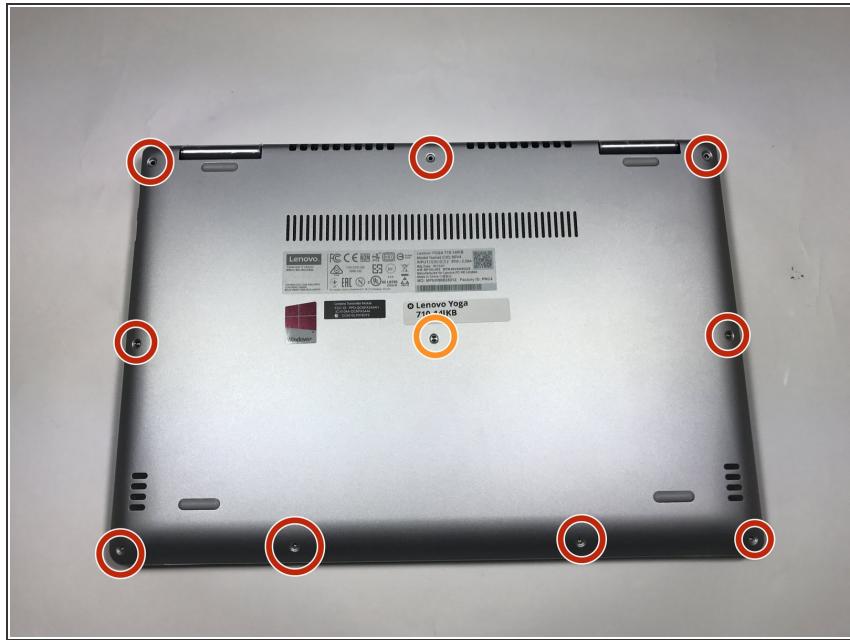

⚠ Ensure your device is completely OFF before starting this guide.

- Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.

- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.

💡 When, reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2



- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.

💡 The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

Step 3 — Battery



- Use a Phillips #00 screwdriver to remove the four 3 mm screws holding the battery in place.
- Be careful not to cross-thread the screws. Also, don't let the screws fall down into the laptop case.

Step 4




- Lift the battery connector straight up away from the board using your fingers or an opening tool.

Step 5




- Remove the battery.

Step 6 — Speaker

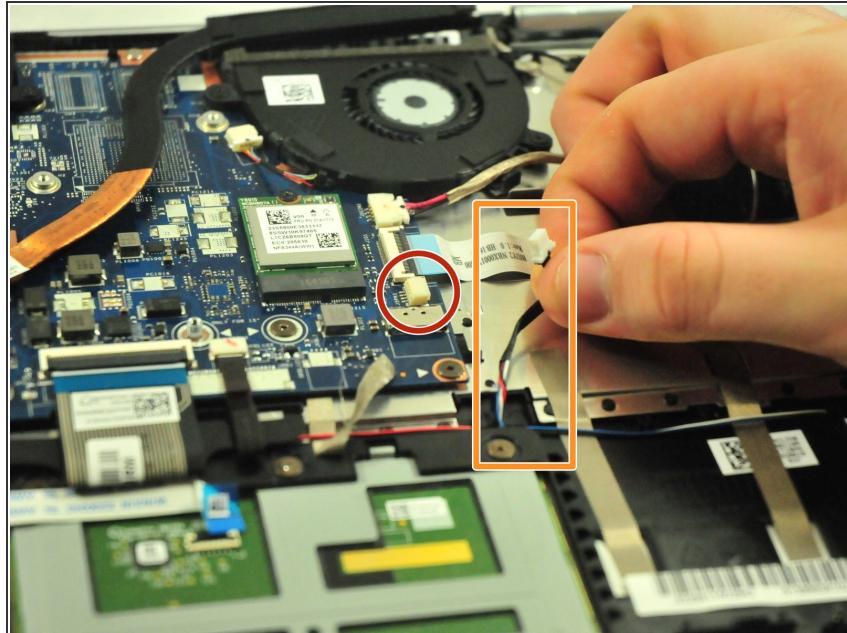

- Locate the speaker's plug and disconnect it.
- Follow the wires connected to the plug to locate the speakers. The left speaker will have red wires, and the right speaker will have blue wires.

Step 7

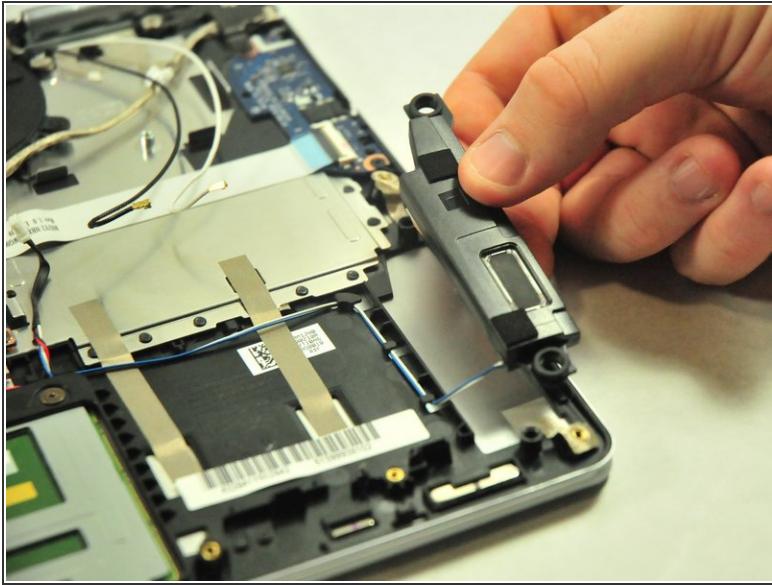

- Untangle the wires from the plastic hinges of the case to properly lift the speakers out.

To reassemble your device, follow these instructions in reverse order.